


## STARTER RELAY INSPECTION

ST01G-03

1. REMOVE RELAY BOX COVER
2. REMOVE STARTER RELAY

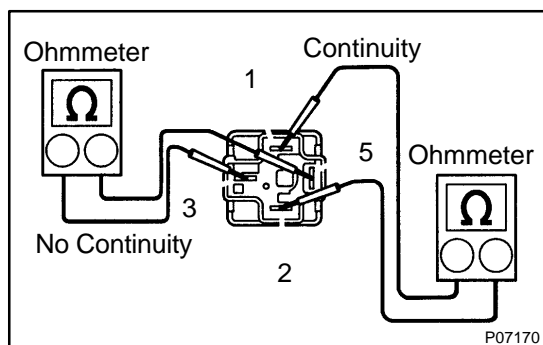

### 3. INSPECT STARTER RELAY


- (a) Inspect the relay continuity.

- (1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

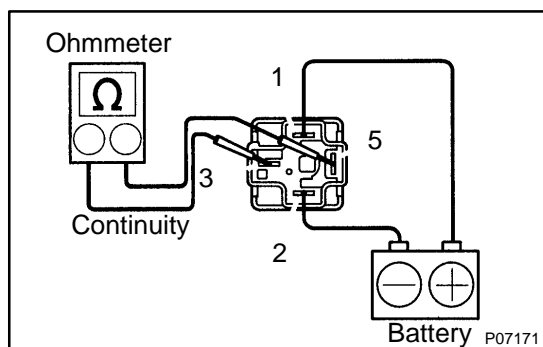

- (b) Inspect the relay operation.

- (1) Apply battery positive voltage across terminals 1 and 2.

- (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

### 4. REINSTALL STARTER RELAY

### 5. REINSTALL RELAY BOX COVER