


FUEL PUMP RELAY INSPECTION

SF0FV-02

1. REMOVE FUEL PUMP RELAY (Marking: FUEL PUMP)

LOCATION: In the engine compartment relay box.

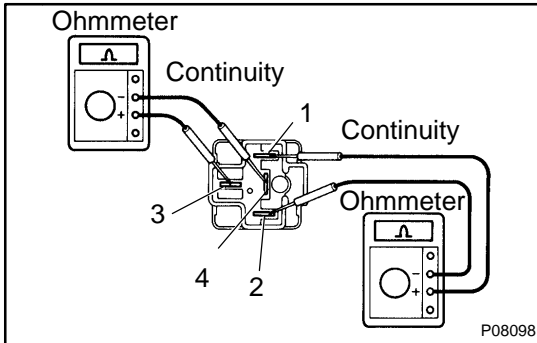


2. INSPECT FUEL PUMP RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is continuity between terminals 3 and 4.

If there is no continuity, replace the relay.

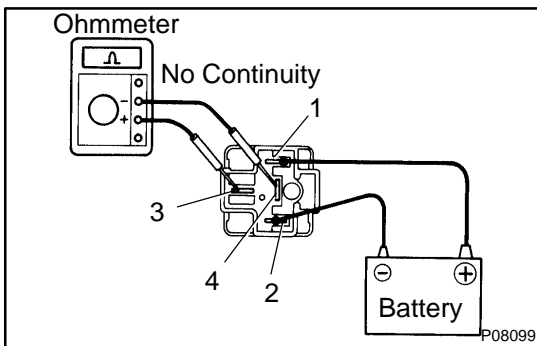

3. INSPECT FUEL PUMP RELAY OPERATION

- (a) Apply battery voltage across terminals 1 and 2.

- (b) Using an ohmmeter, check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

4. REINSTALL FUEL PUMP RELAY