


## INSPECTION

### 1. INSPECT FUEL LID OPENER SWITCH CONTINUITY

- (a) Check that there is continuity between terminals with the switch ON (Lever pulled).
- (b) Check that there is no continuity between terminals with the switch OFF (Lever free).

If continuity is not as specified, replace the switch assembly.

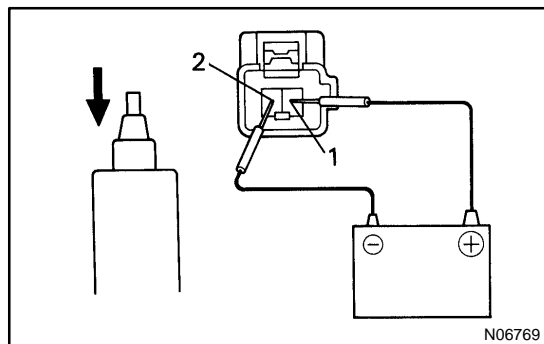

### 2. INSPECT FUEL LID OPENER SOLENOID OPERATION

- (a) Apply battery positive voltage to the terminals.
  - (b) Check that the solenoid operates in the open direction.
- If operation is not as specified, replace the solenoid.