

DIFFERENTIAL MOUNTING CUSHION REPLACEMENT

SA0Y3-01


1. REMOVE DIFFERENTIAL

(See page [SA-63](#))

2. REMOVE DIFFERENTIAL MOUNTING CUSHION


Using SST, remove the differential mounting cushion.

SST 09316-12010, 09570-24010

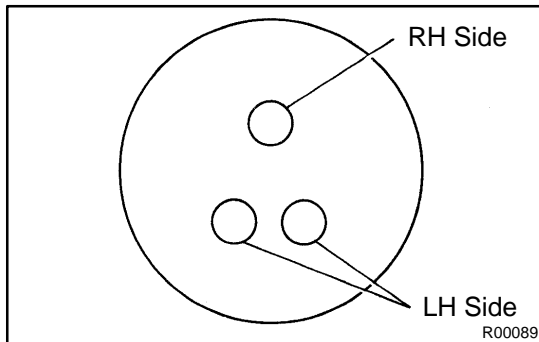

NOTICE:

- When driving out the mounting cushion, be careful not to touch the suspension member with the SST.
- Align the SST straight so that the bolt of the SST is parallel with the center line of the mounting cushion.
- When installing the bolts to the LH and RH differential mounting cushions, make sure that the bolts are passed through the correct holes in the SST, as shown in the illustration.

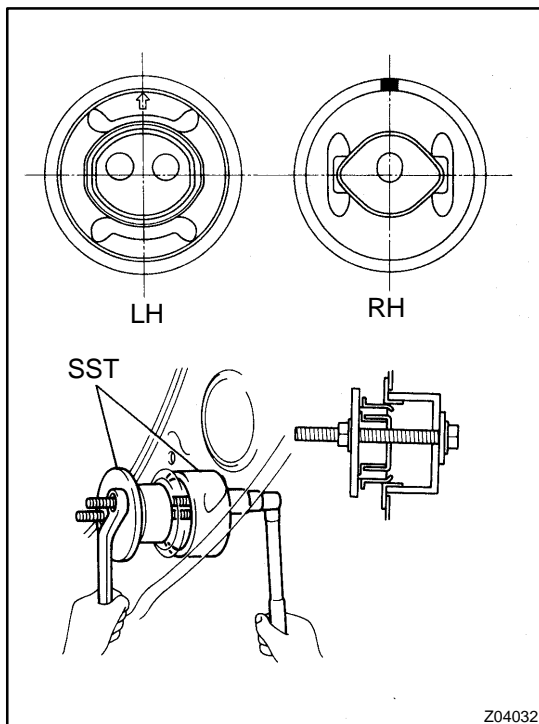

3. INSTALL DIFFERENTIAL MOUNTING CUSHION

Using SST, install the cushion so that the marks are positioned, as shown in the illustration.

SST 09570-24010

NOTICE:

- Do not make a mistake with LH and RH sides or top and bottom.
- Set the SST after temporarily installing the differential mounting cushion into the member so as not to be installed at an angle.
- To confirm that the differential mounting cushion is aligned straight in relation to the member, check that the SST is fully in contact with all of the cushion.

4. INSTALL DIFFERENTIAL

(See page [SA-81](#))