

## INSTALLATION

### 1. CLEAN BODY MOUNTING SURFACE

- Using a heat light, heat the body mounting surface to 40 – 60 °C (104 – 140 °F).

#### NOTICE:

**Do not heat body excessively.**

- Remove the adhesive tape from the body.
- Wipe off stains with cleaner.

### 2. If reusing moulding:


#### CLEAN MOULDING

- Using a heat light, heat the moulding to 20 – 30 °C (68 – 86 °F).

#### NOTICE:

**Do not heat moulding excessively.**

- Remove the adhesive tape from the moulding.
- Wipe off stains with cleaner.
- Apply a new adhesive tape to the moulding as shown in the illustration.

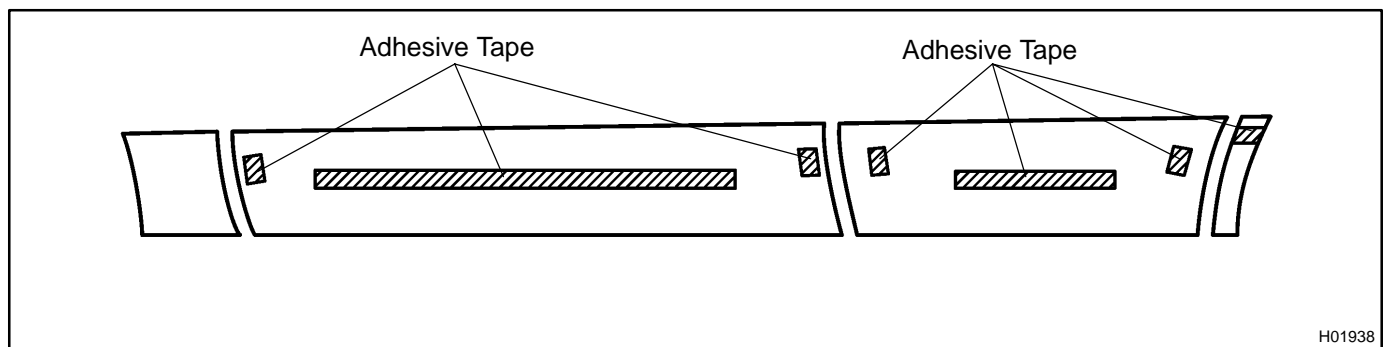

H01938

### 3. INSTALL MOULDING

- Using a heat light, heat the body and moulding.

**Body: 40 – 60 °C (104 – 140 °F)**

**Moulding: 20 – 30 °C (68 – 86 °F)**

#### NOTICE:

**Do not heat moulding excessively.**

- Lift the moulding release sheet from the face of moulding.

#### NOTICE:

**When the moulding release sheet is removed, make sure that no dirt or dust can get onto the uncoated area.**

- Align the bosses with their corresponding holes in the body, and press firmly on the moulding.

#### NOTICE:

**Do not apply excessive force onto the moulding, but steady pressure with your thumbs.**