


REASSEMBLY

1. INSTALL SPRING BUMPER TO SUSPENSION SUPPORT

HINT:

Match the bolt of the suspension support with the cut-out part of the spring bumper.

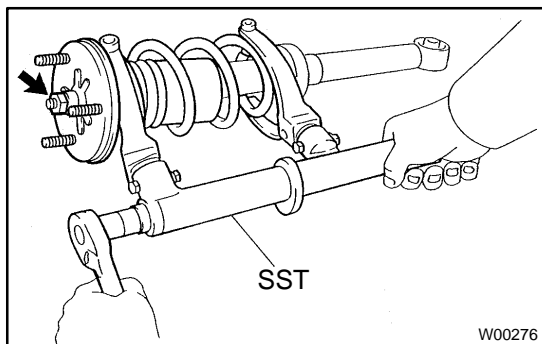

2. INSTALL COIL SPRING TO SHOCK ABSORBER

(a) Using SST, compress the coil spring.

SST 09727-30021

NOTICE:

Do not use an impact wrench. It will damage the SST.

(b) Install the coil spring to the shock absorber.


HINT:

Fit the lower end of the coil spring into the recess of the spring seat of the shock absorber.

3. INSTALL SUSPENSION SUPPORT

(a) Install the suspension support sub-assembly to the rod.

(b) Temporarily tighten a new lock nut.

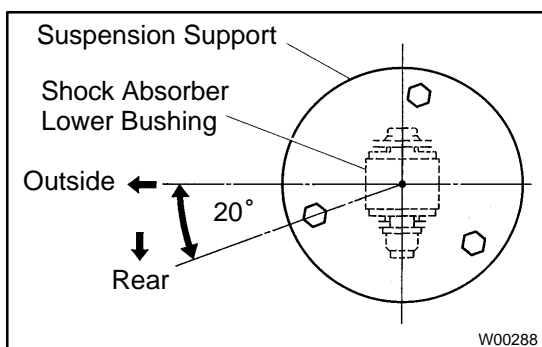

(c) Align the suspension support with the shock absorber lower bolt, as shown.

4. REMOVE SST

HINT:

After removing the SST, recheck the direction of the suspension support.