
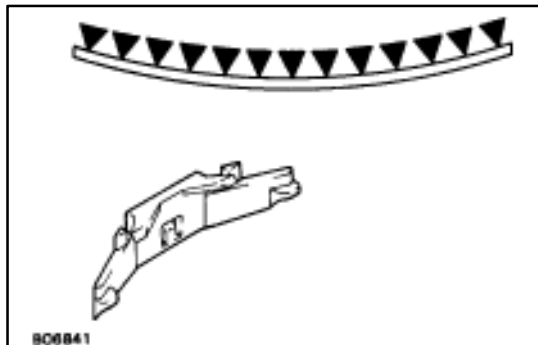


MOULDING

Windshield Moulding

COMPONENTS

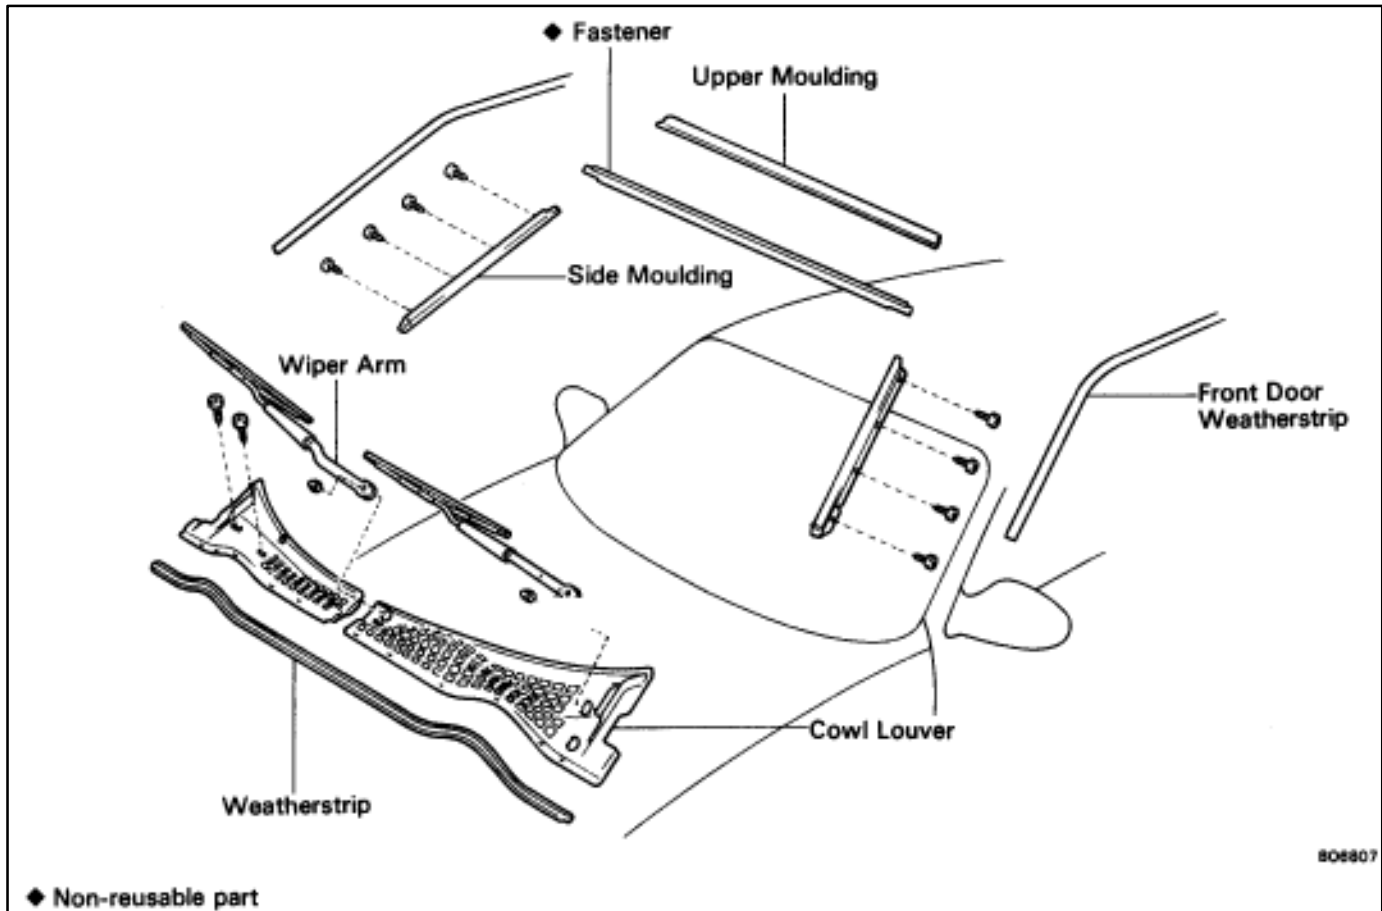


REMOVAL OF WINDSHIELD MOULDING


Location of clips is as shown. Carefully apply adhesive tape to protect the body.

1. REMOVE FOLLOWING PARTS:

- (a) Wiper arm
- (b) Cowl louver

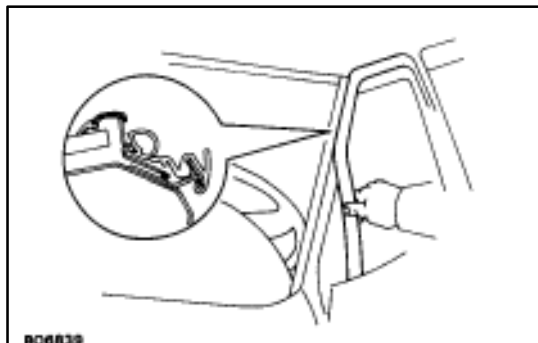


2. REMOVE FRONT DOOR WEATHERSTRIP

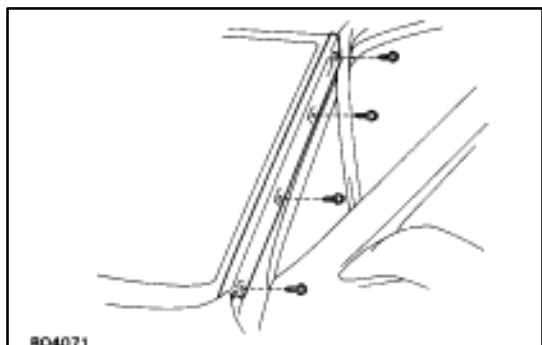

3. REMOVE SIDE MOULDING

Remove four screws and the side moulding.

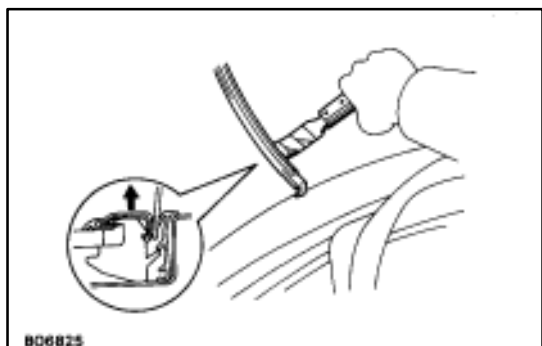

4. REMOVE UPPER MOULDING

(a) Insert the top of scraper between the body and moulding.

HINT: Tape the scraper tip before use.

(b) Pry up the scraper to loosen the moulding from the claws of the clips and the retainer.

(c) Remove the moulding.

REPLACEMENT OF FASTENER

REPLACE FASTENER

(a) Remove the damaged fastener.



(b) Cut off the old adhesive around the fastener installation area.

HINT: Be careful not to damage the body.

(c) Clean the installation area.

(d) Install the new fastener onto the body.

HINT: Before installing, peel off the backing paper at the fastener. Install the fastener with the atmospheric temperature between 20–40°C (68–104°F).

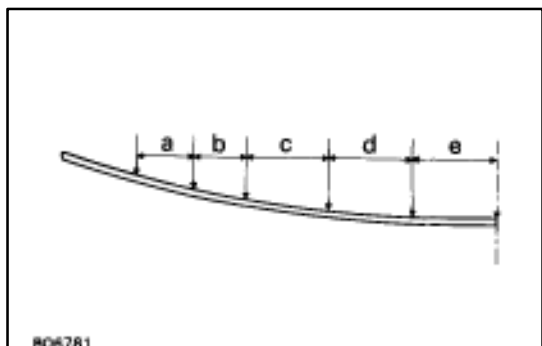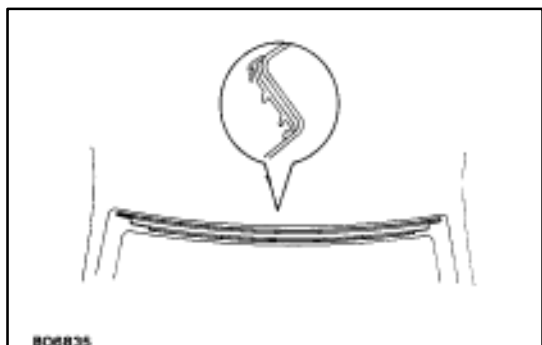

INSTALLATION OF WINDSHIELD MOULDING

(See page [BO-97](#))

1. ADJUST CLIPS INTO UPPER MOULDING

Install the clip to the appropriate place on the moulding.

a: 75.7 mm (2.98 in.)

b: 71.0 mm (2.80 in.)

c: 109.0 mm (4.29 in.)

d: 110.0 mm (4.33 in.)


e: 110.0 mm (4.33 in.)


2. APPLY ADHESIVE AT NEW CLIP INSTALLATION AREA

(a) When the clip being engaged with the moulding is removed, cut out the old adhesive around the clip installation area.

NOTICE: Do not damage the body and fastener.

(b) Apply adhesive at the clip installation area so water does not collect there.

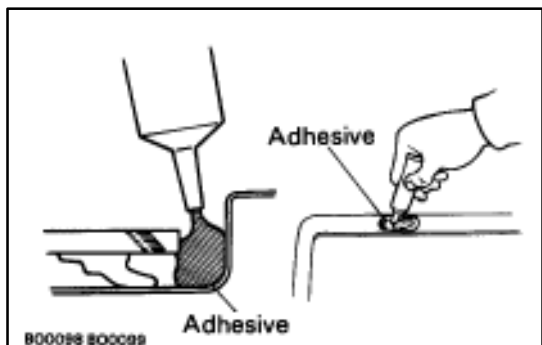


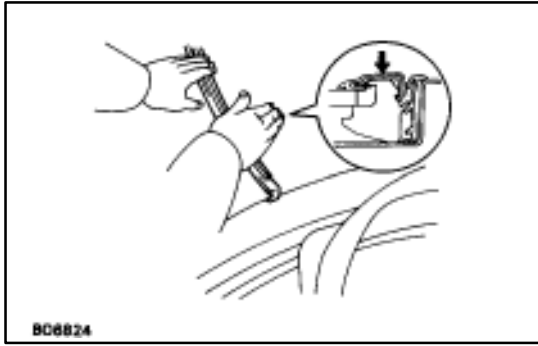**3. INSTALL UPPER MOULDING**

- (a) Place the moulding onto the body.
- (b) Tap the moulding with your hand to fasten the clips at the glass edge. At the same time, install the fastener by tapping the clips by hand.
- (c) Press the side edge of the moulding to install it.

4. INSTALL SIDE MOULDING

Install four screws and the moulding.

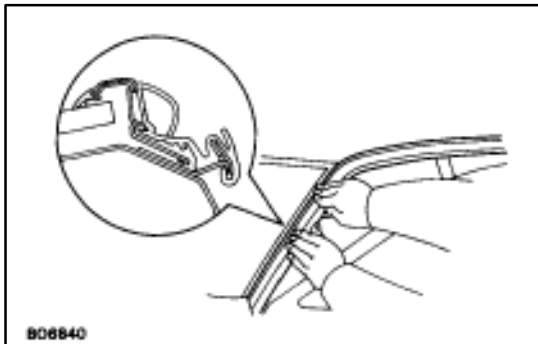**5. INSTALL FRONT DOOR WEATHERSTRIP****6. INSTALL FOLLOWING PARTS:**

- (a) Cowl louver
- (b) Wiper arms