


INSTALLATION

1. ADJUST CLIPS INTO UPPER MOULDING

Install the clip to the appropriate place on the moulding.

- a: 75.7 mm (2.98 in.)
- b: 71.0 mm (2.80 in.)
- c: 109.0 mm (4.29 in.)
- d: 110.0 mm (4.33 in.)
- e: 110.0 mm (4.33 in.)

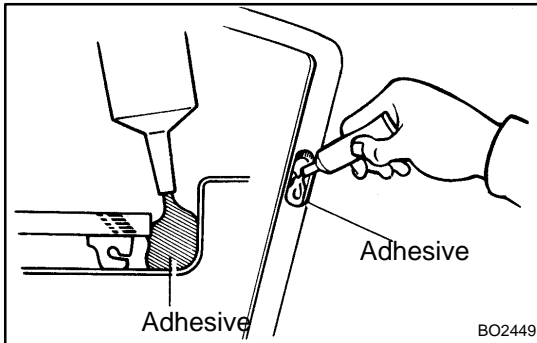


2. APPLY ADHESIVE AT NEW CLIP INSTALLATION AREA

- (a) When the clip engaged with the moulding is removed, cut out the oil adhesive around the clip installation area.

NOTICE:


Do not damage the body and fastener.

- (b) Apply adhesive at the clip installation area so water does not collect there.

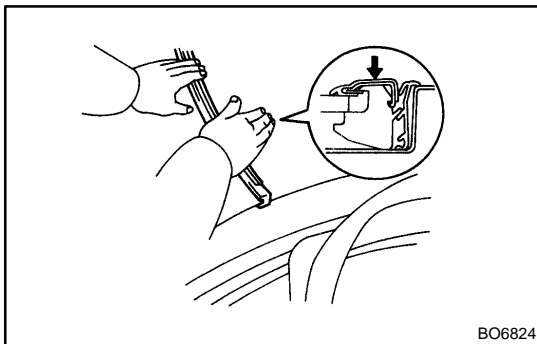

3. INSTALL UPPER MOULDING

- (a) Position the moulding onto the body.
- (b) Tap the moulding with your hand to fasten the clips at the glass edge. At the same time, install the fastener by tapping the clips by hand.
- (c) Press the side edge of the moulding to install it.

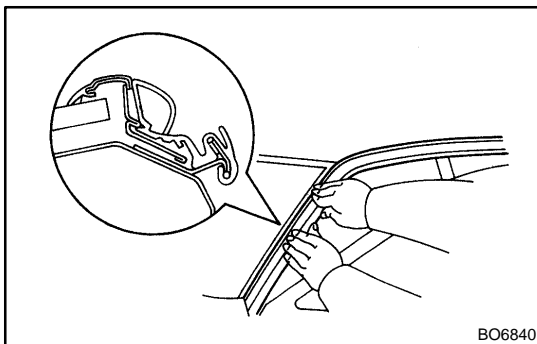

4. INSTALL THESE PARTS:

- (a) Side moulding
- (b) Front door weatherstrip
- (c) Cowl louver
- (d) Wiper arms