


REASSEMBLY

1. INSTALL INSULATOR TO SUSPENSION SUPPORT

HINT:

Match the bolt of the suspension support with the cut-out part of the insulator.

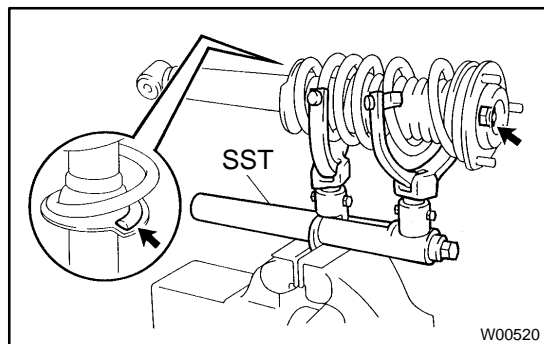

2. INSTALL COIL SPRING TO SHOCK ABSORBER

- (a) Using SST, compress the coil spring.

SST 09727-30021


NOTICE:

Do not use an impact wrench. It will damage the SST.

- (b) Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring seat of the shock absorber.

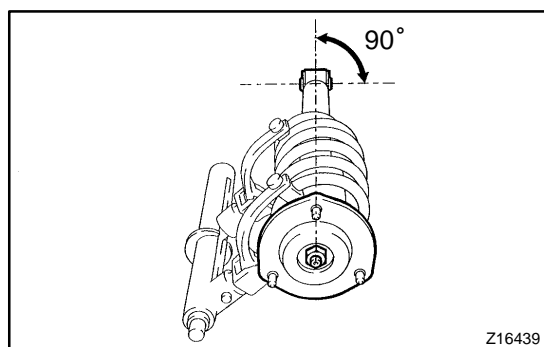

3. INSTALL SUSPENSION SUPPORT

- (a) Install the suspension support to the rod.

- (b) Temporarily tighten a new nut.

- (c) Turn the suspension support so that one of the bolts on the suspension support faces the same direction, as shown in the illustration.

HINT:

Align the bolt so that a line drawn between the rod and the bolt would be 90° to the direction of the lower bushing.

- (d) Remove the SST.

SST 09727-30021

HINT:

After removing the SST, recheck the direction of the suspension support.