


REASSEMBLY

1. INSTALL SUSPENSION SUPPORT AND COIL SPRING

- Install the spring bumper to the suspension support.
- Install the insulator to the suspension support.

HINT:

Match the bolt of the suspension support with the cut-off part of the insulator.

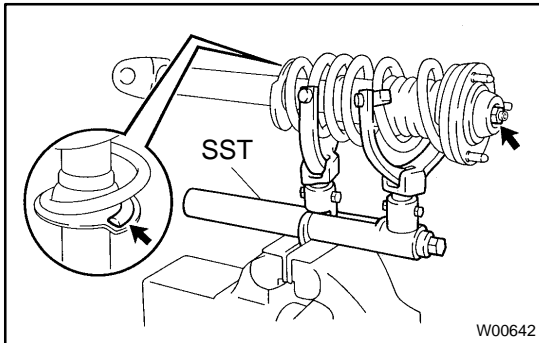

2. INSTALL COIL SPRING AND SUSPENSION SUPPORT

- Using SST, compress the coil spring.

SST 09727-30021

NOTICE:


Do not use an impact wrench. It will damage the SST.

- Install the coil spring to the shock absorber.

HINT:

Fit the lower end of the coil spring into the gap of the spring seat of the shock absorber.

- Install the suspension support to the rod and temporarily tighten a new nut.

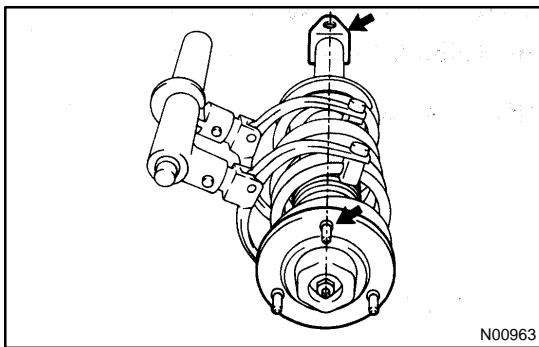

- Rotate the suspension support so that the rod and one of the bolts on suspension support are aligned with the lower bushing.

- Remove the SST.

SST 09727-30021

HINT:

After removing the SST, recheck the direction of the suspension support.