



CELLULAR MOBILE TELEPHONE

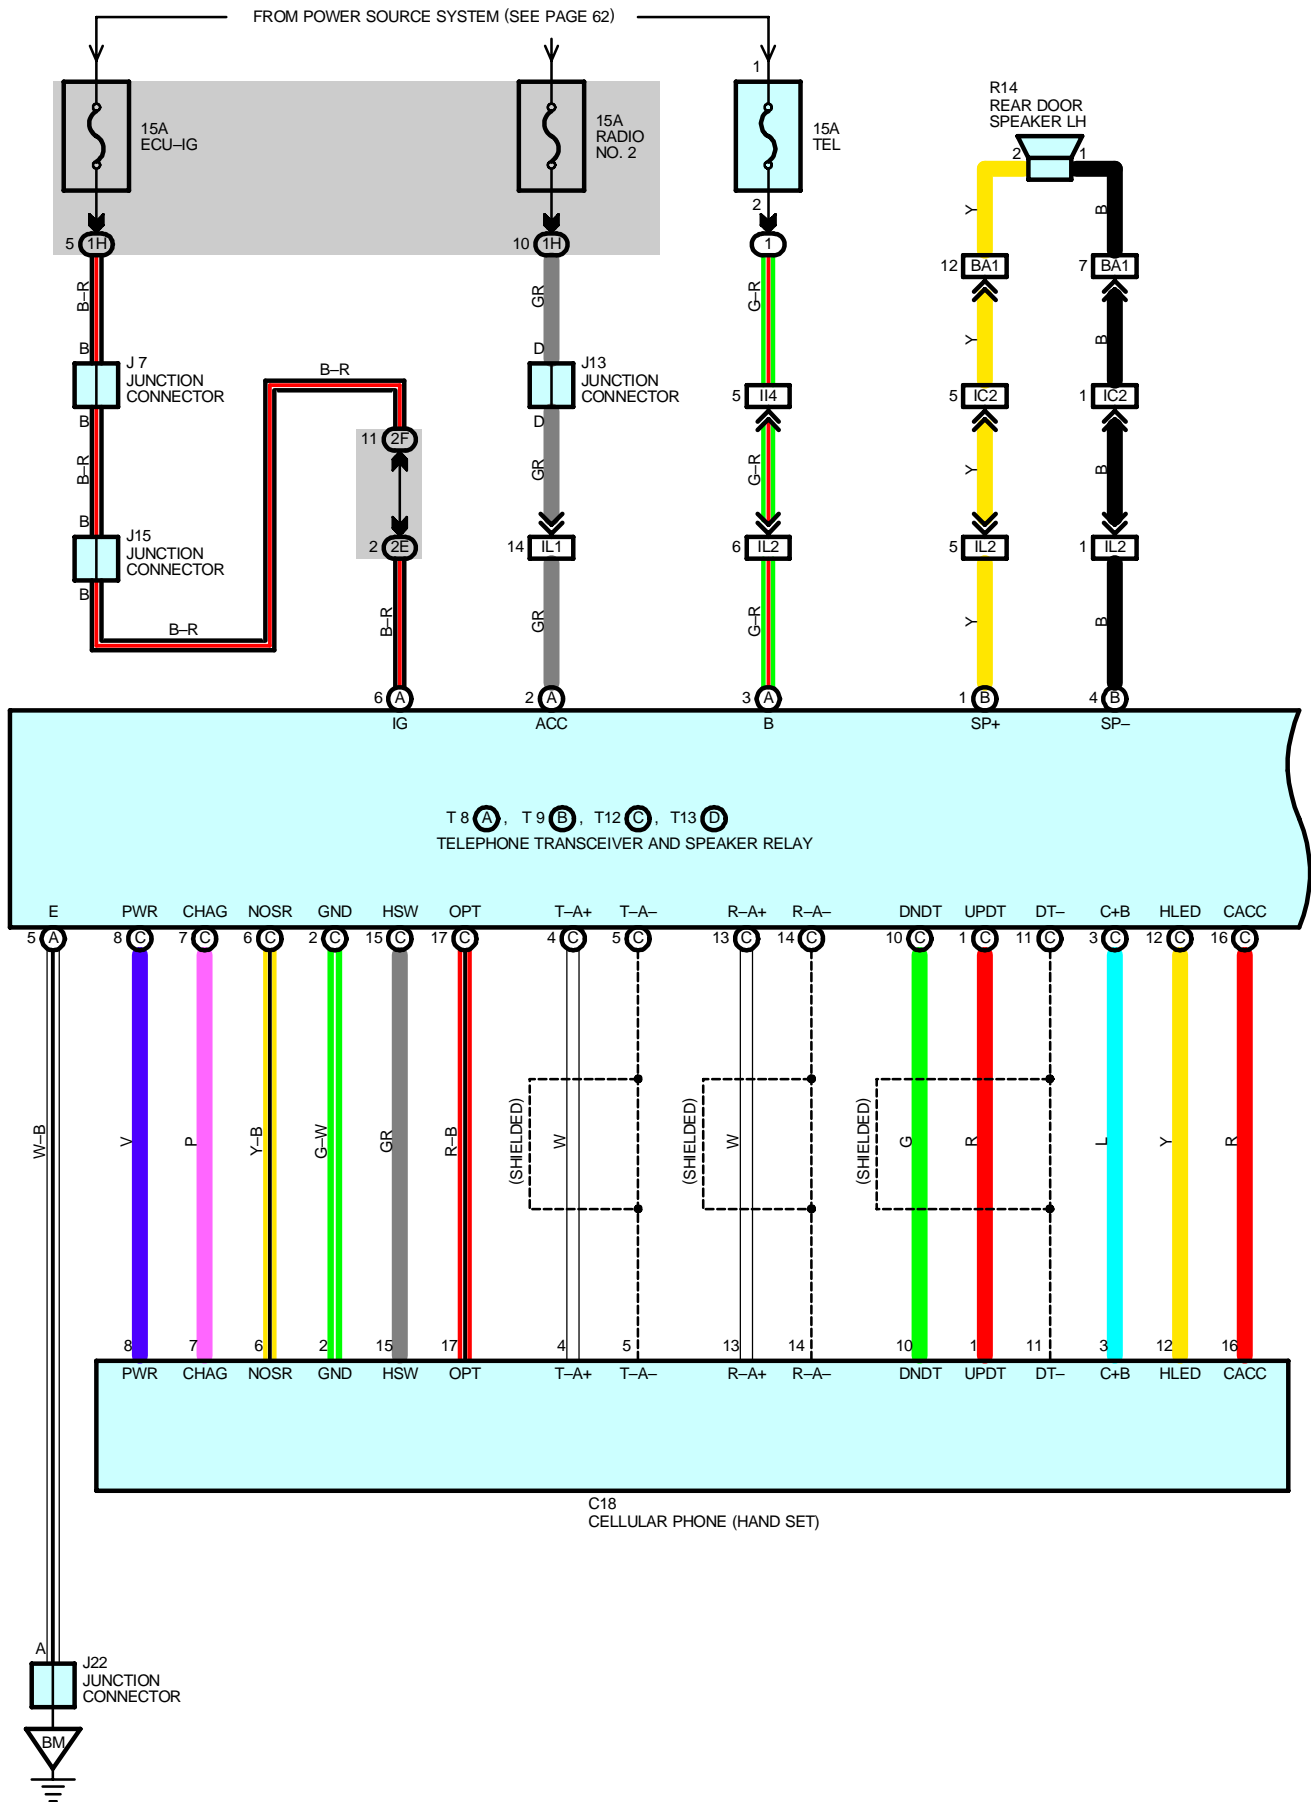

- * 1 : 3UZ-FE
- * 2 : 2JZ-FE

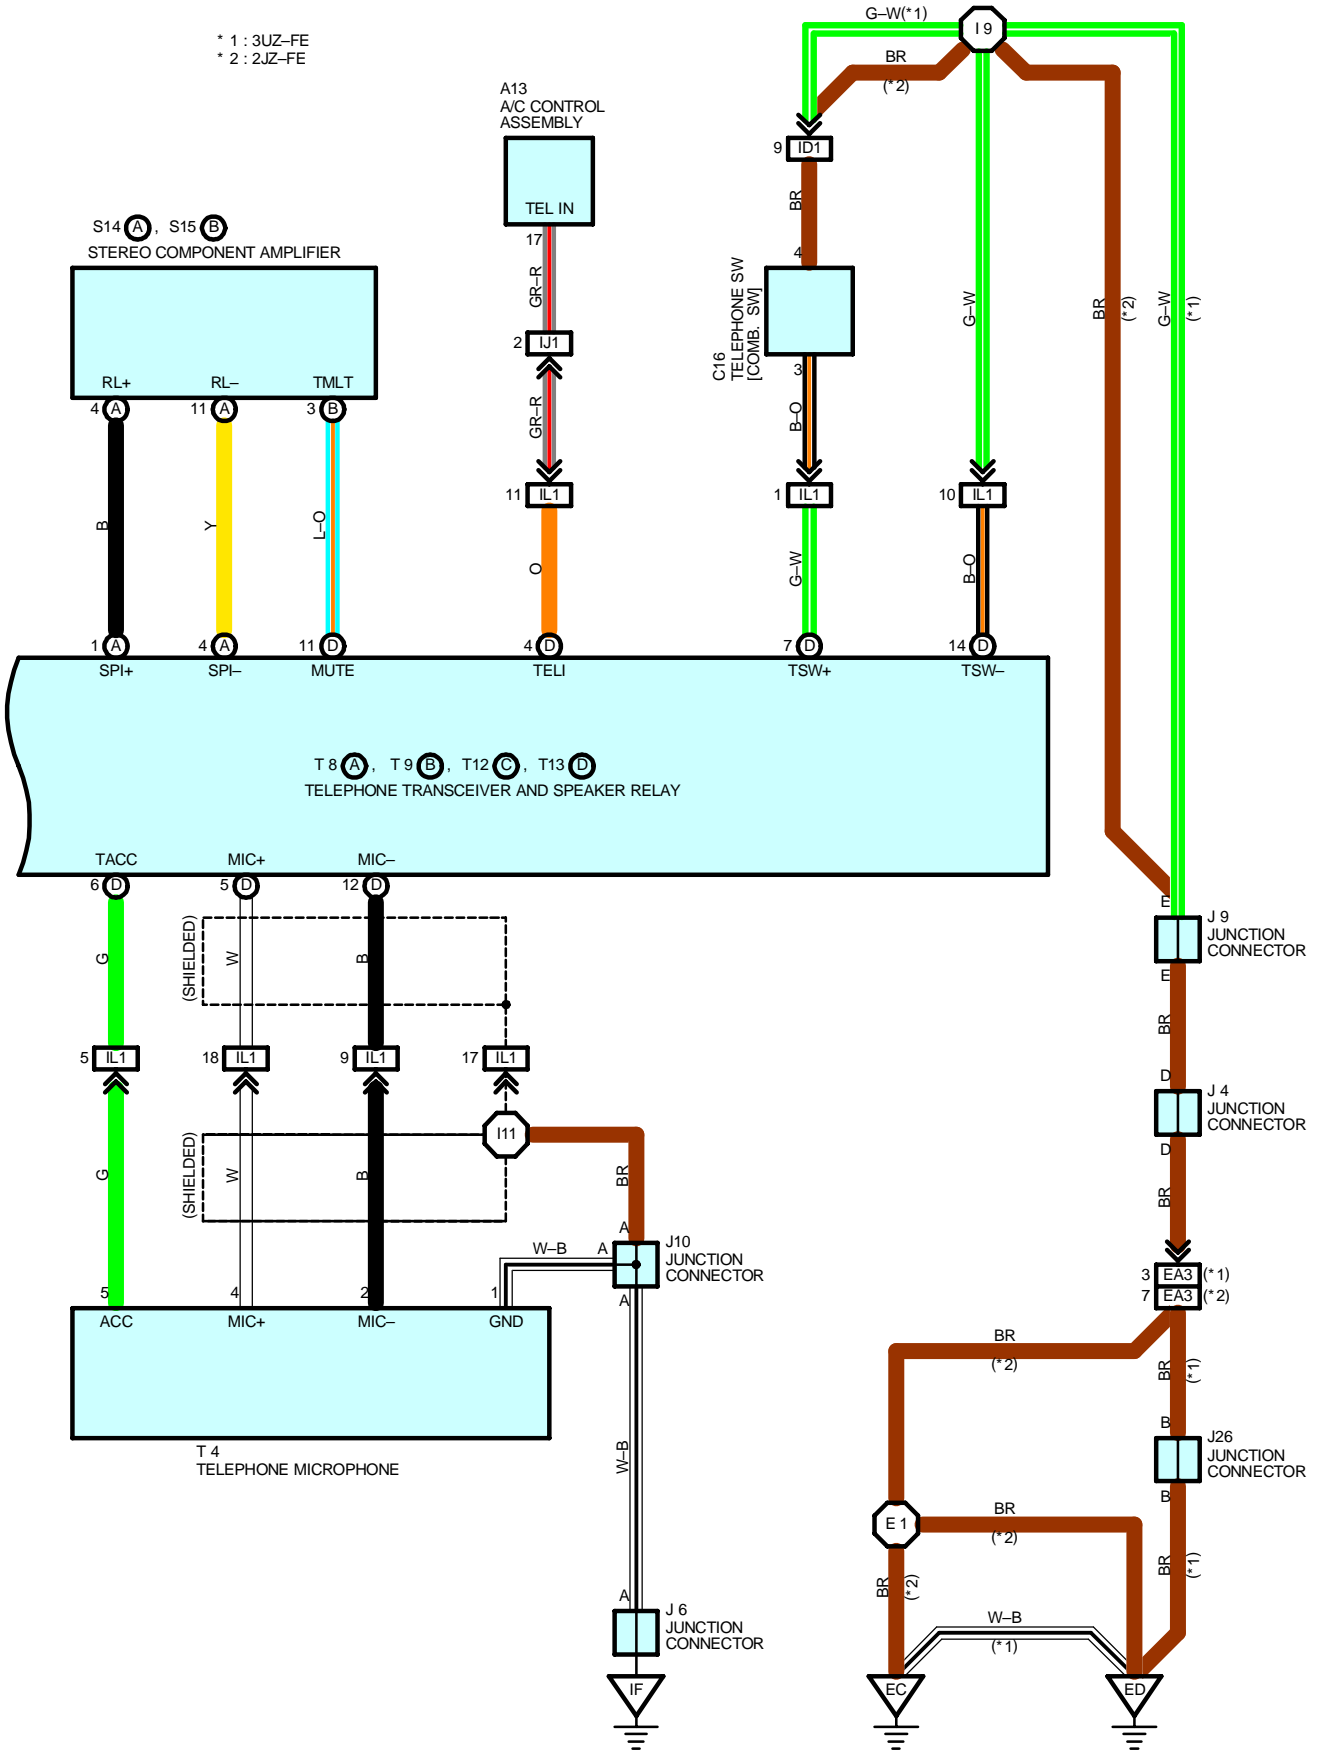

CELLULAR MOBILE TELEPHONE

SERVICE HINTS

T8 (A) TELEPHONE TRANSCEIVER AND SPEAKER RELAY

- (A) 3-GROUND : Always approx. **12** volts
- (A) 2-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position
- (A) 6-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (A) 5-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A13	42	J9	43	S14	A 45
C16	42	J10	43	S15	B 45
C18	44	J13	43	T4	43
J4	39 (3UZ-FE)	J15	43	T8	A 45
	41 (2JZ-GE)	J22	44	T9	B 45
J6	43	J26	39 (3UZ-FE)	T12	C 45
J7	43	R14	45	T13	D 45

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	24	Engine Room No.1 R/B (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1H	29	Cowl Wire and Driver Side J/B (Left Kick Panel)
2E	30	Floor No.1 Wire and Passenger Side J/B (Right Kick Panel)
2F	30	Cowl Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA3	48 (3UZ-FE)	Engine Wire and Cowl Wire (Inside of the ECU Box)
	50 (2JZ-GE)	
IC2	52	Floor No.2 Wire and Cowl Wire (Left Kick Panel)
ID1	52	Cowl Wire and Cowl Wire (Left Side of the Instrument Panel Reinforcement)
II4	52	Engine Room Main Wire and Cowl Wire (Near the Passenger Side R/B)
IJ1	54	Instrument Panel Wire and Cowl Wire (Left Side of the Blower Unit)
IL1	54	Floor No.1 Wire and Cowl Wire (Right Kick Panel)
IL2		
BA1	56	Rear Door LH Wire and Floor No.2 Wire (Under the Center Pillar LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EC	48 (3UZ-FE)	RH Bank of the Cylinder Head
	50 (2JZ-GE)	Front Side of the Intake Manifold
ED	48 (3UZ-FE)	LH Bank of the Cylinder Head
	50 (2JZ-GE)	Rear Side of the Intake Manifold
IF	52	Left Kick Panel
BM	56	Quarter Panel RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	50 (2JZ-GE)	Engine Wire	I11	54	Cowl Wire
I9	54	Cowl Wire			

