


## REMOVAL

### 1. REMOVE REAR SEAT

(See page [BO-119](#))

### 2. REMOVE THESE PARTS:

- Rear door inside scuff plates
- Rear door opening trims
- Rear seat side garnishes

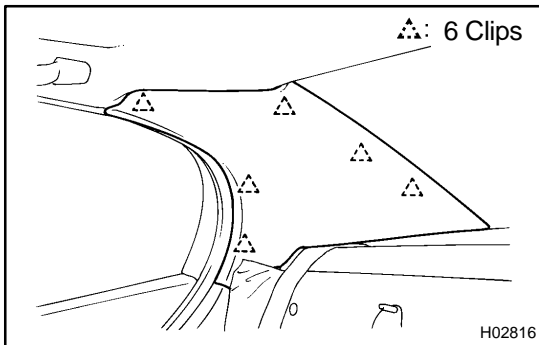


### 3. REMOVE ROOF SIDE INNER GARNISH

Insert a screwdriver between the roof side inner garnish and body.

HINT:

- Tape the screwdriver tip before use.
- Do the same for LH and RH.

### 4. REMOVE SPEAKER GRILLE

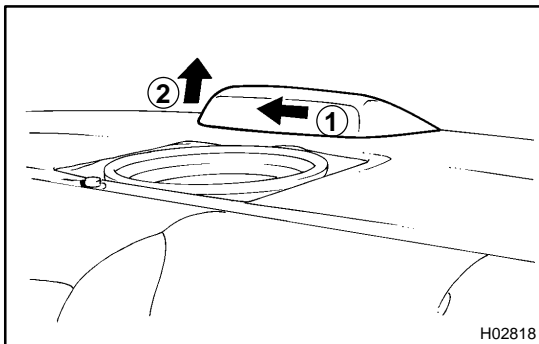

### 5. w/ High-mounted stop light:

#### REMOVE HIGH-MOUNTED STOP LIGHT

Remove the high-mounted stop light, as shown in the illustration.


### 6. REMOVE TETHER ANCHOR

- Using a screw driver, remove the CRS tether anchor cover.

HINT:

Tape the screwdriver tip before use.

- Remove the CRS tether anchor by loosening the bolt.
- Employ the same manner described above to the other side.

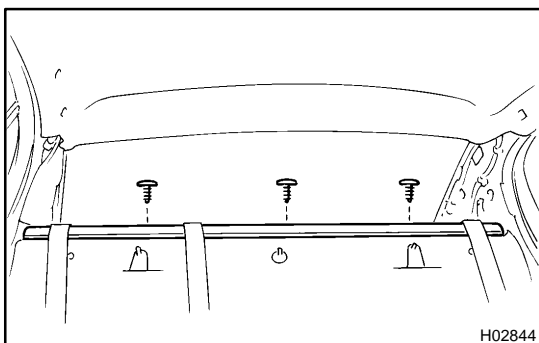


### 7. REMOVE PACKAGE TRAY TRIM

Using a clip remover, remove the 3 clips and package tray trim.

### 8. REMOVE ROOM PARTITION TRIM

Remove the 8 clips and room partition trim.

### 9. REMOVE ROOF DRIP SIDE FINISH CENTER MOULDING (See page [BO-52](#))

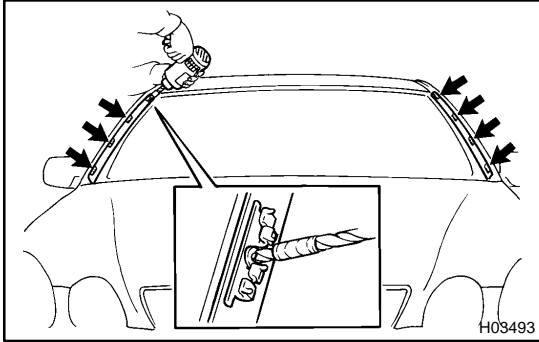

**10. REMOVE BACK WINDOW OUTSIDE MOULDING CLIP**  
Using a drill of less than  $\varnothing$  5 mm (0.20 in.), drill out the rivet heads as shown in the illustration.

**CAUTION:**


The cut rivet and rivet cutter will be hot, avoid touching them.

**NOTICE:**

Do not jiggle the rivet cutter while cutting, otherwise you may enlarge the rivet hole or damage the rivet cutter

**HINT:**

Do not drill the body.

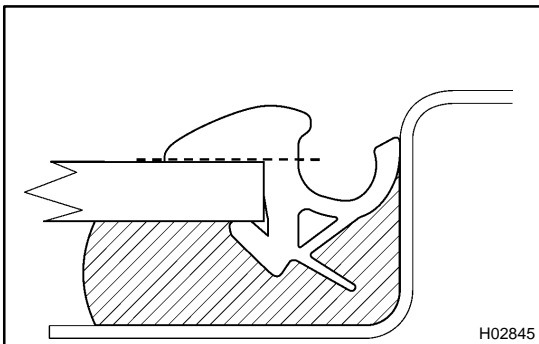


**11. REMOVE BACK WINDOW OUTSIDE UPPER MOULDING**

Using a knife, cut off the moulding as shown in the illustration.

**NOTICE:**

Do not damage the body with the knife.

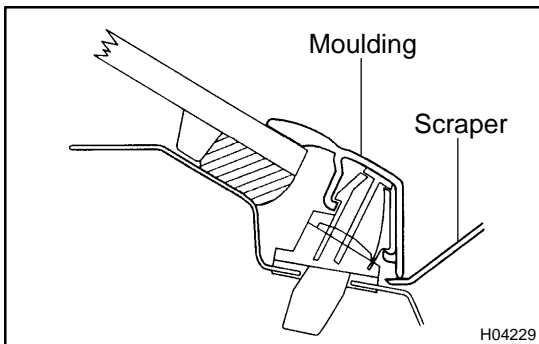


**12. REMOVE BACK WINDOW OUTSIDE LOWER MOULDING**

Using a scraper, remove the back window outside lower moulding.

**HINT:**

Tap the scraper tip before use.

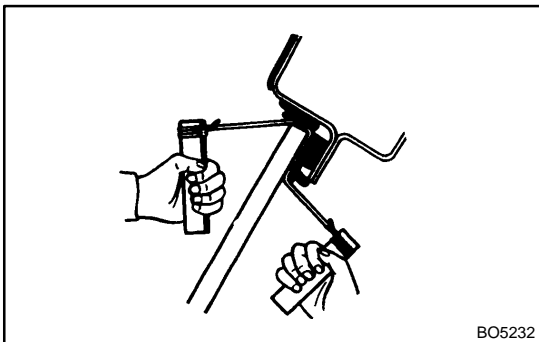

**13. REMOVE WINDSHIELD GLASS**

- (a) Disconnect the connector.
- (b) Push piano wire through between the body and glass from the interior.
- (c) Tie both wire ends to a wooden block or similar object.

**HINT:**

Apply adhesive tape to the outer surface to keep the surface from being scratched.

- (d) Cut the adhesive by pulling the piano wire around it.

(e) Remove the glass.

**NOTICE:**

**Leave as much of the adhesive on the body as possible when cutting off the glass.**