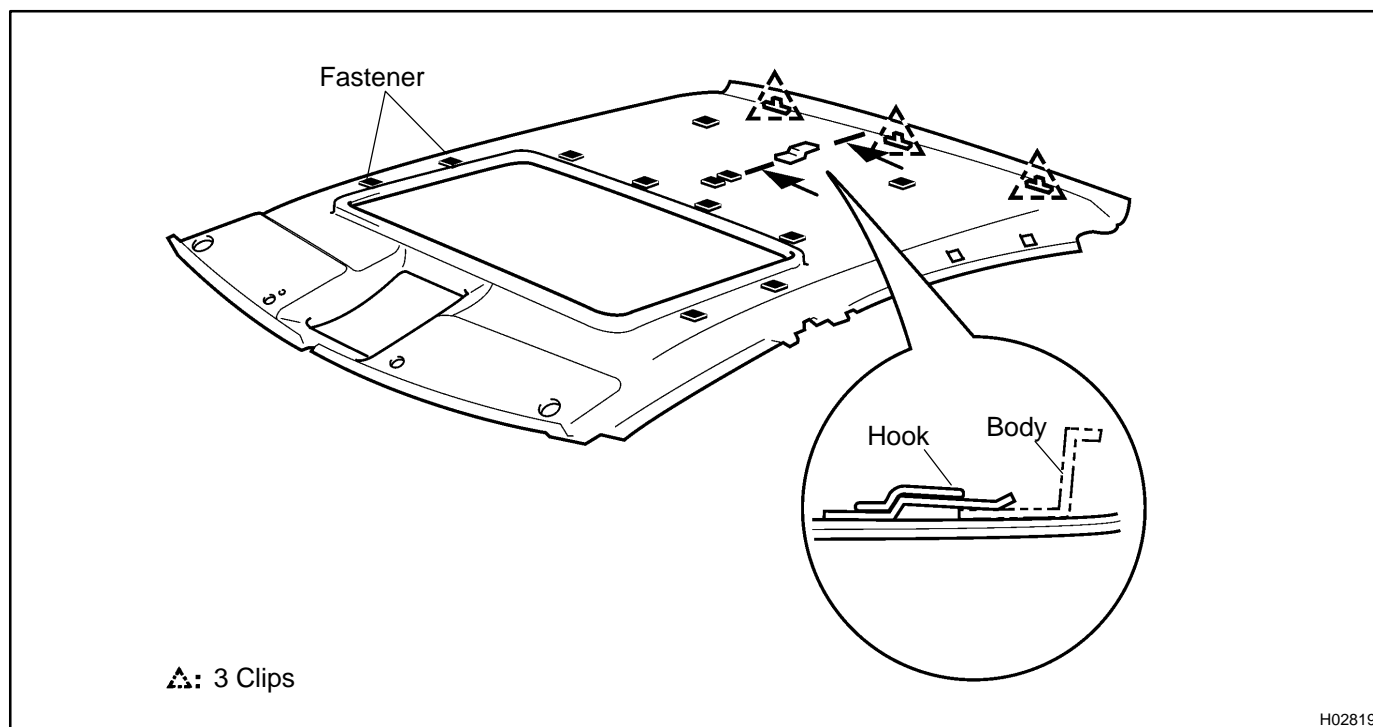


INSTALLATION

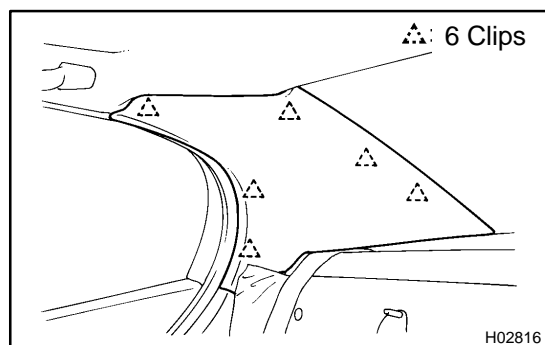
1. INSTALL ROOF HEADLINING

- Install the 2 side rail spacers with the 6 screws.
- Slide the roof headlining rearward to connect the hook to the body.
- Fasten the fastener tape and install the 3 clips to the body.



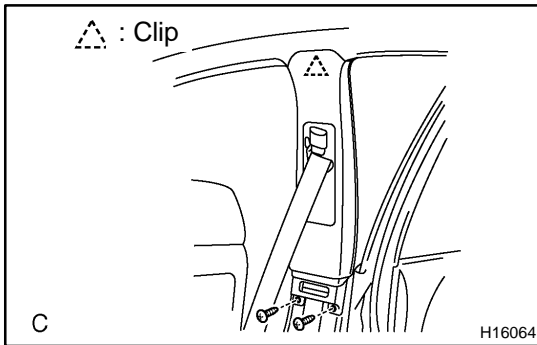
2. INSTALL HOLDERS

Install the 2 holders with the 2 screws.

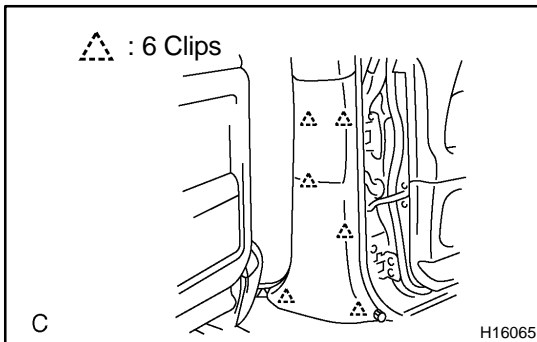


3. INSTALL ROOF SIDE INNER GARNISH

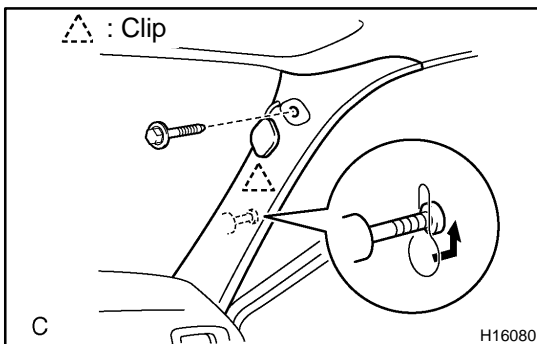
- Install the roof side inner garnish spacer with the 3 screws.
- Install the roof side inner garnish as shown in the illustration.
- Employ the same manner described above to the other side.

**4. INSTALL CENTER PILLAR UPPER GARNISH**

- (a) Install center pillar upper garnish with the 2 screws.
- (b) Employ the same manner described above to the other side.

**5. INSTALL CENTER PILLAR LOWER GARNISH**

- (a) Install the center pillar lower garnish as shown in the illustration.
- (b) Employ the same manner described above to the other side.

**6. INSTALL FRONT PILLAR GARNISH**

- (a) Install the front pillar garnish and cover.
- (b) Install the bolt.
Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf)
- (c) Close the cover.
- (d) Employ the same manner described above to the other side.

7. INSTALL MAP LAMP ASSEMBLY

- (a) Connect the connectors.
- (b) Install the map lamp assembly with the 4 screws.
- (c) Install the lens and cover.

8. INSTALL INNER REAR VIEW MIRROR COVER**9. INSTALL SUN VISORS****10. INSTALL ASSIST GRIPS****11. INSTALL REAR PERSONAL LIGHTS****12. INSTALL REAR DOOR OPENING TRIMS****13. INSTALL FRONT DOOR OPENING TRIMS****14. INSTALL REAR SEAT SIDE GARNISHES****15. INSTALL REAR DOOR INSIDE SCUFF PLATES****16. INSTALL FRONT DOOR INSIDE SCUFF PLATES****17. INSTALL REAR SEATBACK (See page [BO-122](#))****18. INSTALL REAR SEAT CUSHION (See page [BO-122](#))**