


PARKING BRAKE PEDAL ON-VEHICLE INSPECTION

BRQJD-05

1. CHECK PARKING BRAKE PEDAL TRAVEL

Depress the parking brake pedal all the way and count the number of clicks.

**Parking brake lever travel at 294 N (30 kgf, 66.1 lbf):
7 – 9 clicks**

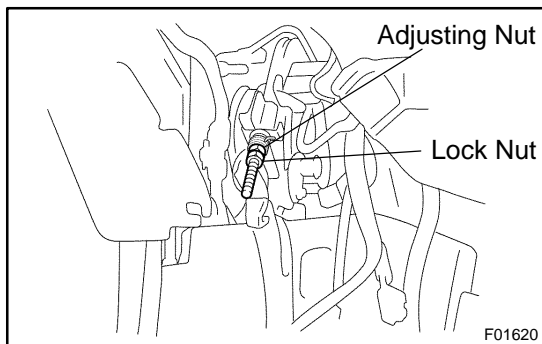

2. IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment see page [BR-37](#).

- (a) Loosen the lock nut and turn the adjusting nut until the pedal travel is correct.
- (b) Tighten the lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)