


Wireless door lock buzzer circuit

WIRING DIAGRAM

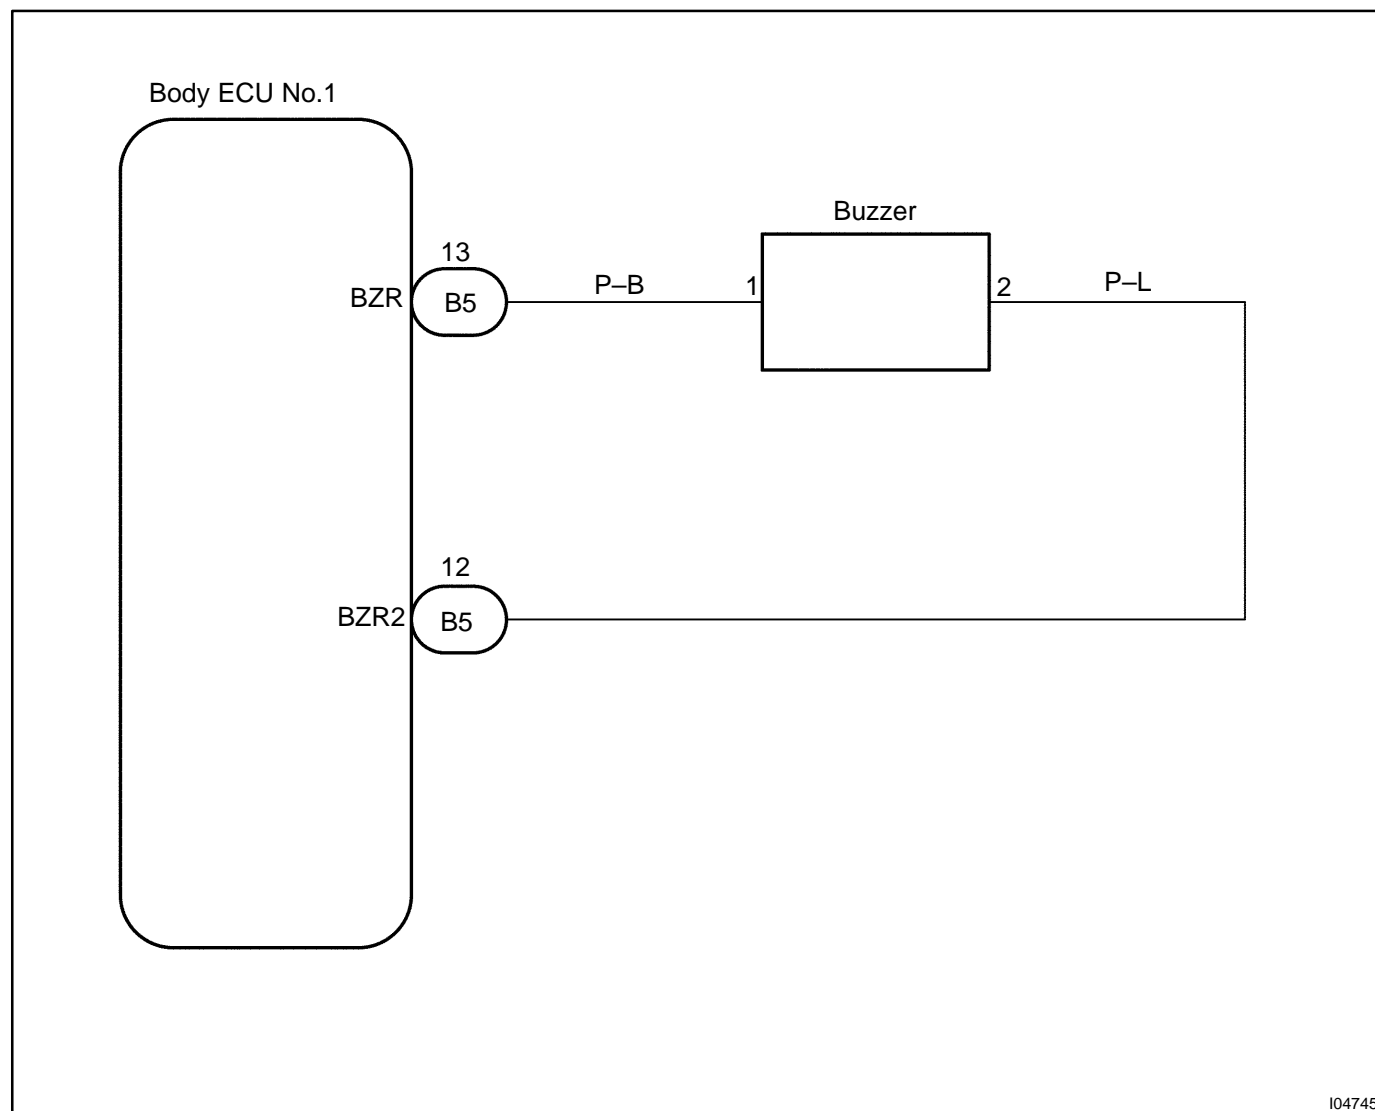

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check wireless door lock buzzer using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the wireless door lock buzzer can operated in an ACTIVE TEST.

OK:

The wireless door lock buzzer should sound.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-931](#))

NG

2	Check wireless door lock buzzer. (See page BE-155)
---	---

NG

Replace the wireless door lock buzzer.

OK

3	Check wireless and connector between wireharness door lock buzzer and Body ECU No. 1.
---	---

NG

Repair or replace wireless or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))