



TERMINALS OF ECM

2JZ-GE Engine:

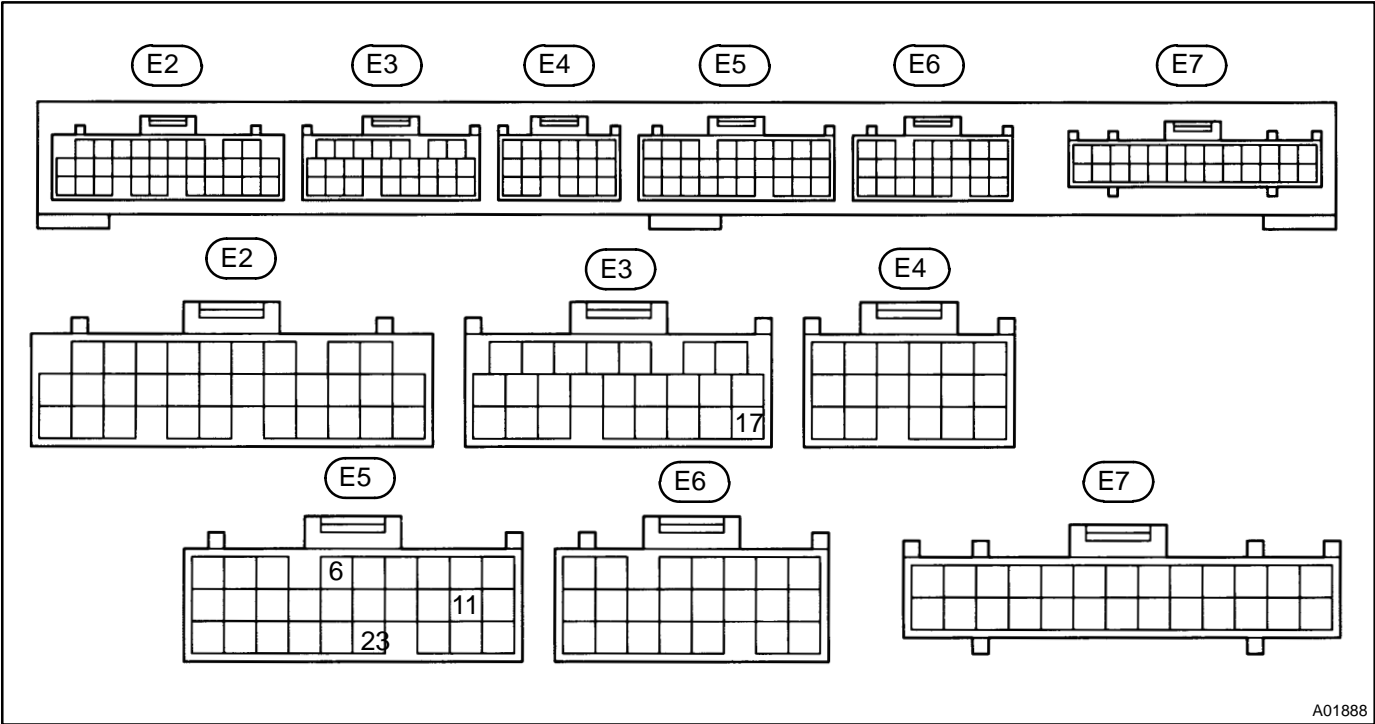

A01888

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
STP ↔ E1 (E5 – 6 ↔ E3 – 17)	G–W ↔ BR	Ignition switch ON and Depress brake pedal	10 – 16 V
		Ignition switch OFF or Release brake pedal	Below 1 V
ST1– ↔ E1 (E5 – 11 ↔ E3 – 17)	B–L ↔ BR	Ignition switch ON and release brake pedal	10 – 16 V
		Ignition switch OFF or depress brake pedal	Below 1 V
CCS ↔ E1 (E5 – 23 ↔ E3 – 17)	R–L ↔ BR	Ignition switch ON	10 – 16 V
		Ignition switch ON CANCEL switch held ON	6.9 – 9.8 V
		Ignition switch ON SET/COAST switch held ON	4.7 – 6.9 V
		Ignition switch ON RES/ACC switch held ON	2.4 – 3.8 V

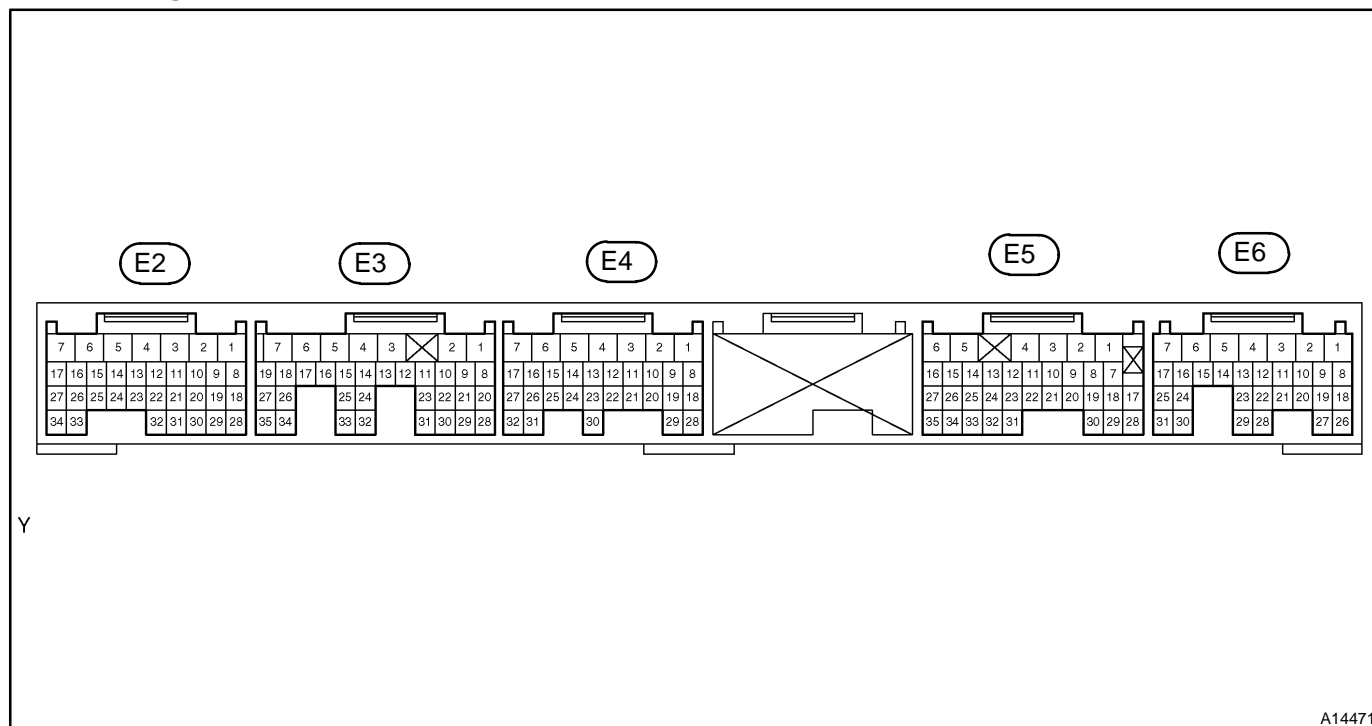3UZ-FE Engine:

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
STP ↔ E1 (E5 – 4 ↔ E3 – 7)	G–W ↔ BR	Ignition switch ON and Depress brake pedal	10 – 16 V
		Ignition switch OFF or Release brake pedal	Below 1 V
ST1– ↔ E1 (E6 – 8 ↔ E3 – 7)	B–L ↔ BR	Ignition switch ON and release brake pedal	10 – 16 V
		Ignition switch OFF or depress brake pedal	Below 1 V
CCS ↔ E1 (E5 – 31 ↔ E3 – 7)	R–Y ↔ BR	Ignition switch ON	10 – 16 V
		Ignition switch ON CANCEL switch held ON	6.9 – 9.8 V
		Ignition switch ON SET/COAST switch held ON	4.7 – 6.9 V
		Ignition switch ON RES/ACC switch held ON	2.4 – 3.8 V