



TERMINALS OF ECM

2JZ-GE engine:

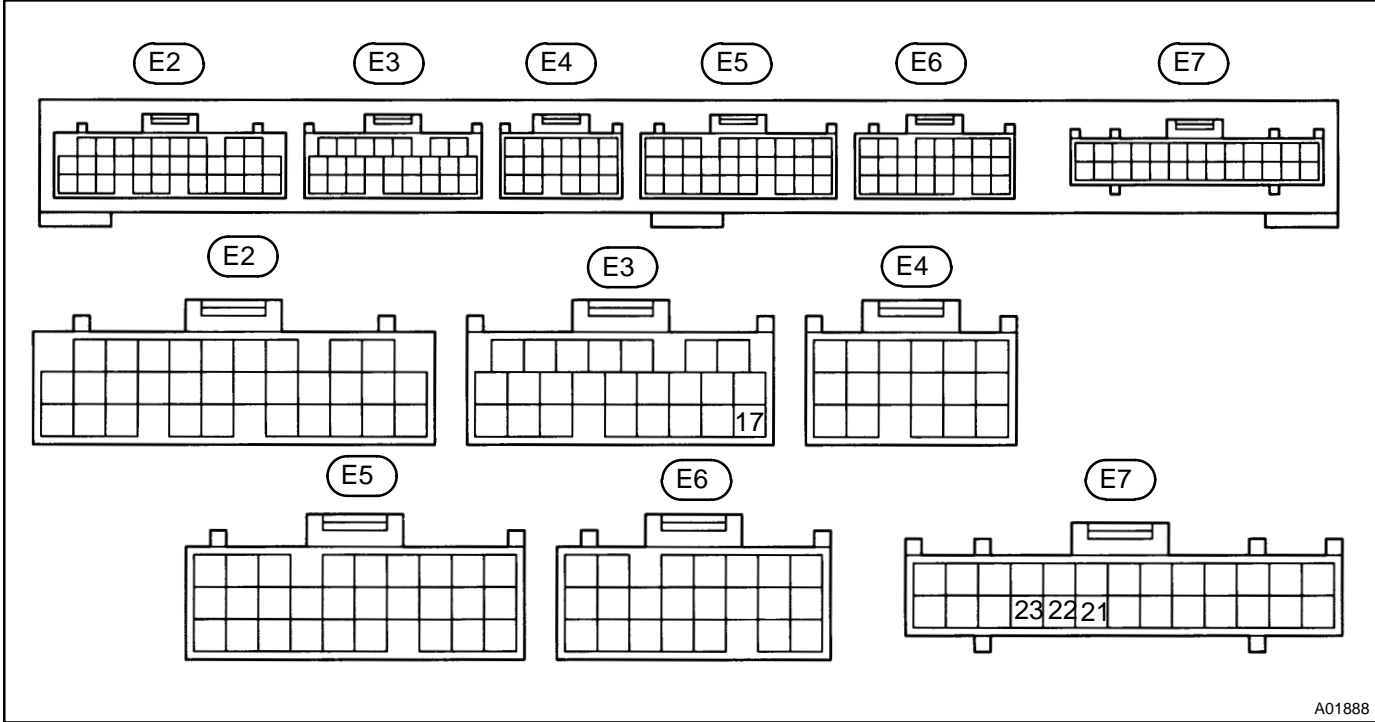

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
CODE – E1 (E7 – 23 ↔ E3 – 17)	G-B ↔ BR	Ignition Switch ON	10 – 14
TXCT – E1 (E7 – 21 ↔ E3 – 17)	L-R ↔ BR	Ignition Switch ON	10 – 14
RXCK – E1 (E7 – 22 ↔ E3 – 17)	B-W ↔ BR	Ignition Switch ON	10 – 14

3UZ-FE engine:

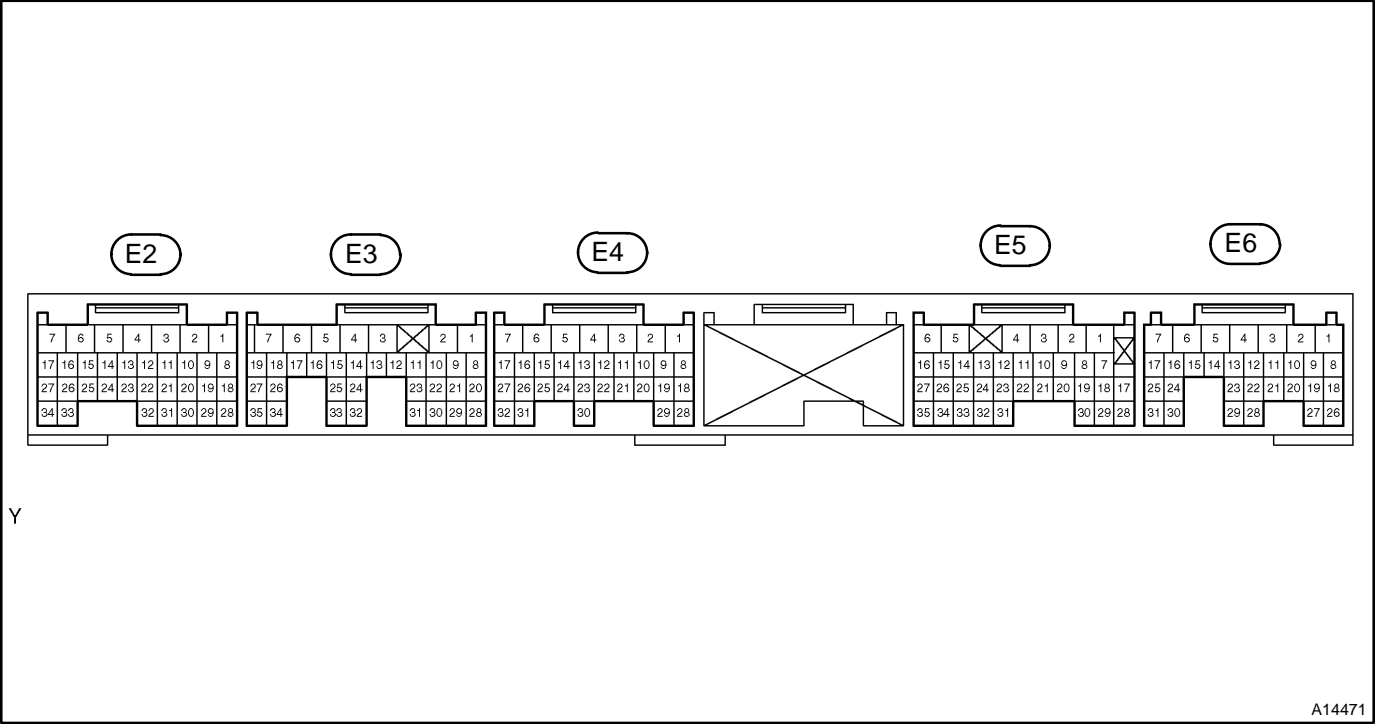

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
CODE – E1 (E6 – 31 ↔ E3 – 7)	G–B ↔ BR	Ignition Switch ON	10 – 14
TXCT – E1 (E5 – 23 ↔ E3 – 7)	L–R ↔ BR	Ignition Switch ON	10 – 14
RXCK – E1 (E5 – 24 ↔ E3 – 17)	B–W ↔ BR	Ignition Switch ON	10 – 14