


OVERALL ELECTRICAL WIRING DIAGRAM


1 LEXUS SC400

(Cont. next page)

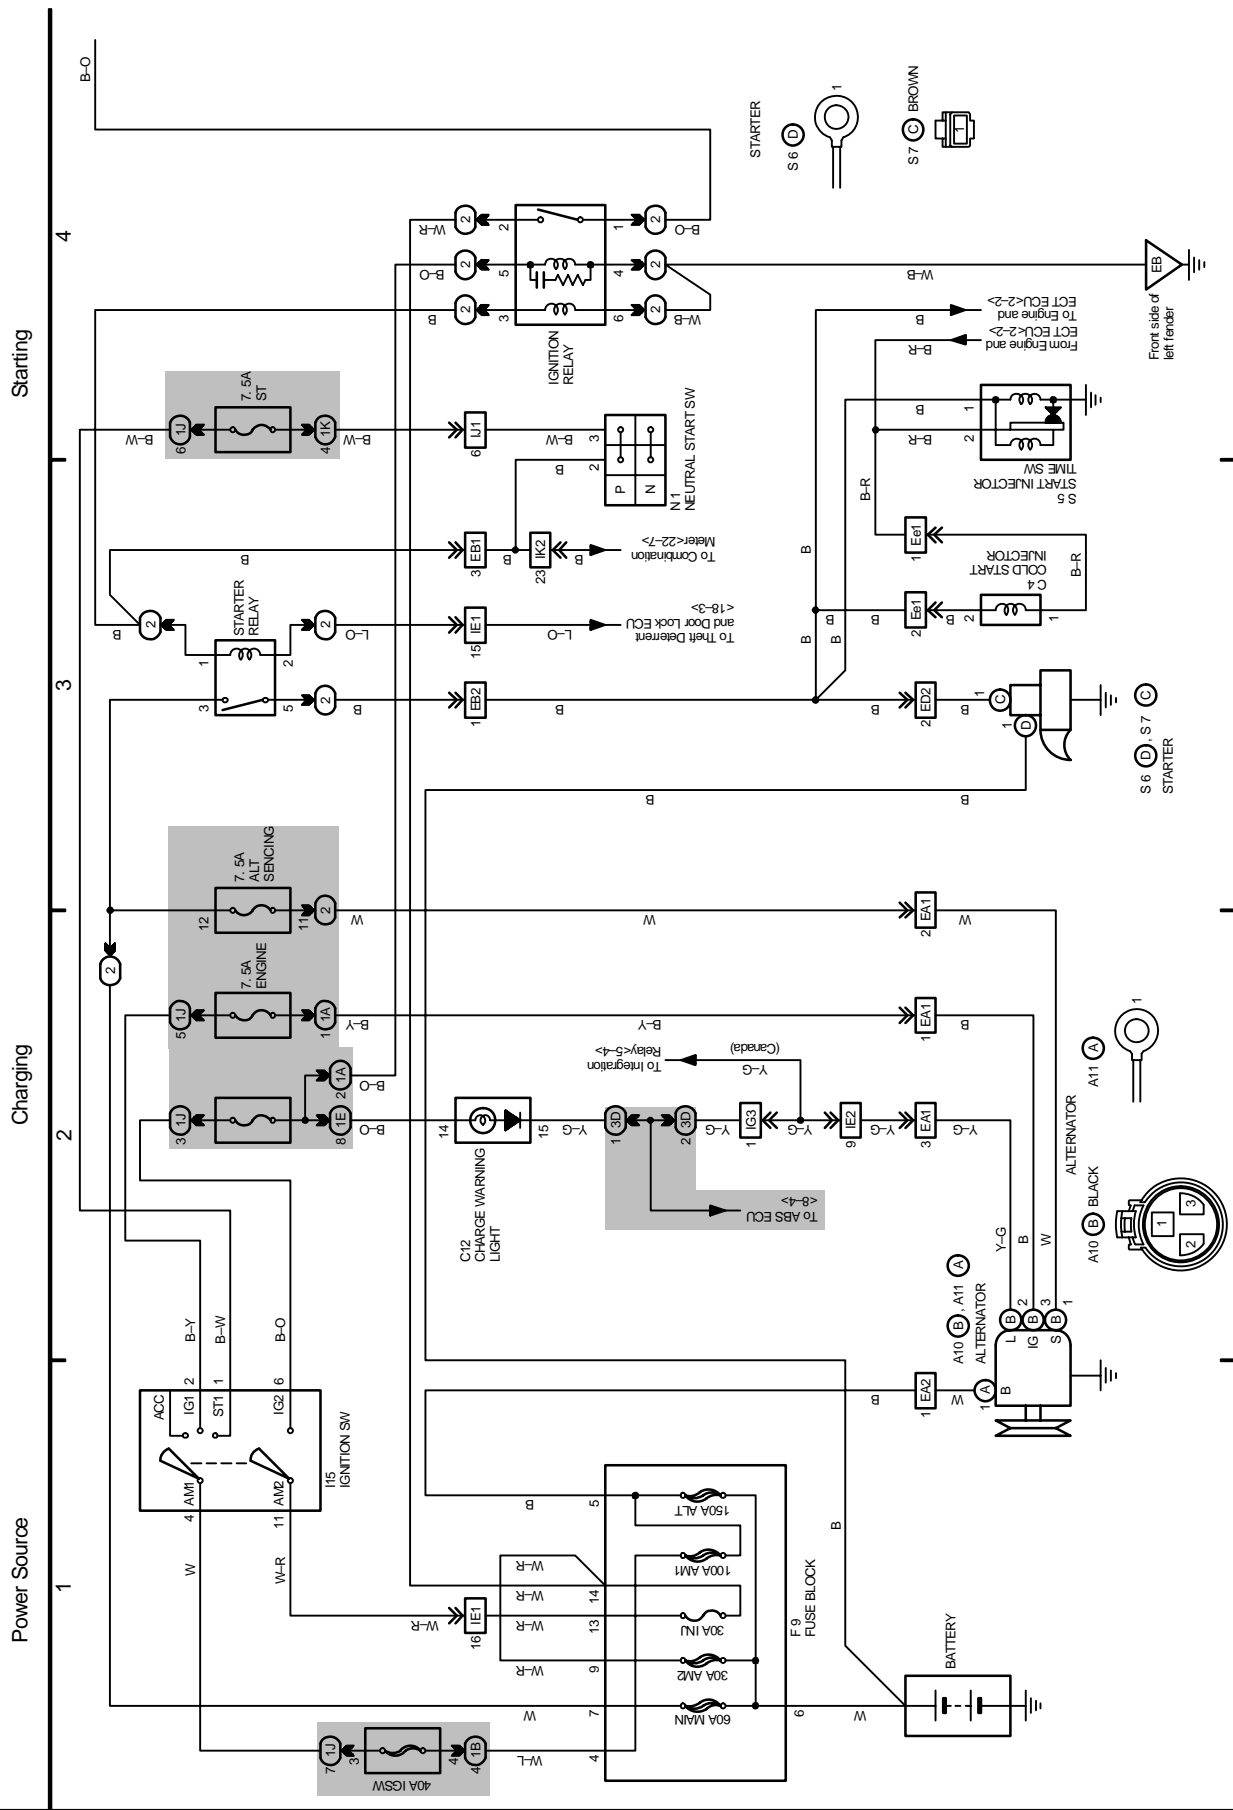


1 LEXUS SC400(Cont' d)

Ignition

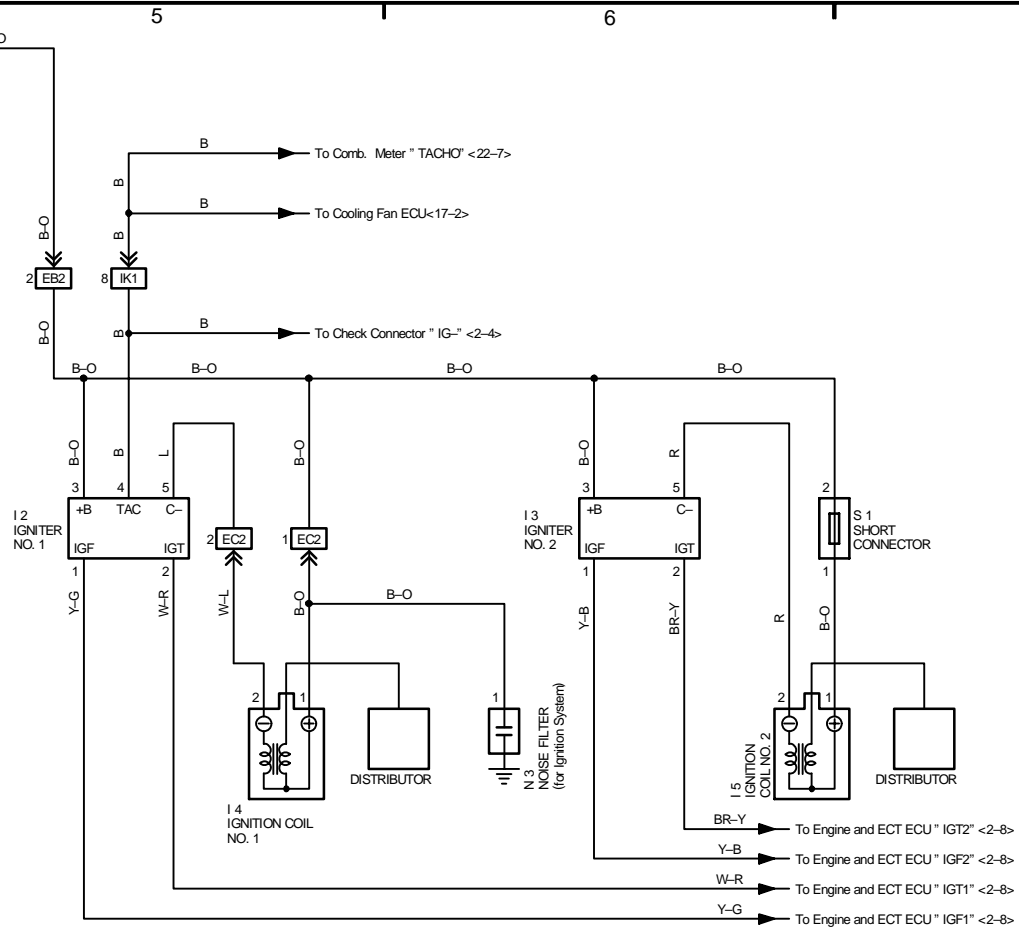


OVERALL ELECTRICAL WIRING DIAGRAM

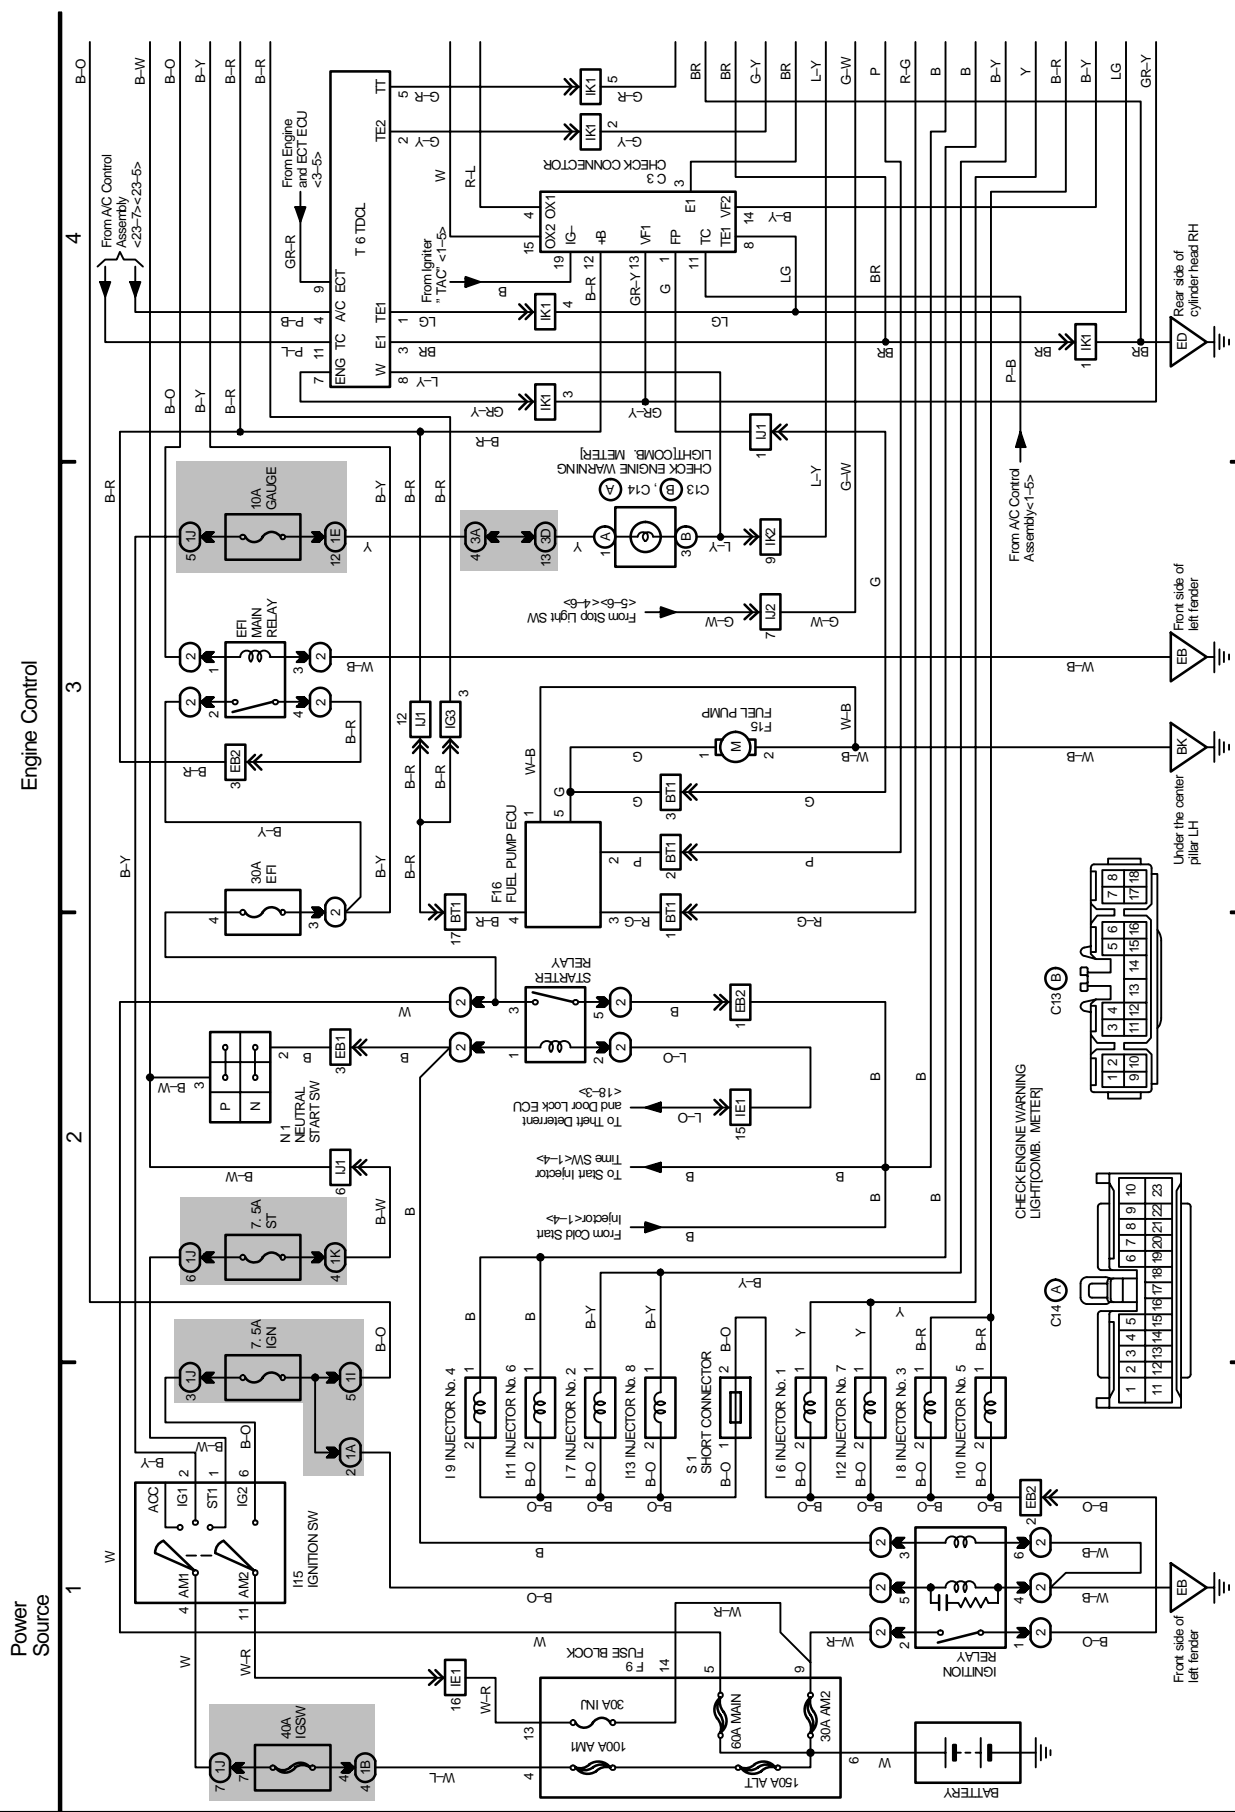

2 LEXUS SC400(Cont' d)

Engine Control

- *1 : (w/ Traction Control)
- *2 : (w/o Traction Control)
- *3 : (California)
- *4 : (Ex. California)

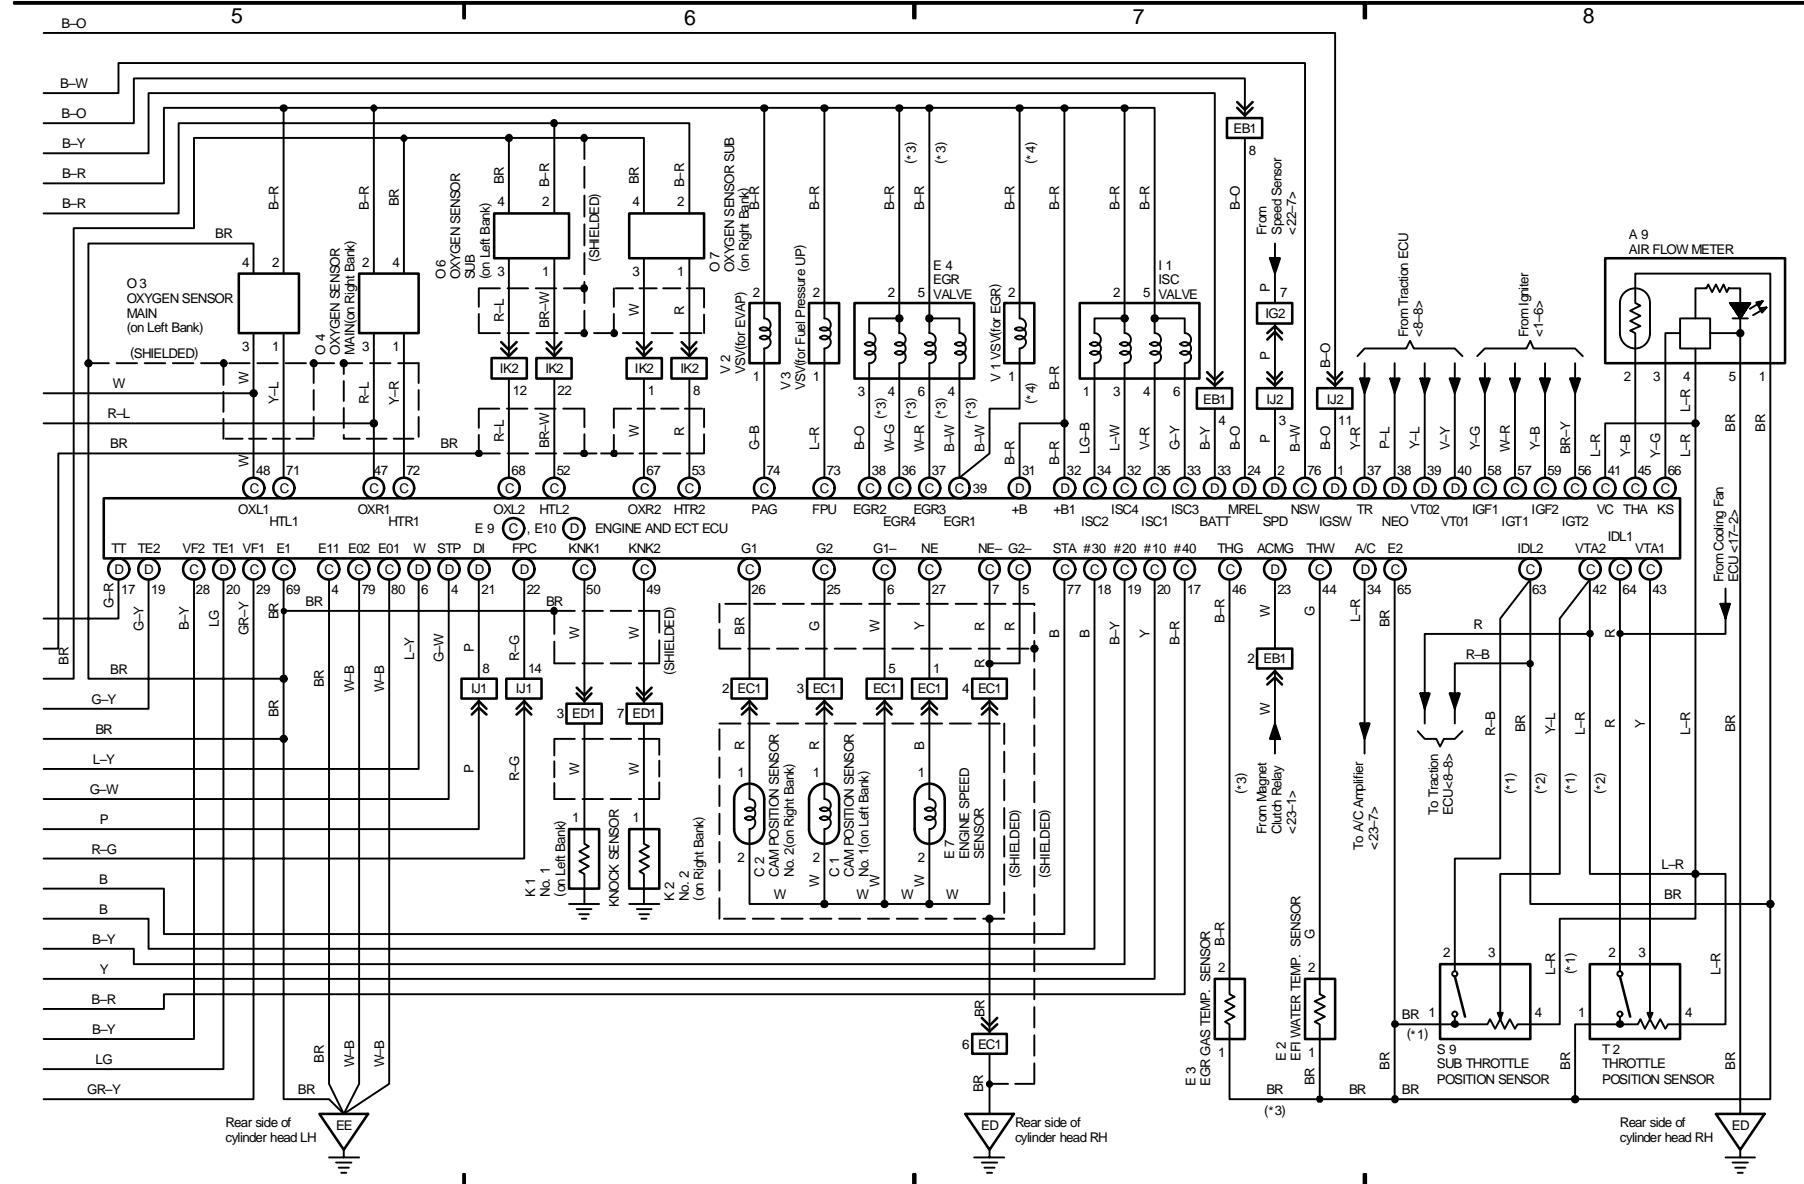


OVERALL ELECTRICAL WIRING DIAGRAM


(Cont. next page)

3 LEXUS SC400

ECT and A/T Indicator

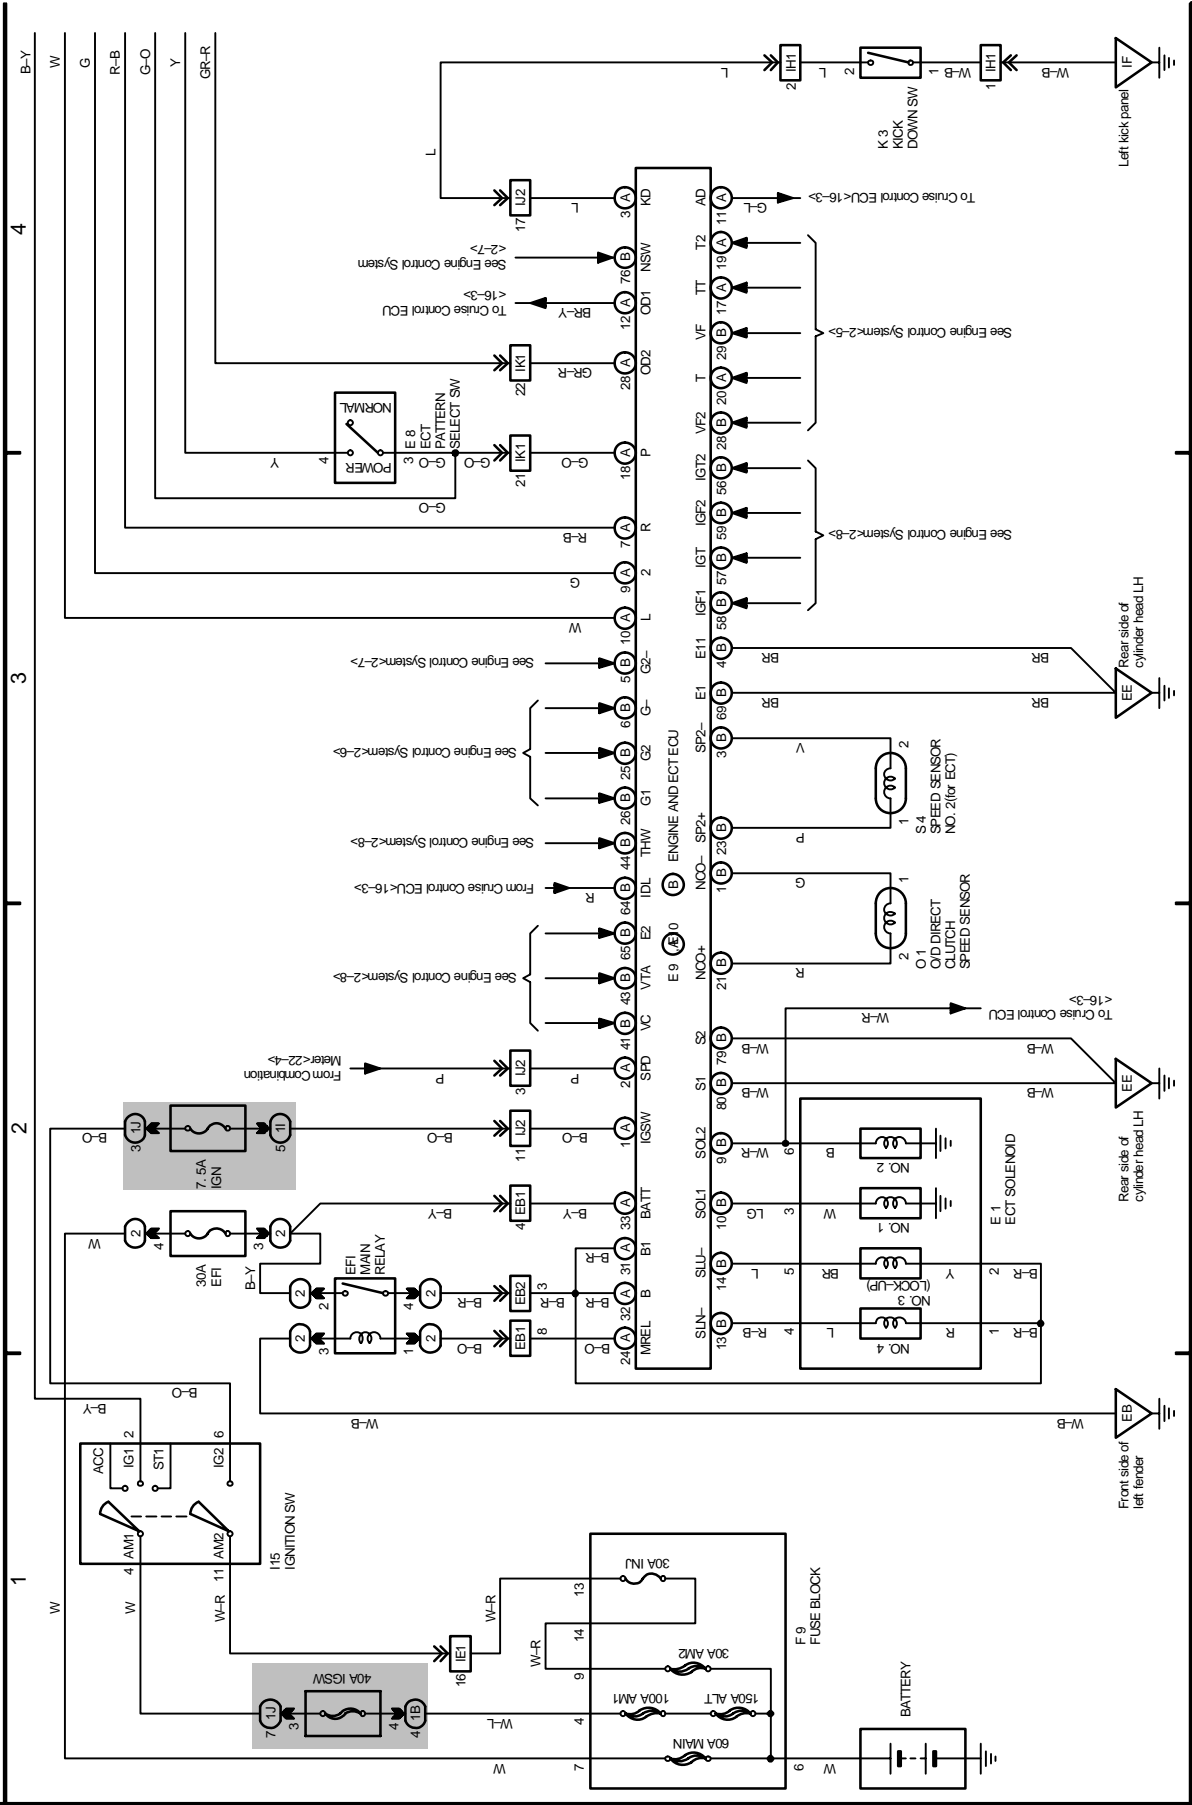

3 LEXUS SC400(Con't)

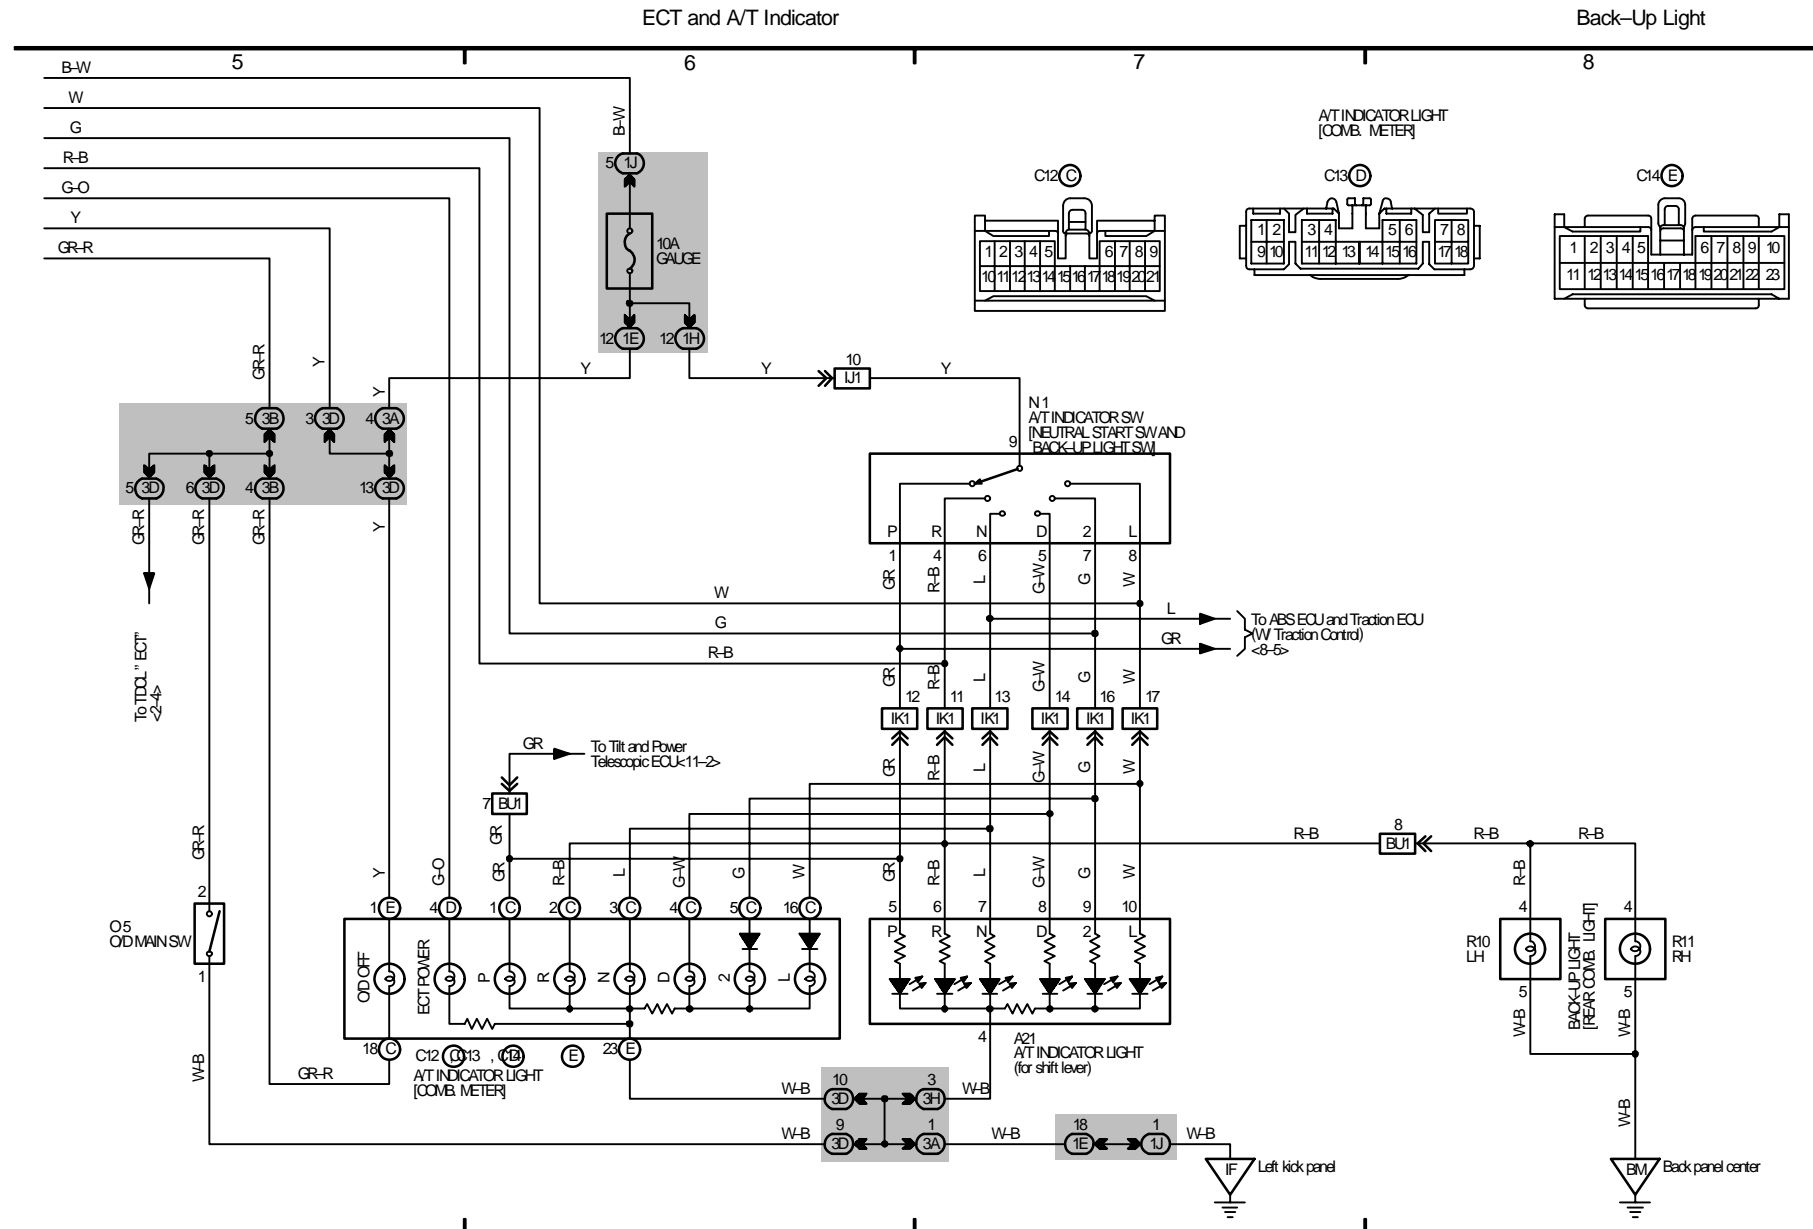

OVERALL ELECTRICAL WIRING DIAGRAM


4 LEXUS SC400

(Cont. next page)

Power Source

Headlight and Light Auto Turn Off(for USA)

Unlock and Seat Belt Warning
(for USA)

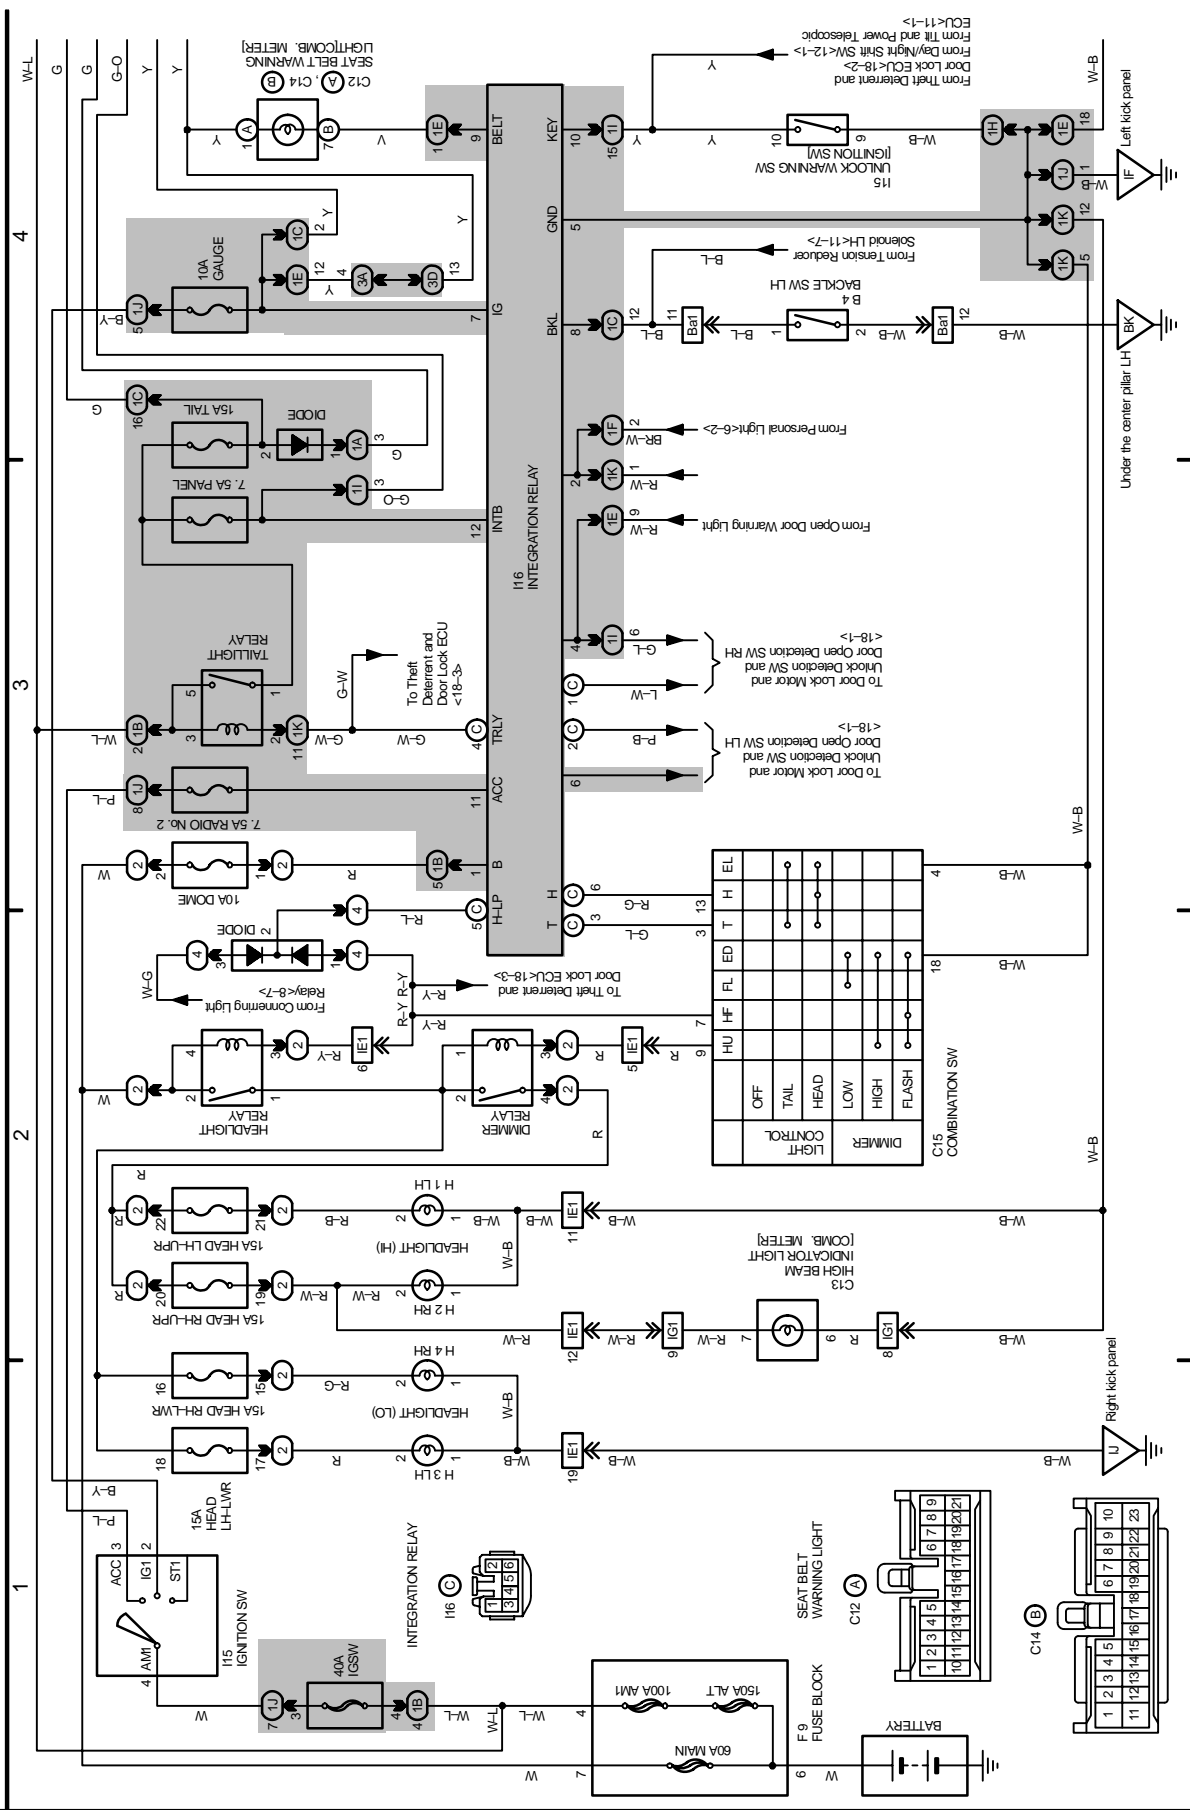


4 LEXUS SC400(Cont' d)

Taillight and Stop Light(for USA)

Illumination(for USA)


*1: (w/ Rear Spoiler)
*2: (w/o Rear Spoiler)

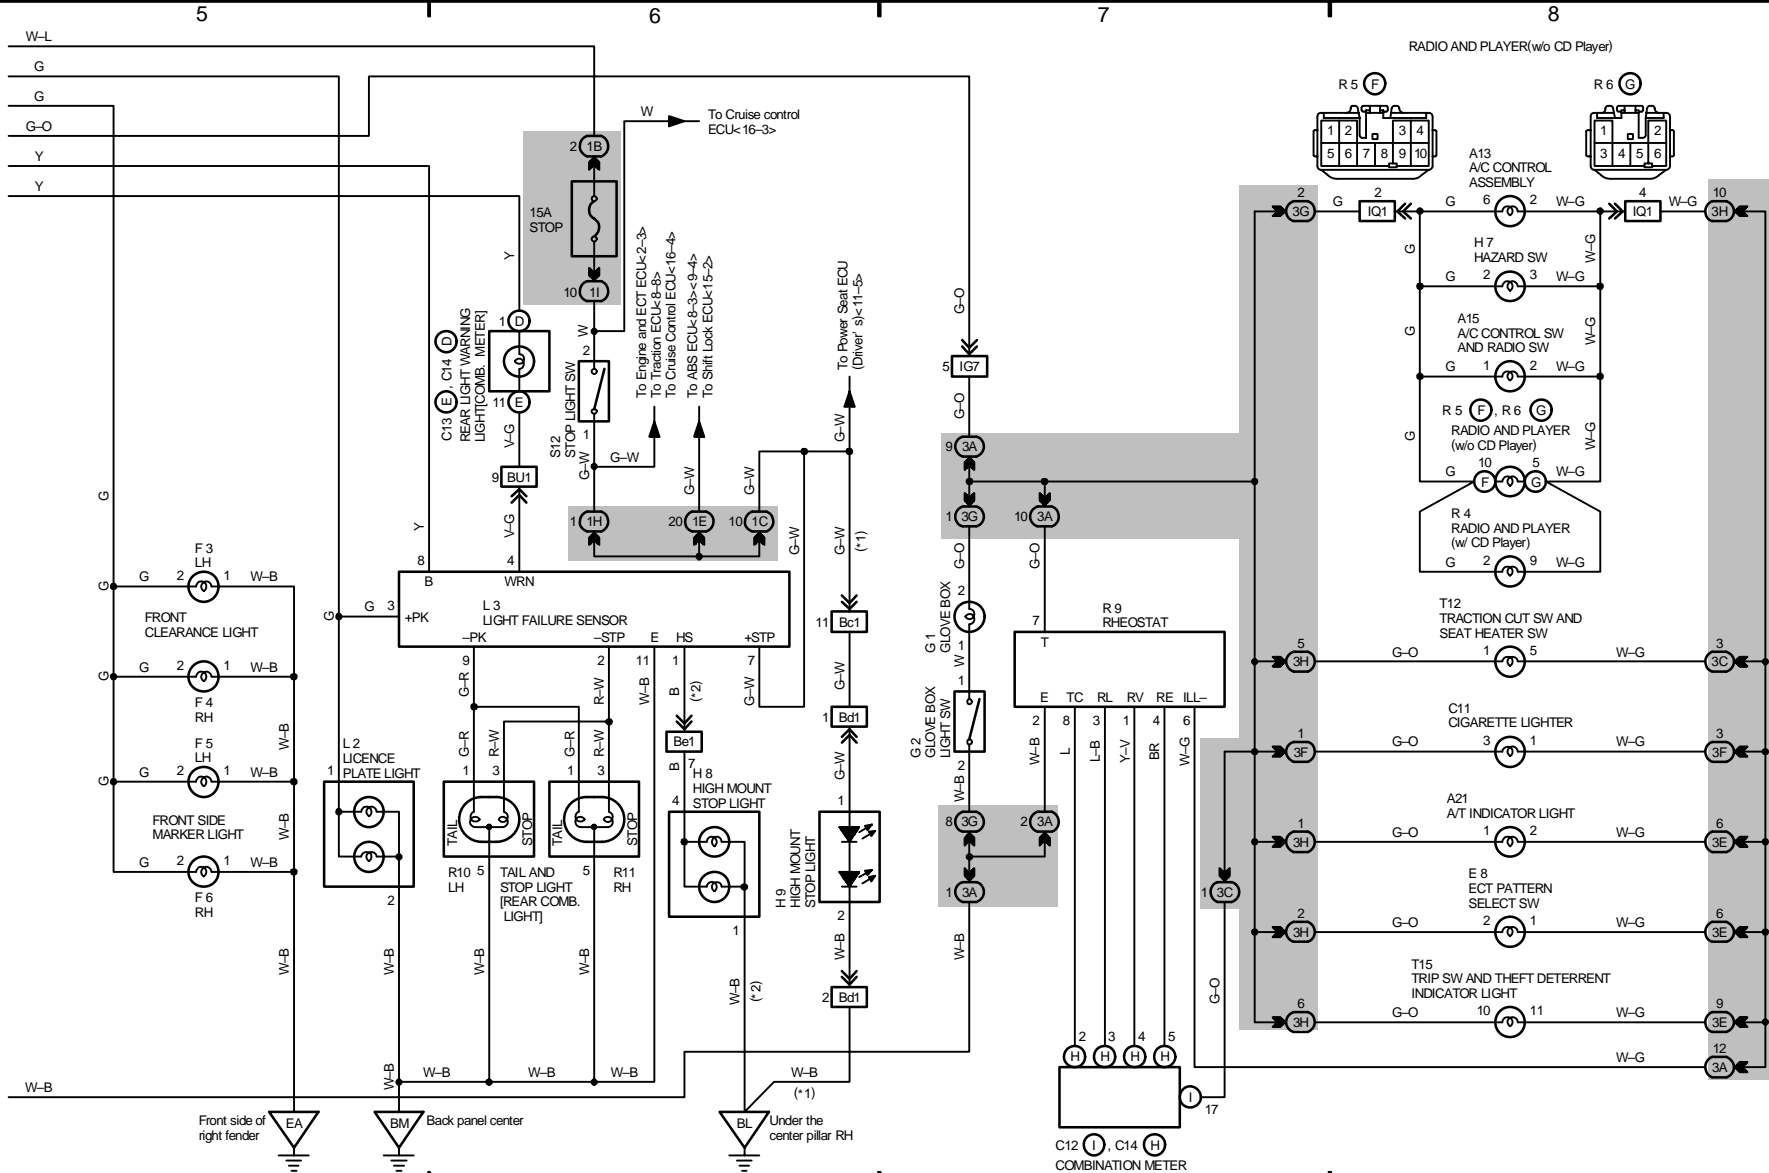

OVERALL ELECTRICAL WIRING DIAGRAM

5 LEXUS SC400

(Cont. next page)

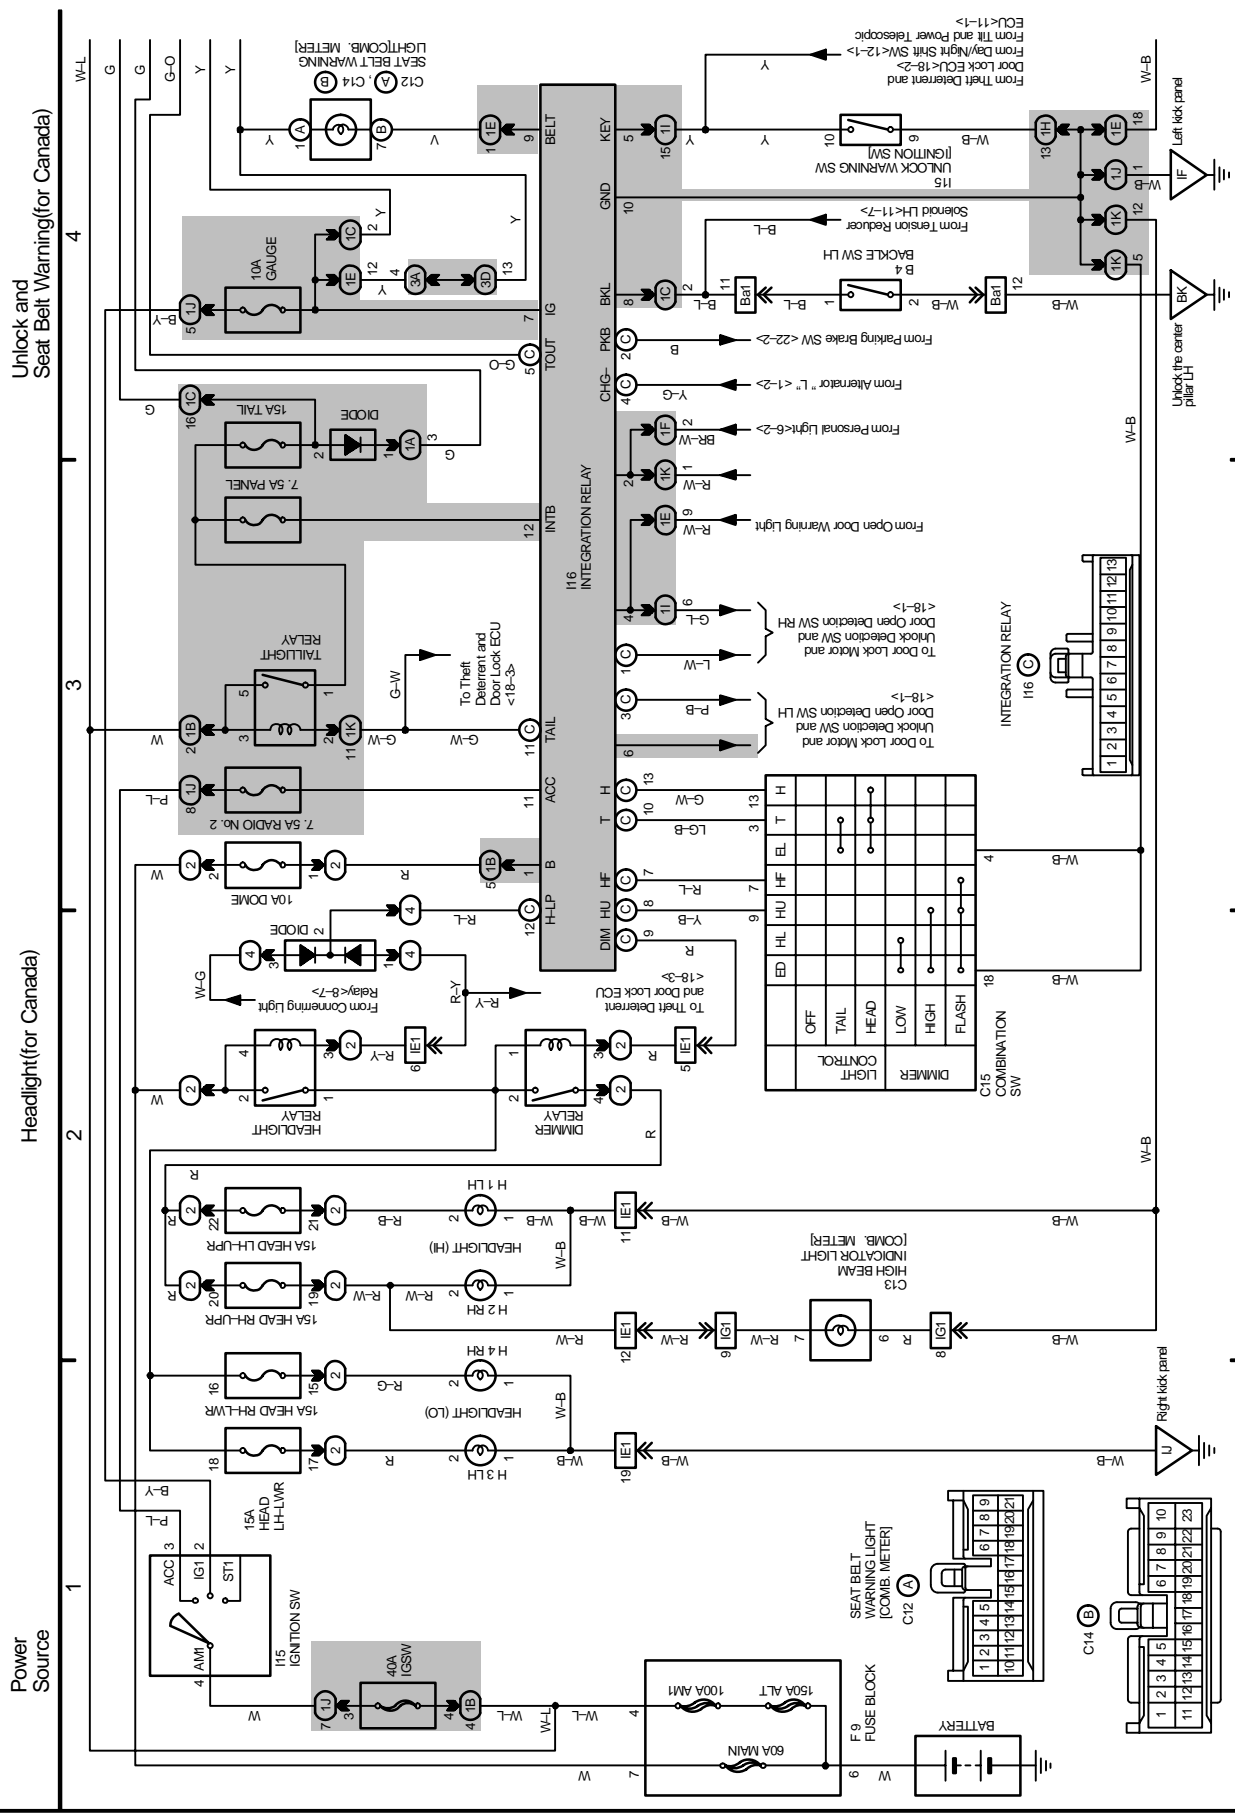


5 LEXUS SC400(Cont' d)

Taillight and Stop Light(for Canada)


Illumination(for Canada)

*1 : (w/ Rear Spoiler)
*2 : (w/o Rear Spoiler)

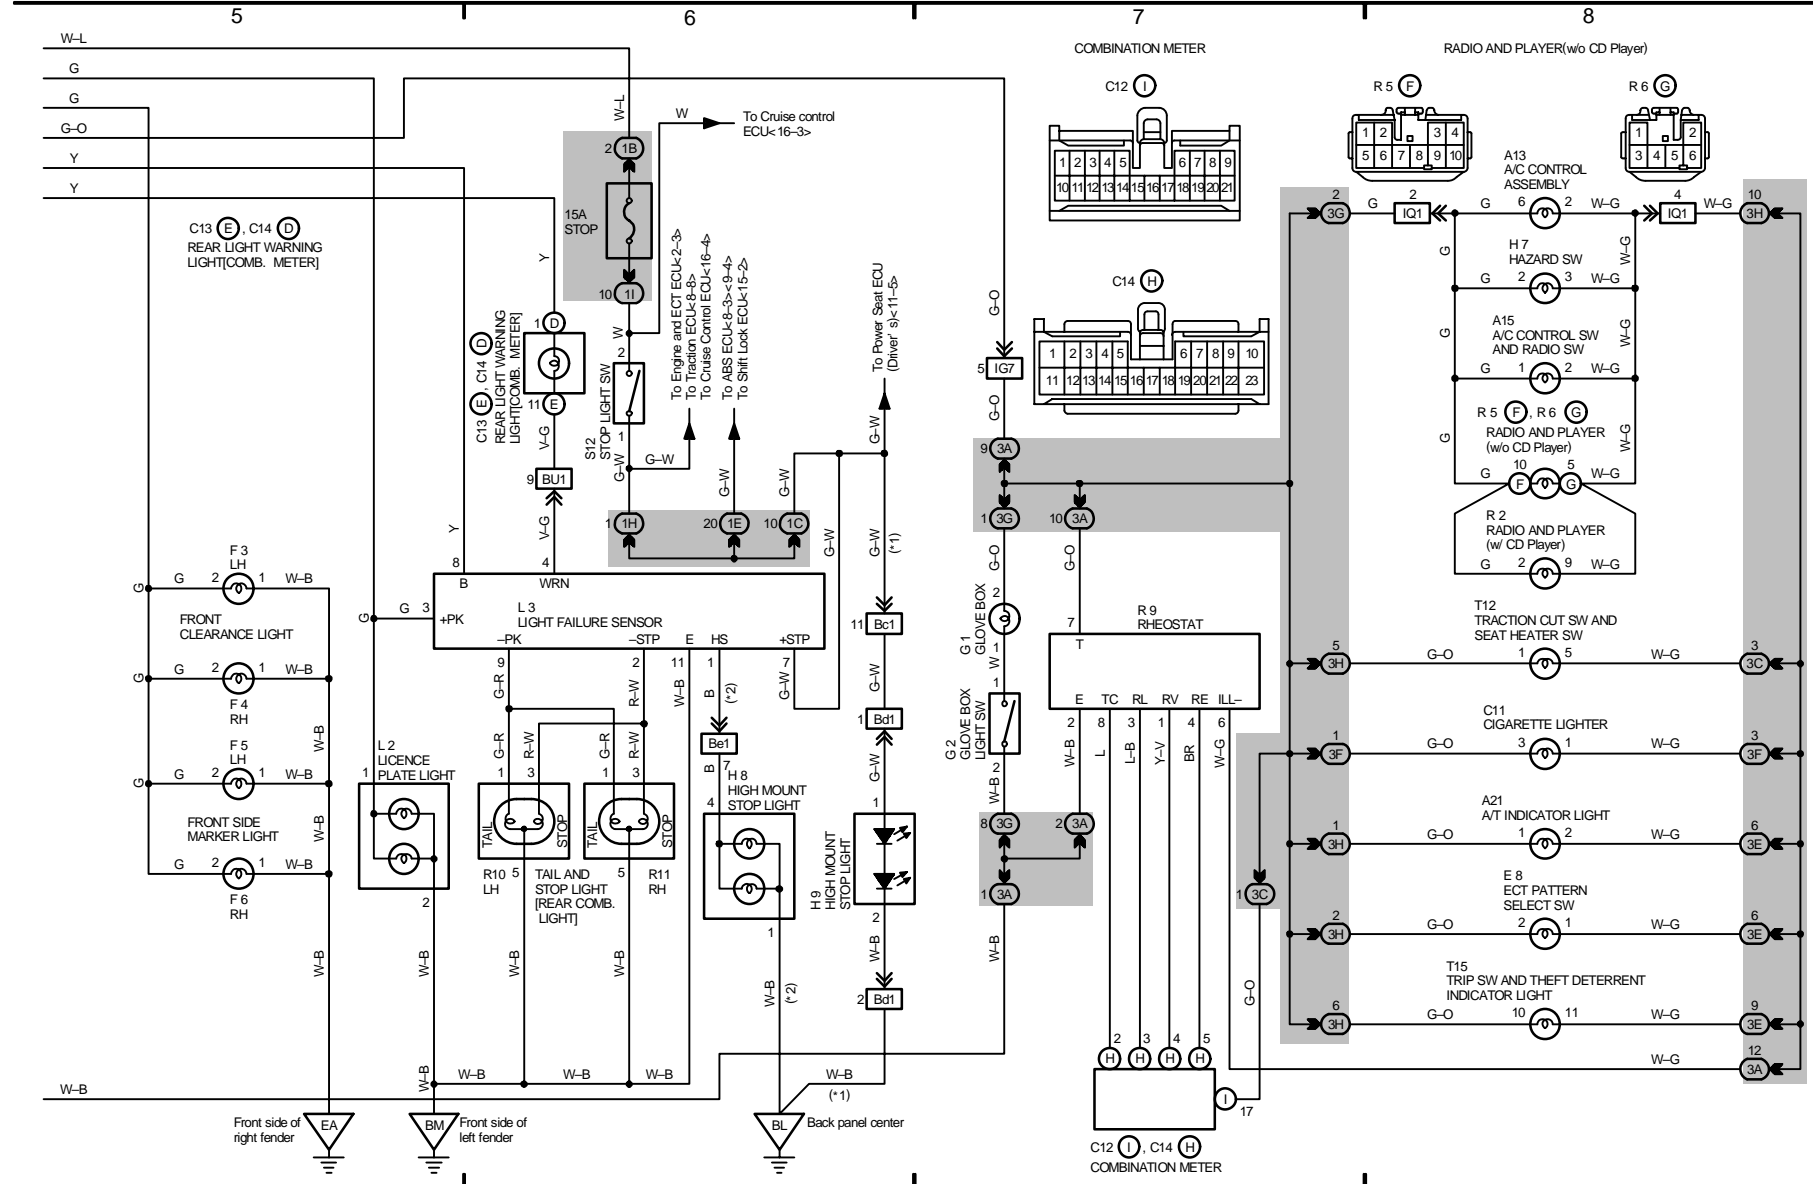


OVERALL ELECTRICAL WIRING DIAGRAM

6 LEXUS SC400

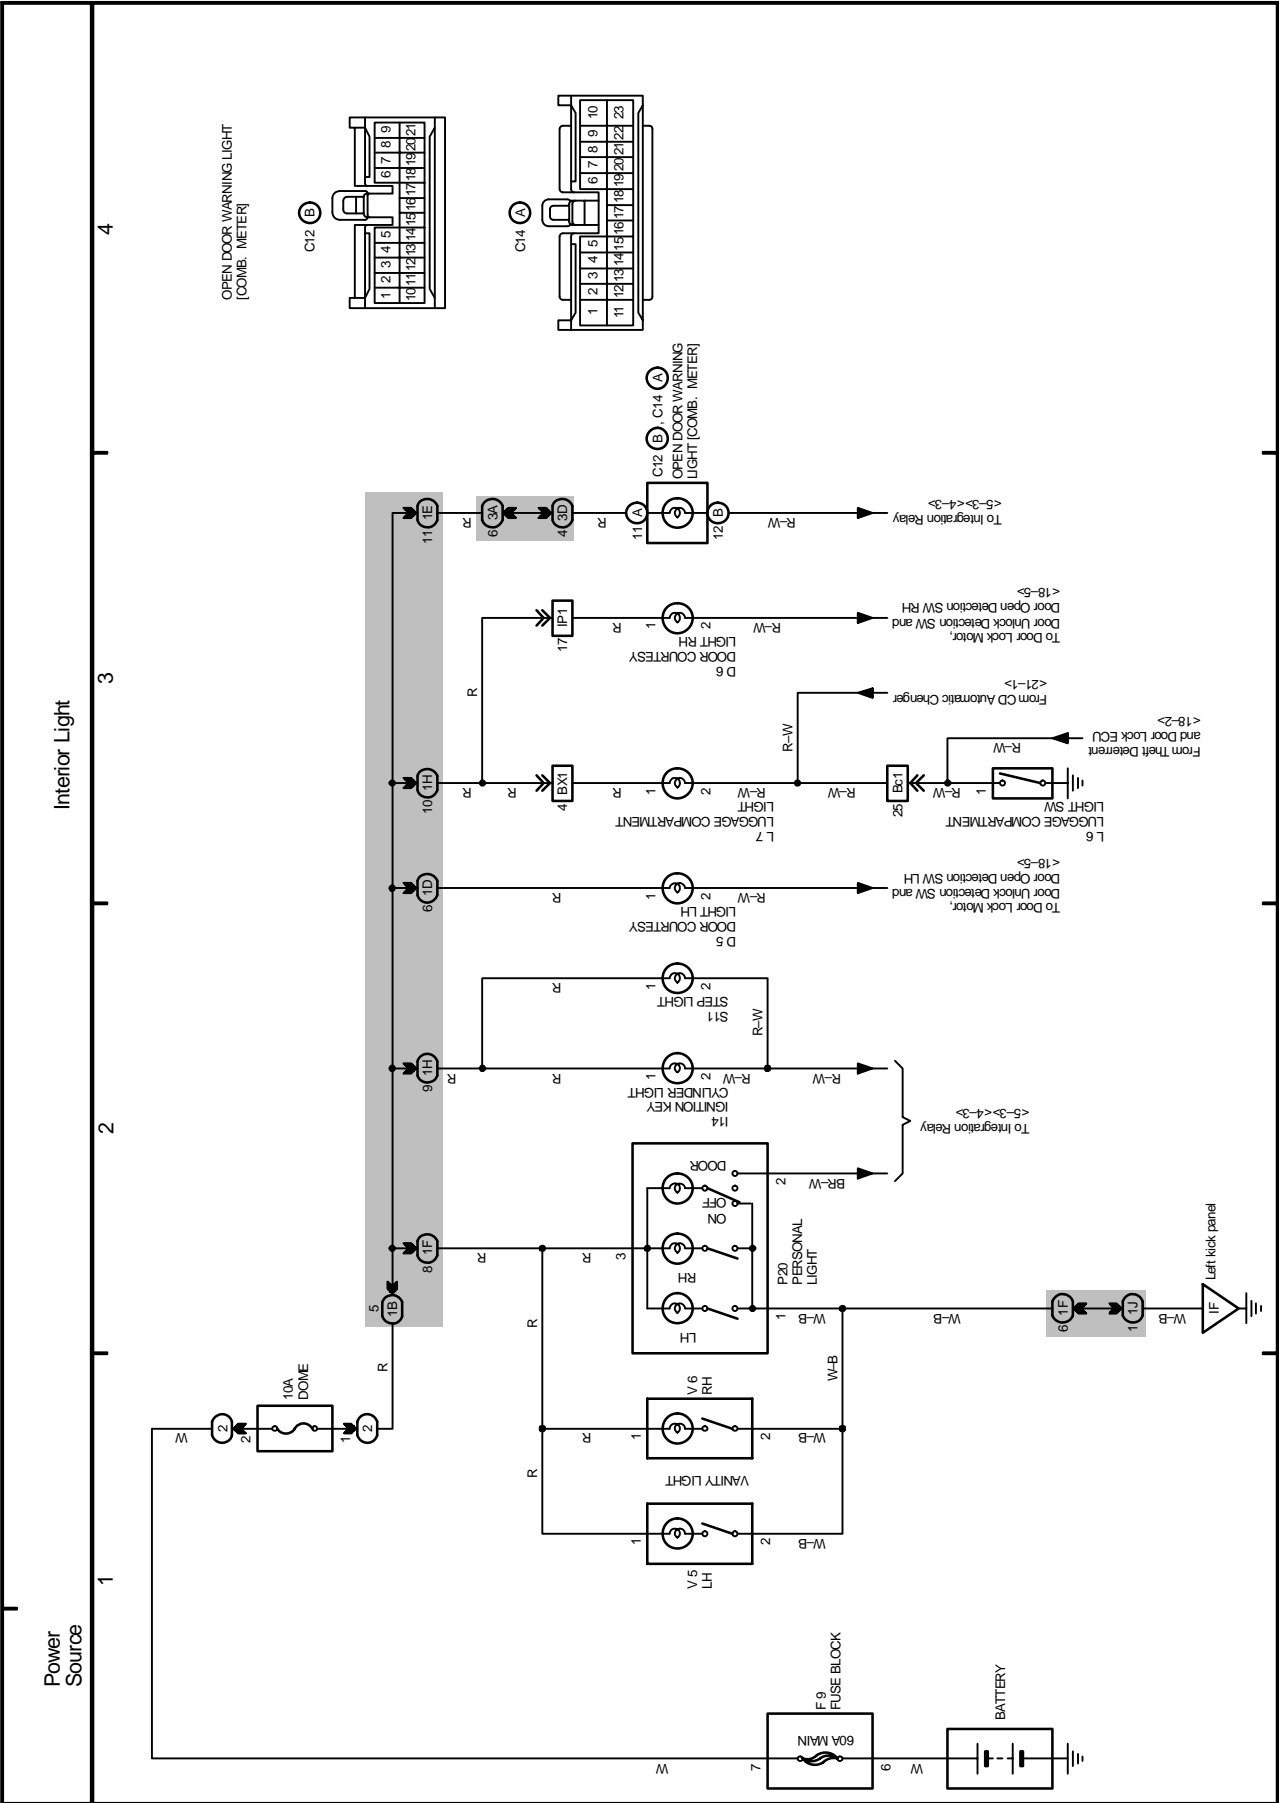


7 LEXUS SC400

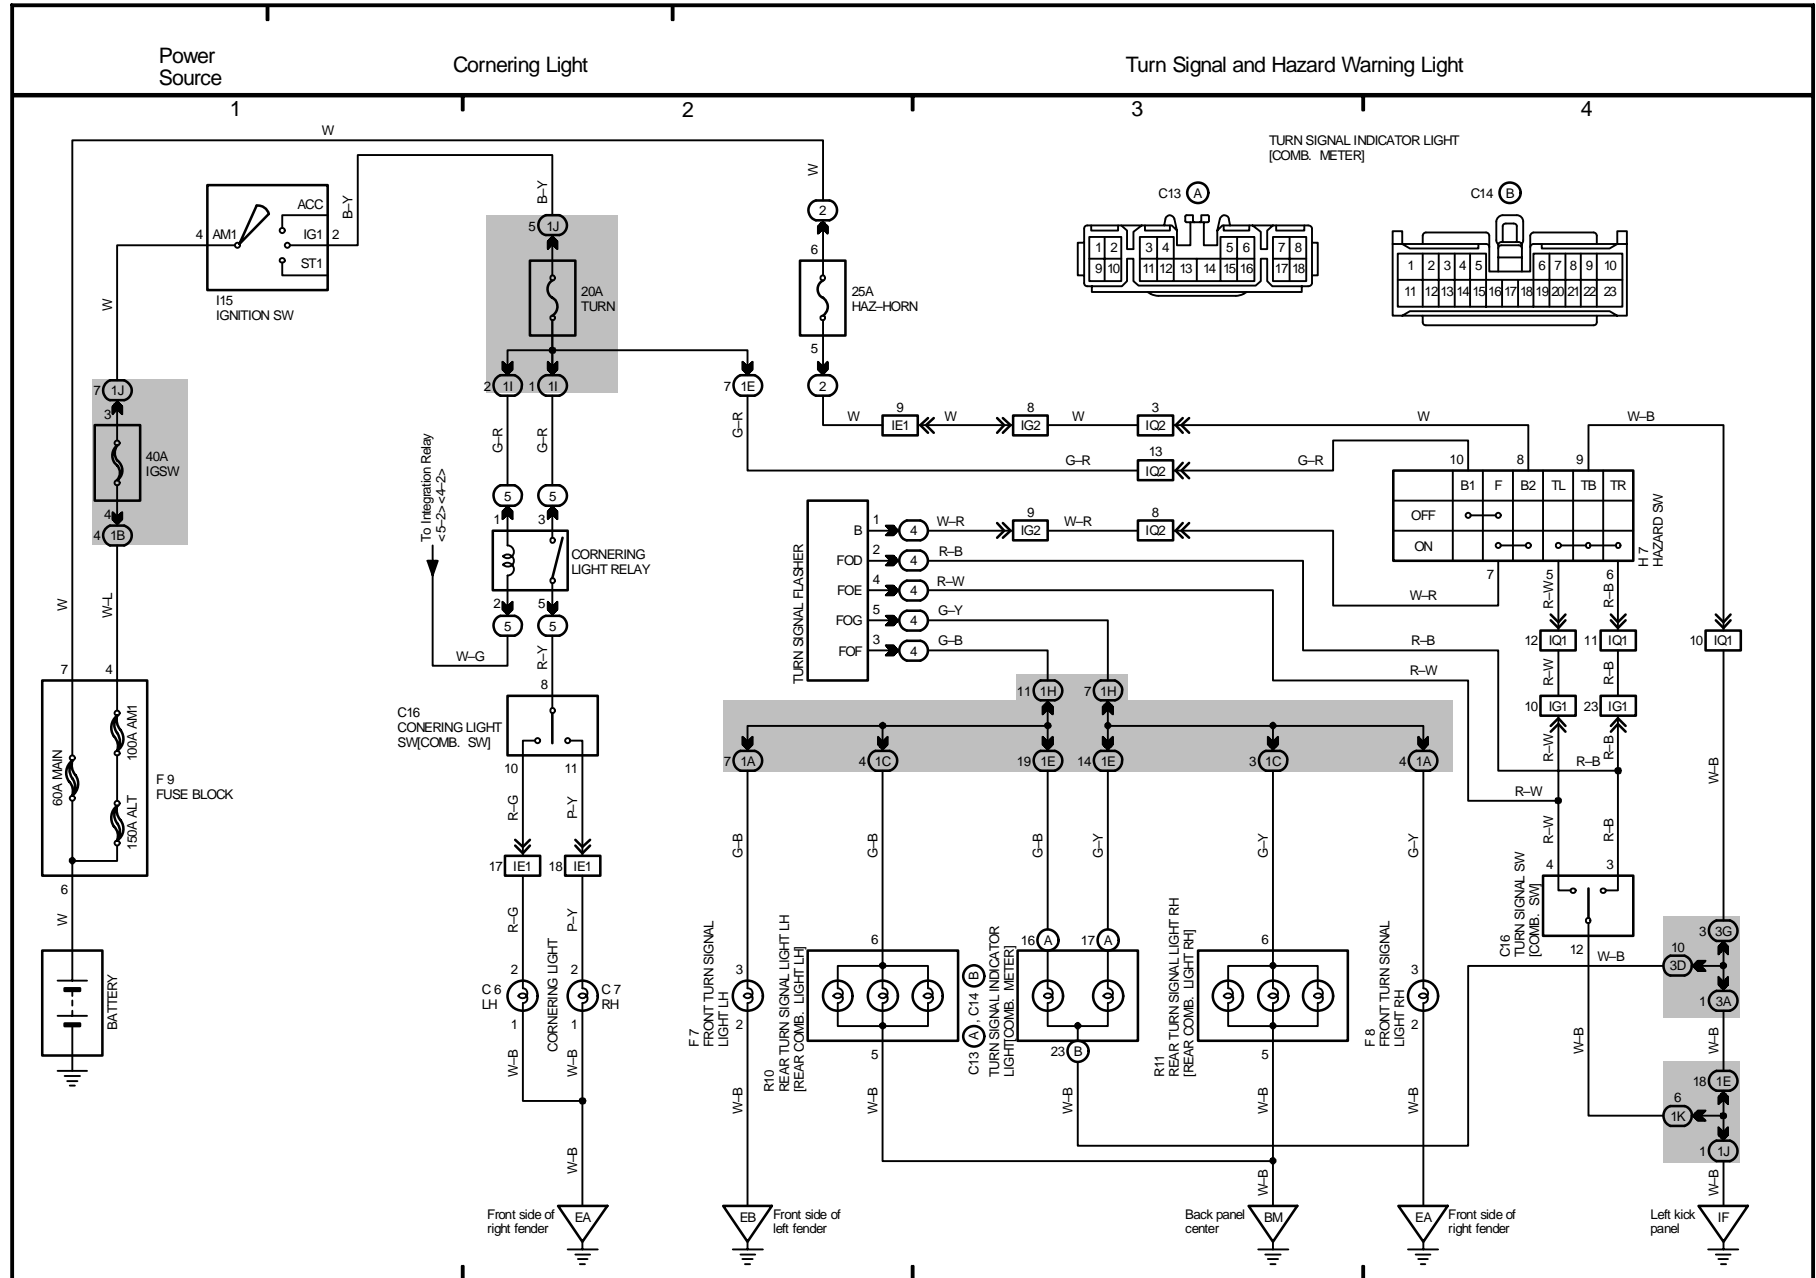

OVERALL ELECTRICAL WIRING DIAGRAM


8 LEXUS SC400

(Cont. next page)

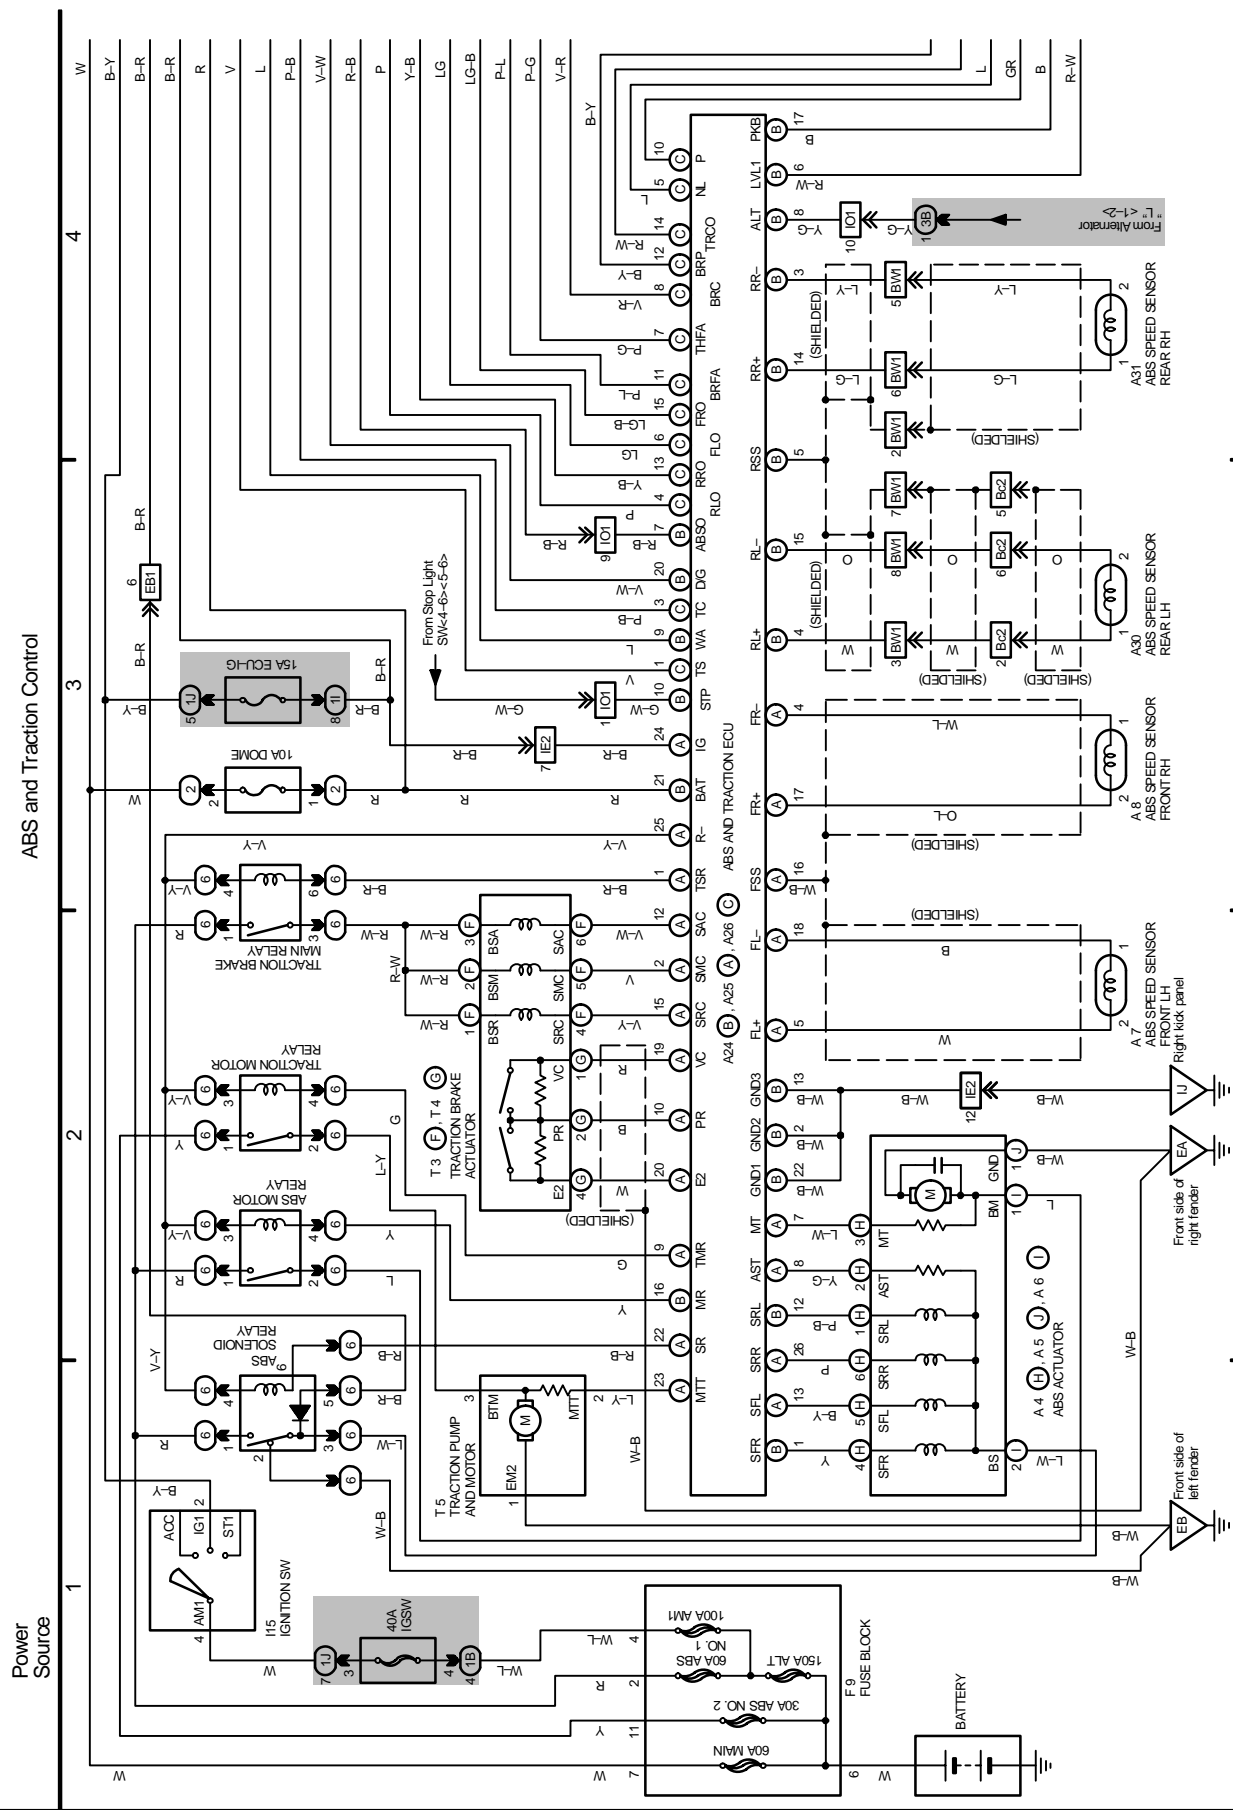


8 LEXUS SC400(Cont' d)

ABS and Traction Control

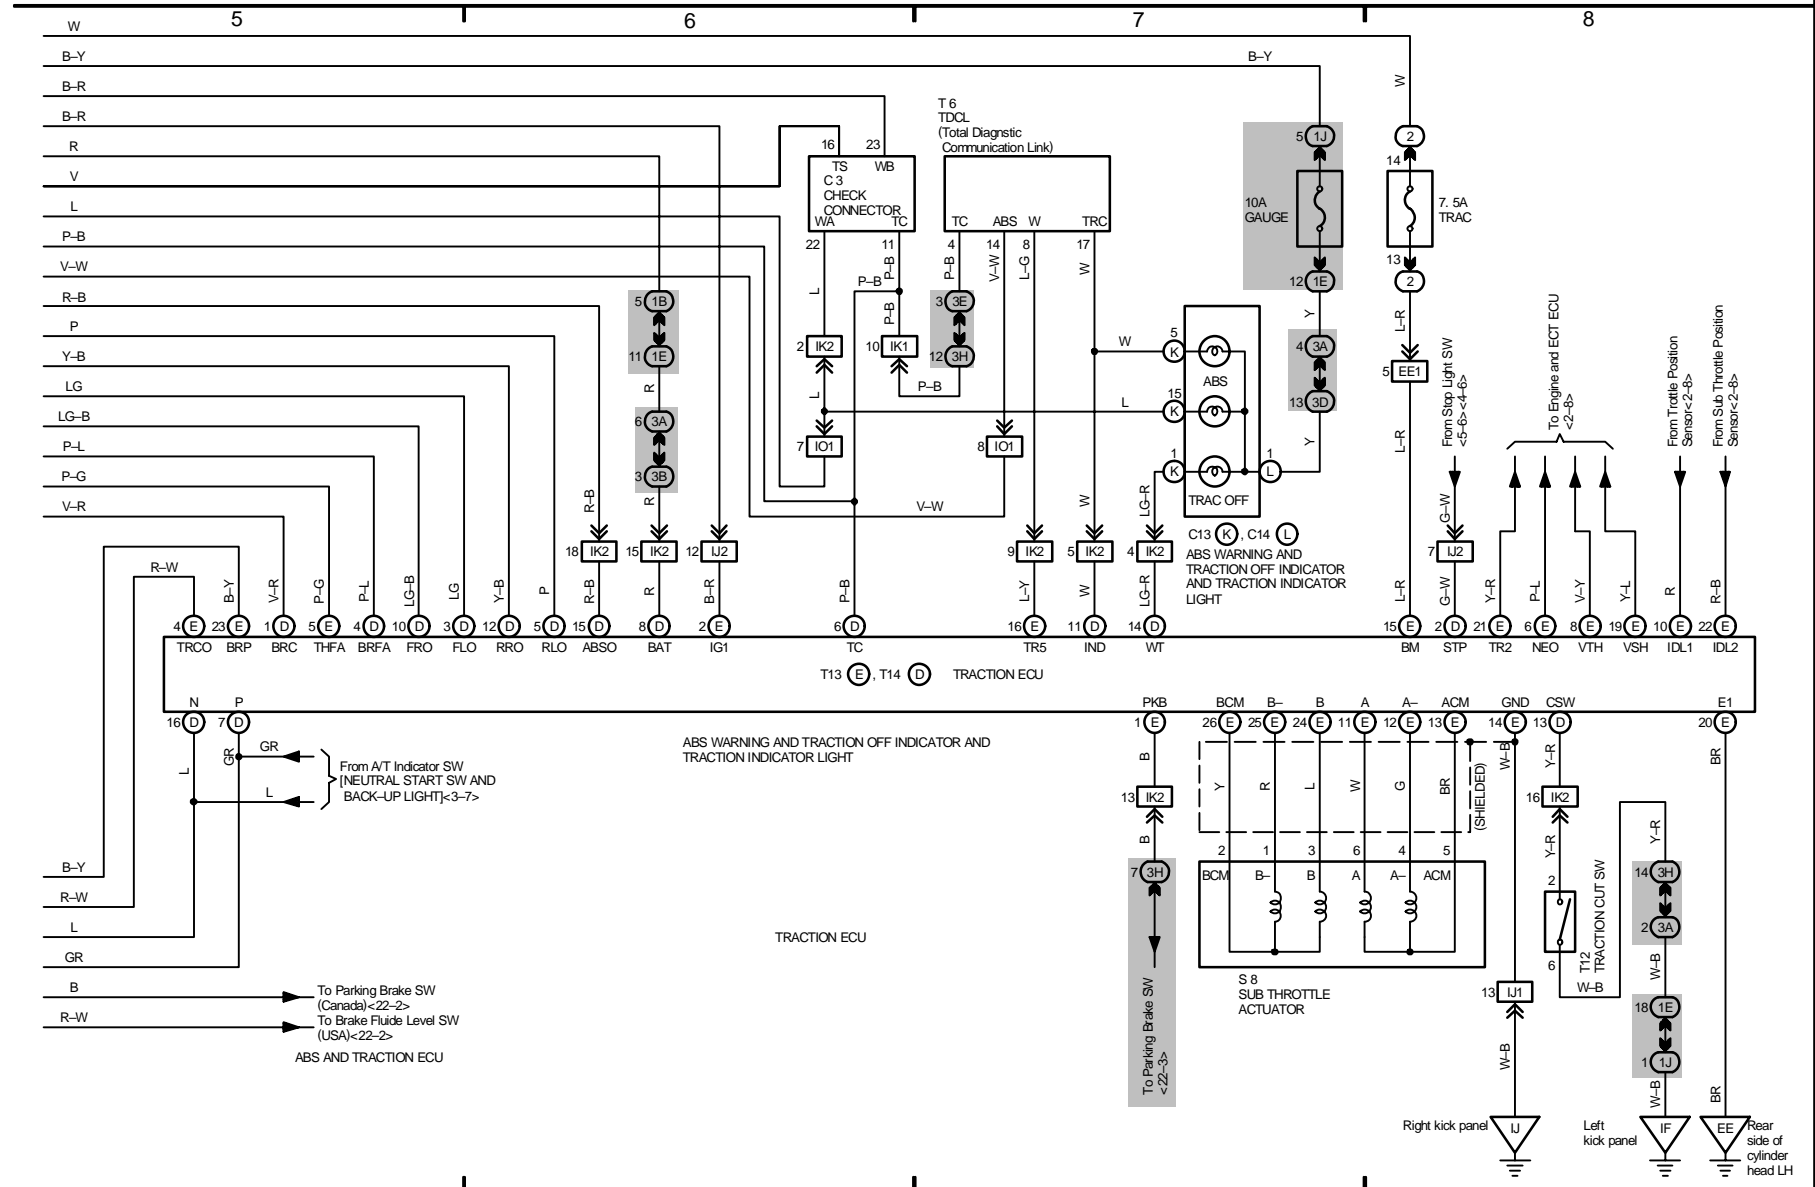

OVERALL ELECTRICAL WIRING DIAGRAM

9 LEXUS SC400

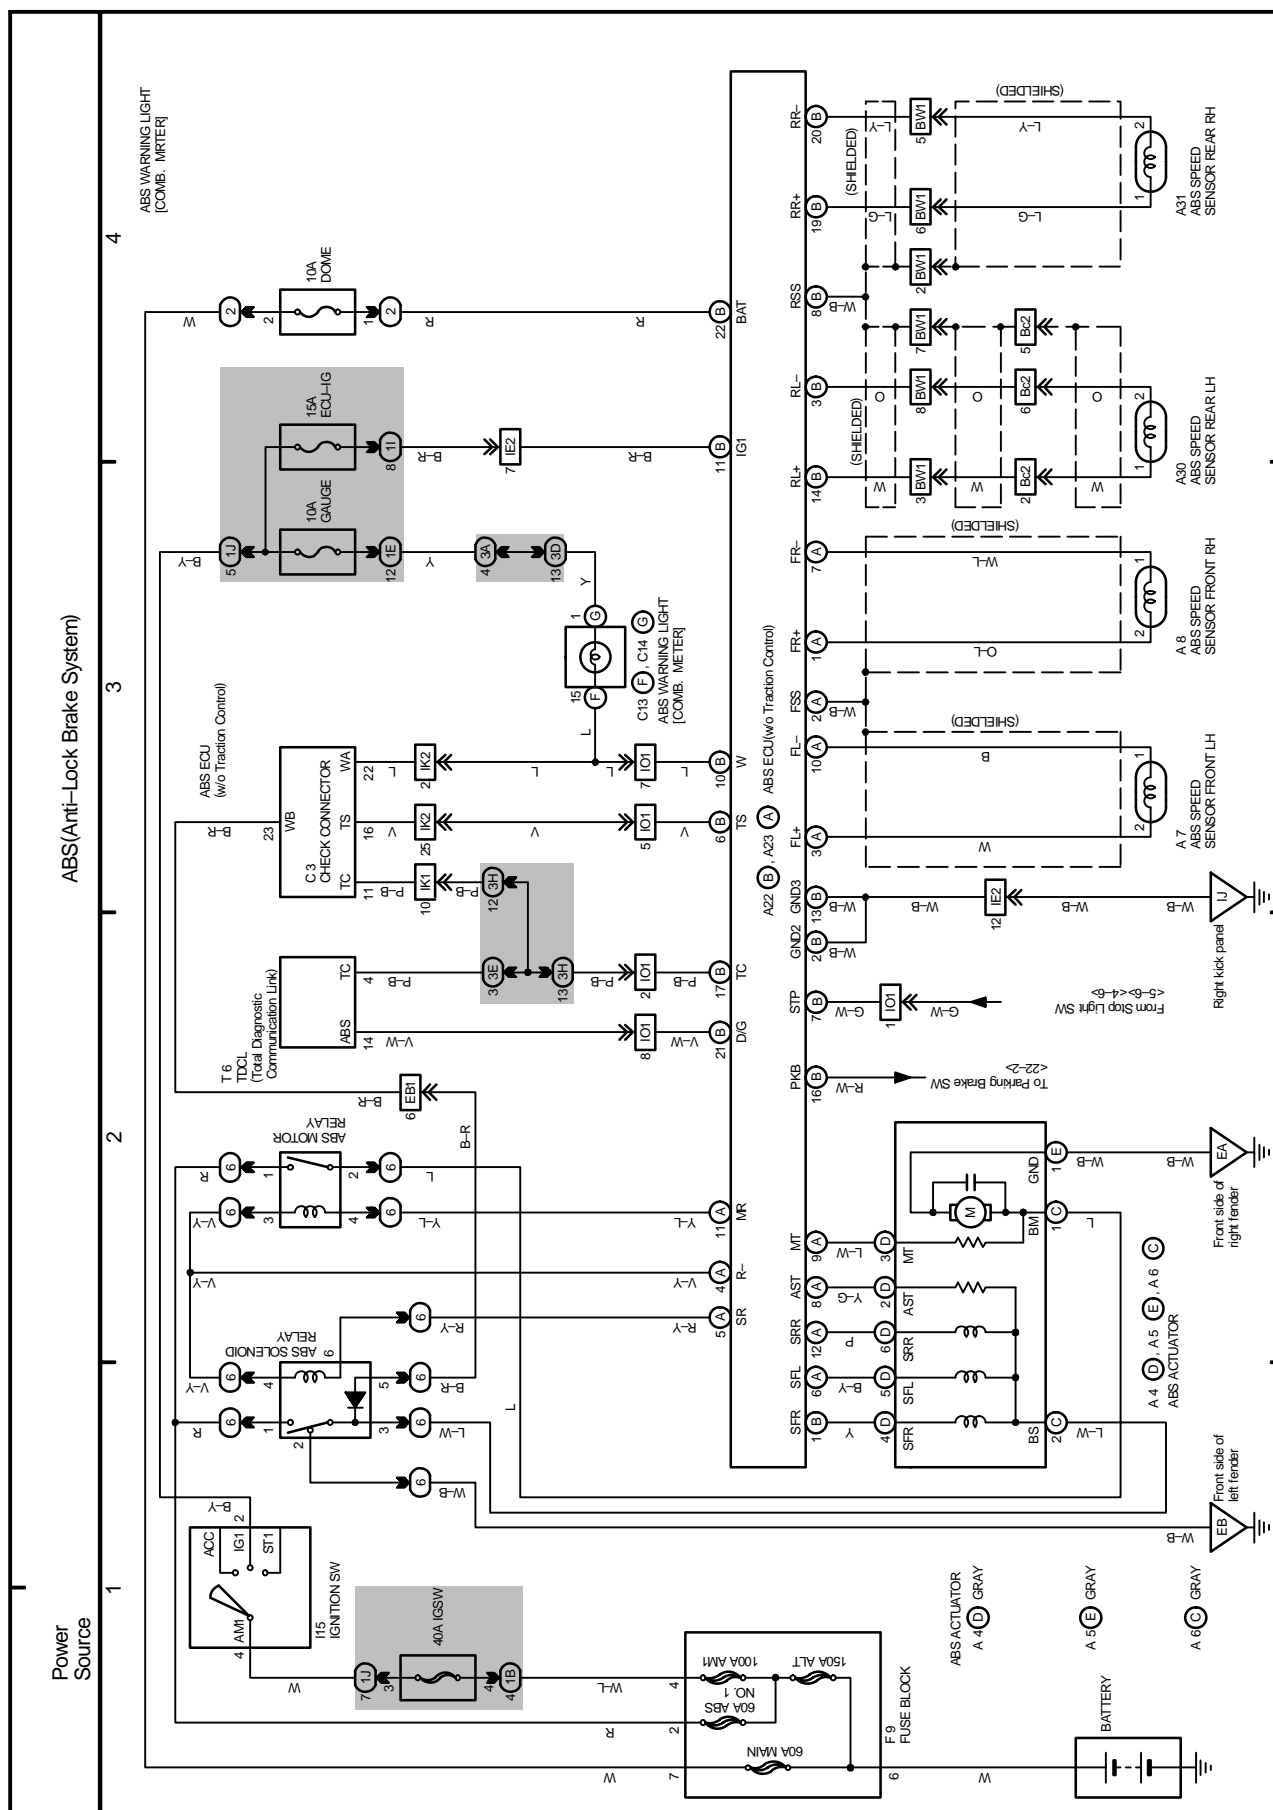

The diagram illustrates the electrical system for the Remote Control Mirror, divided into four main sections: 1. Power Source, 2. Remote Control Mirror, 3. Remote Control Mirror LH, and 4. Remote Control Mirror RH.

Section 1: Power Source

- W-L (Wire Left) and W-R (Wire Right) lines connect the Power Source to the Remote Control Mirror.
- ACC (Accessory) line connects to the Remote Control Mirror ECU.
- IG1 (Ignition 1) and ST1 (Starter 1) lines connect to the Remote Control Mirror ECU.
- 15A ALT (Alternator) and 100A AM1 (Main) lines connect to the FUSE BLOCK.
- BATTERY is connected to the FUSE BLOCK.

Section 2: Remote Control Mirror

- R18 REMOTE CONTROL MIRROR SW (Switch) is connected to the Remote Control Mirror ECU.
- R15A ECU-B (Electronic Control Unit - Body) and 7.5A RADIO No. 2 are connected to the Remote Control Mirror ECU.

Section 3: Remote Control Mirror LH

- R16 REMOTE CONTROL MIRROR LH is connected to the Remote Control Mirror ECU.
- VSRL (Vertical Stop Right Left), VC (Vertical Control), HSRL (Horizontal Stop Right Left), and E1 (Electrical 1) lines connect to the Remote Control Mirror ECU.
- VSRL, VC, HSRL, and E1 lines connect to the Remote Control Mirror LH.

Section 4: Remote Control Mirror RH

- R17 REMOTE CONTROL MIRROR RH is connected to the Remote Control Mirror ECU.
- VSRR (Vertical Stop Right Right), VC (Vertical Control), HSRR (Horizontal Stop Right Right), and E1 (Electrical 1) lines connect to the Remote Control Mirror ECU.
- VSRR, VC, HSRR, and E1 lines connect to the Remote Control Mirror RH.

Remote Control Mirror ECU

- R7 (B) and R8 (A) are connected to the Remote Control Mirror ECU.
- W (Wire) line connects to the Remote Control Mirror ECU.
- IG (Instrument panel brace LH) is connected to the Remote Control Mirror ECU.


Wiring Details

- W-L and W-R lines connect the Power Source to the Remote Control Mirror.
- ACC line connects to the Remote Control Mirror ECU.
- IG1 and ST1 lines connect to the Remote Control Mirror ECU.
- 15A ALT and 100A AM1 lines connect to the FUSE BLOCK.
- BATTERY is connected to the FUSE BLOCK.
- VSRL, VC, HSRL, and E1 lines connect to the Remote Control Mirror LH.
- VSRR, VC, HSRR, and E1 lines connect to the Remote Control Mirror RH.
- W (Wire) line connects to the Remote Control Mirror ECU.
- IG (Instrument panel brace LH) is connected to the Remote Control Mirror ECU.

OVERALL ELECTRICAL WIRING DIAGRAM

11 LEXUS SC400


(Cont. next page)

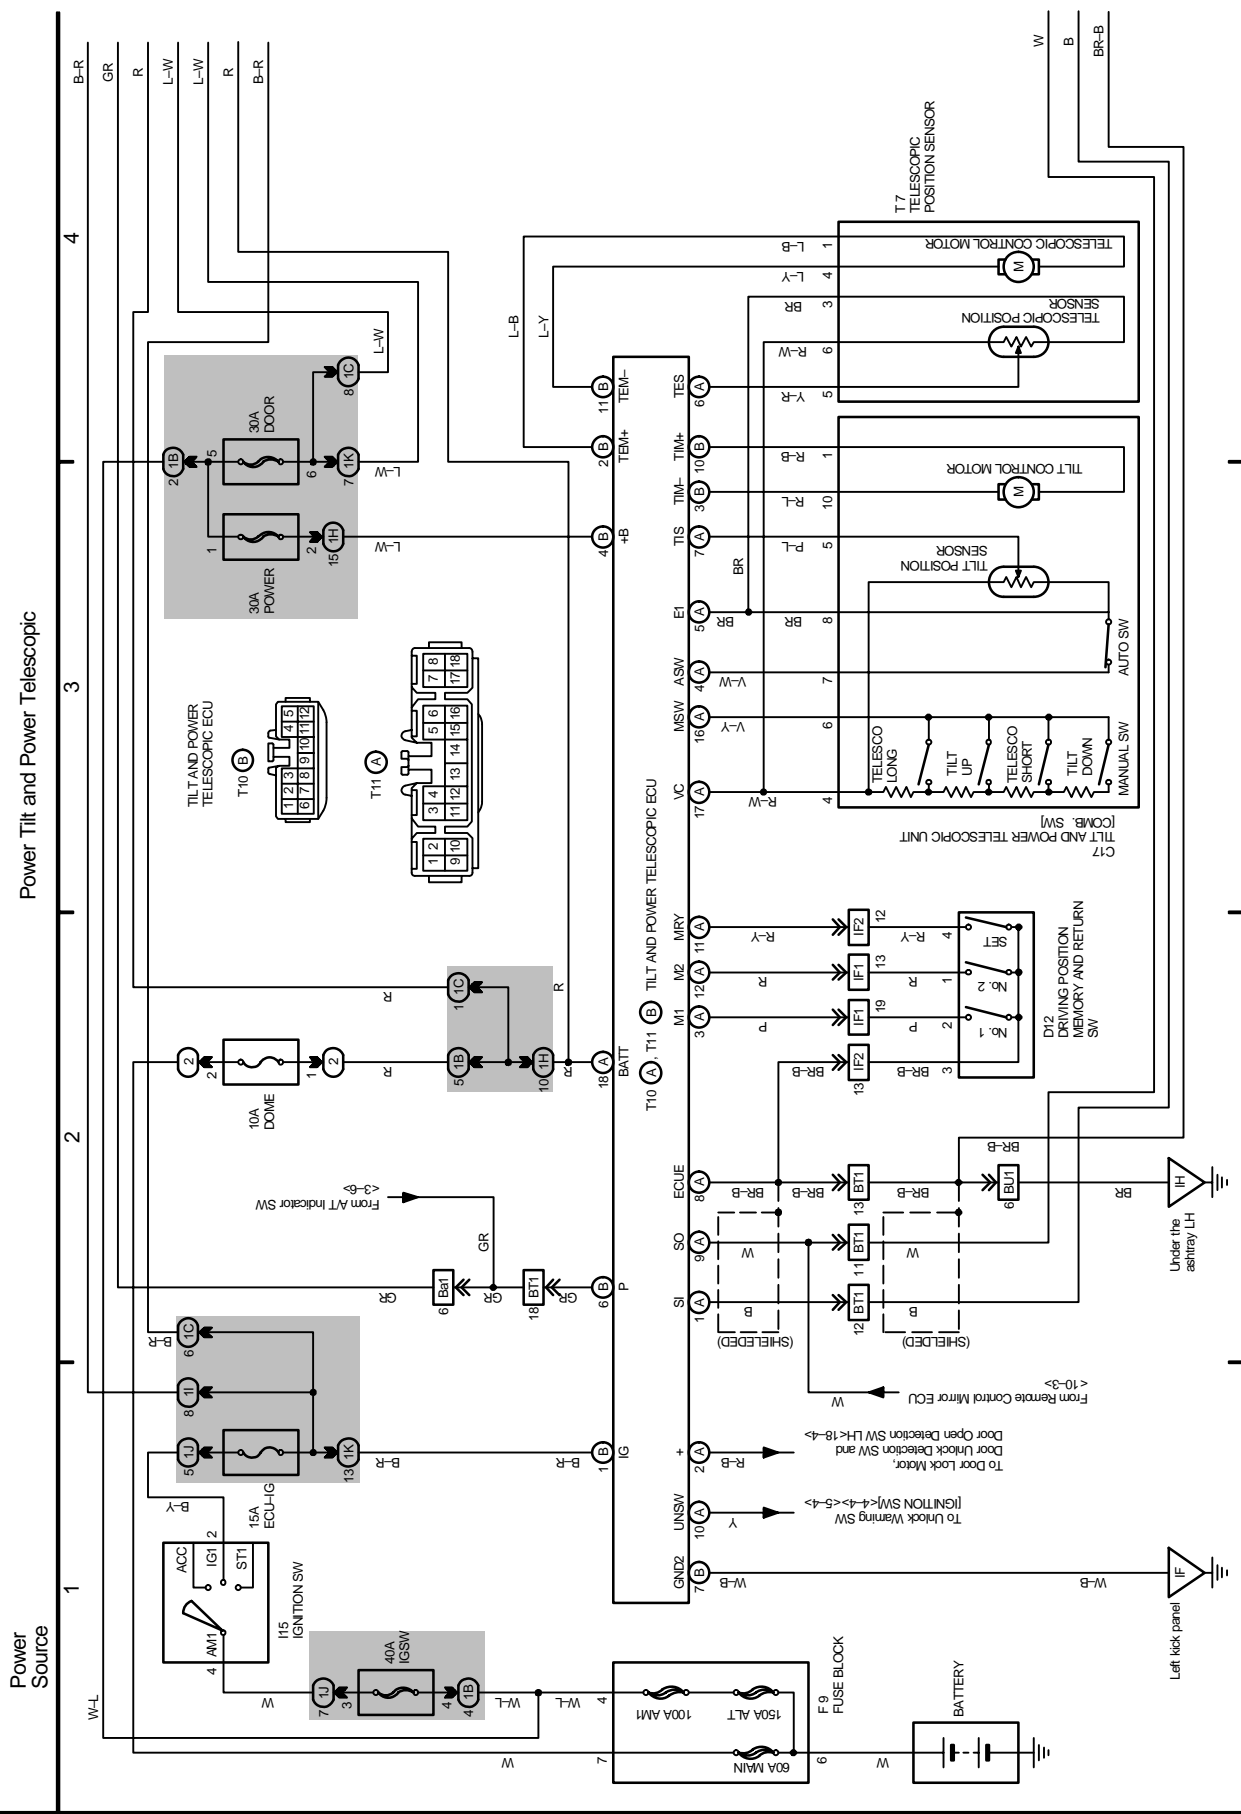

[illegible]

OVERALL ELECTRICAL WIRING DIAGRAM


12 LEXUS SC400

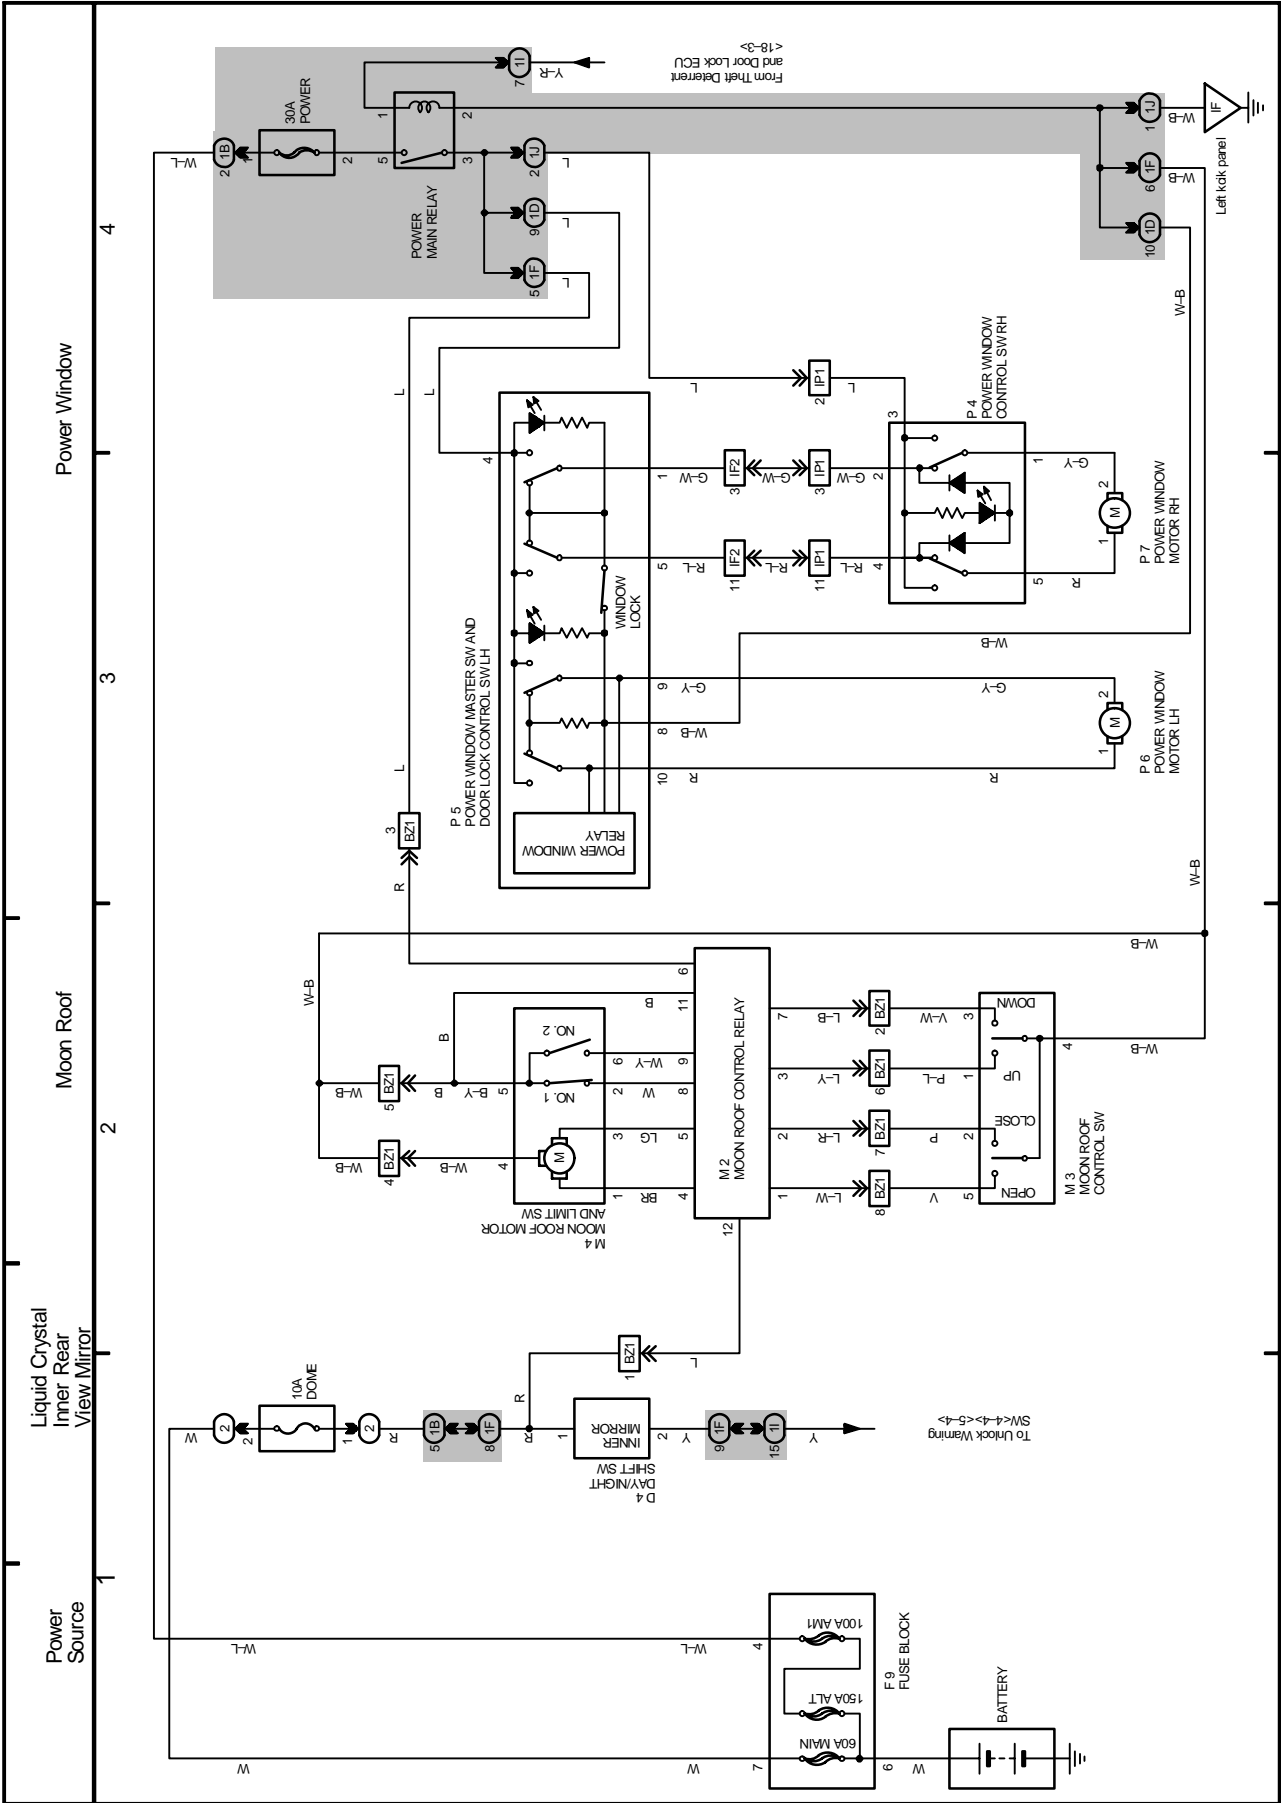


[illegible]

OVERALL ELECTRICAL WIRING DIAGRAM

14 LEXUS SC400

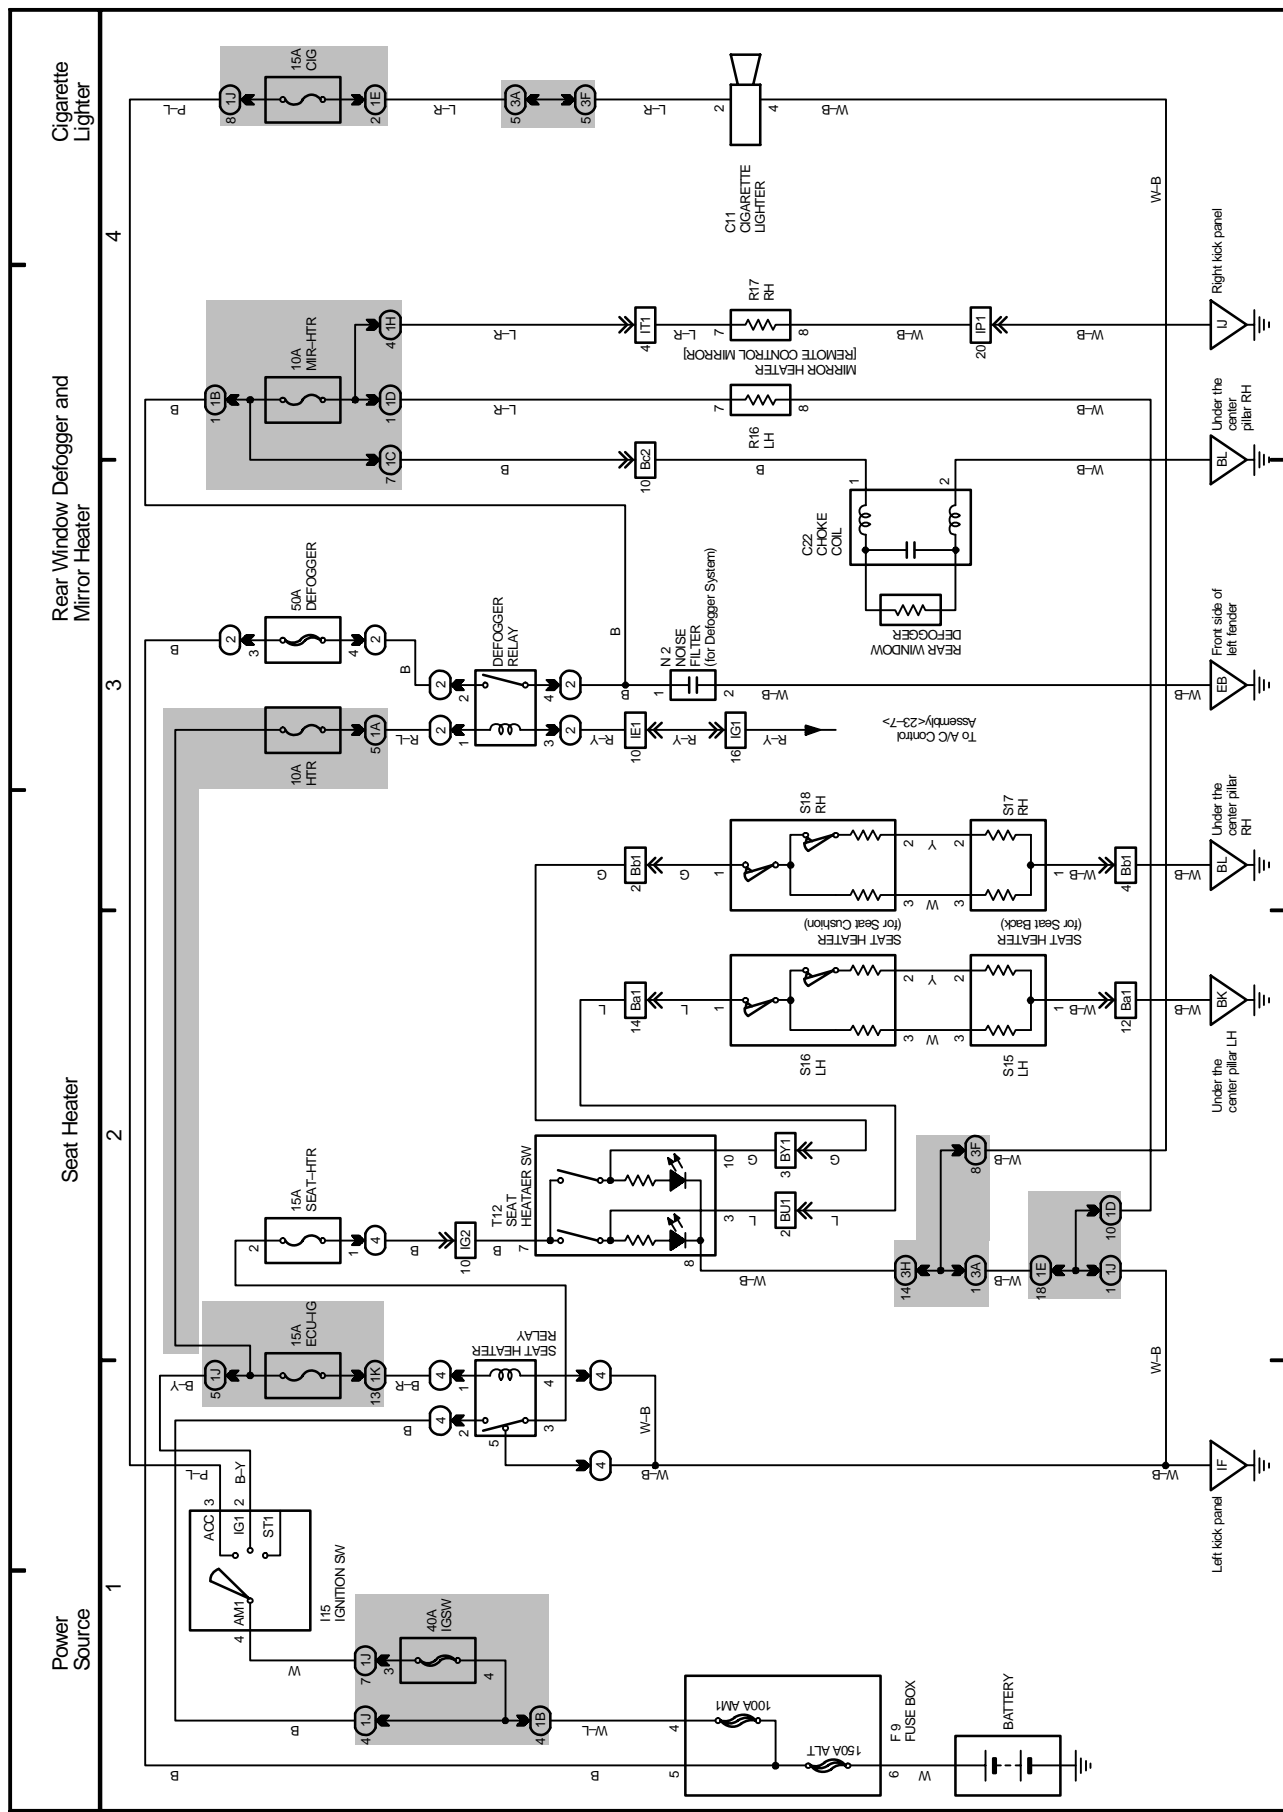


15 LEXUS SC400

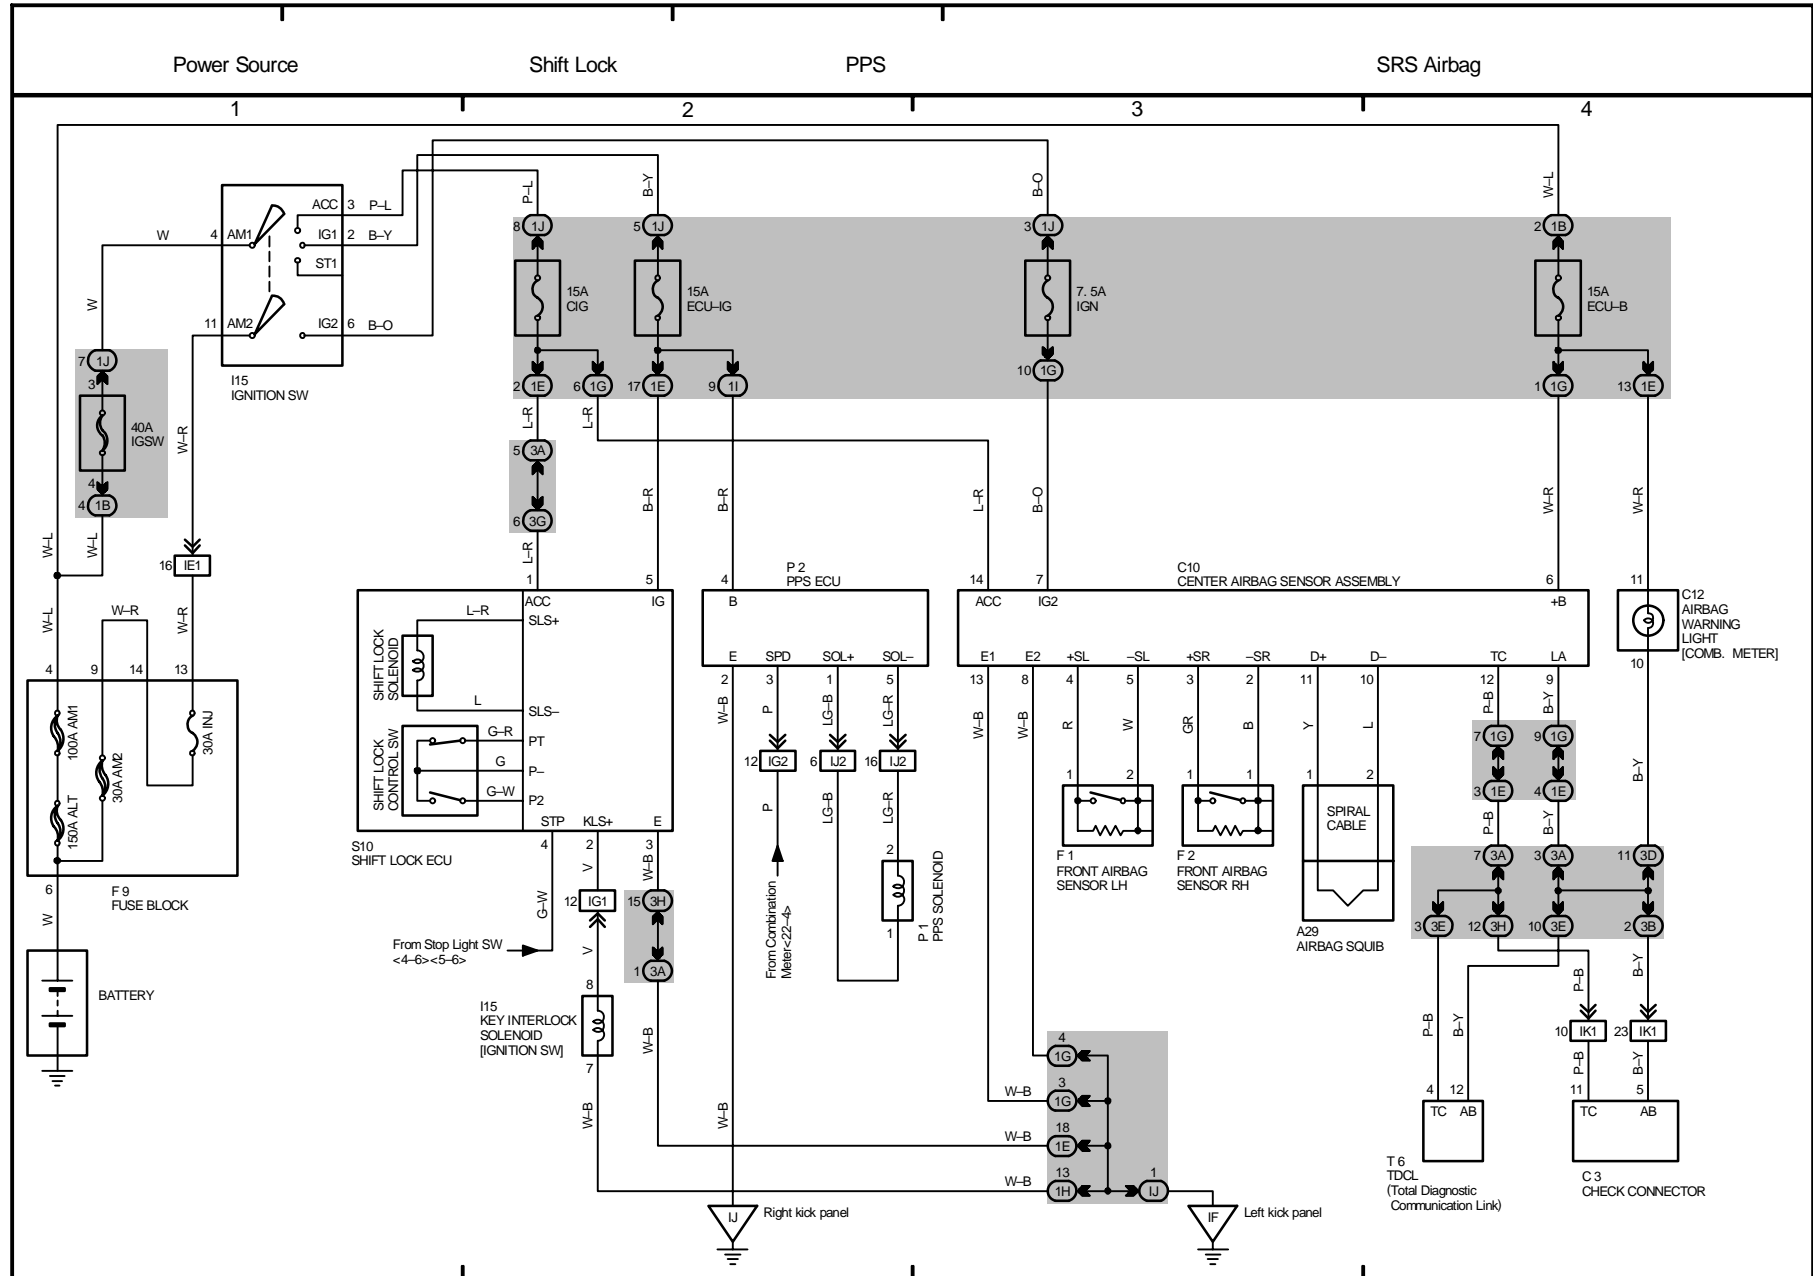


OVERALL ELECTRICAL WIRING DIAGRAM

16 LEXUS SC400

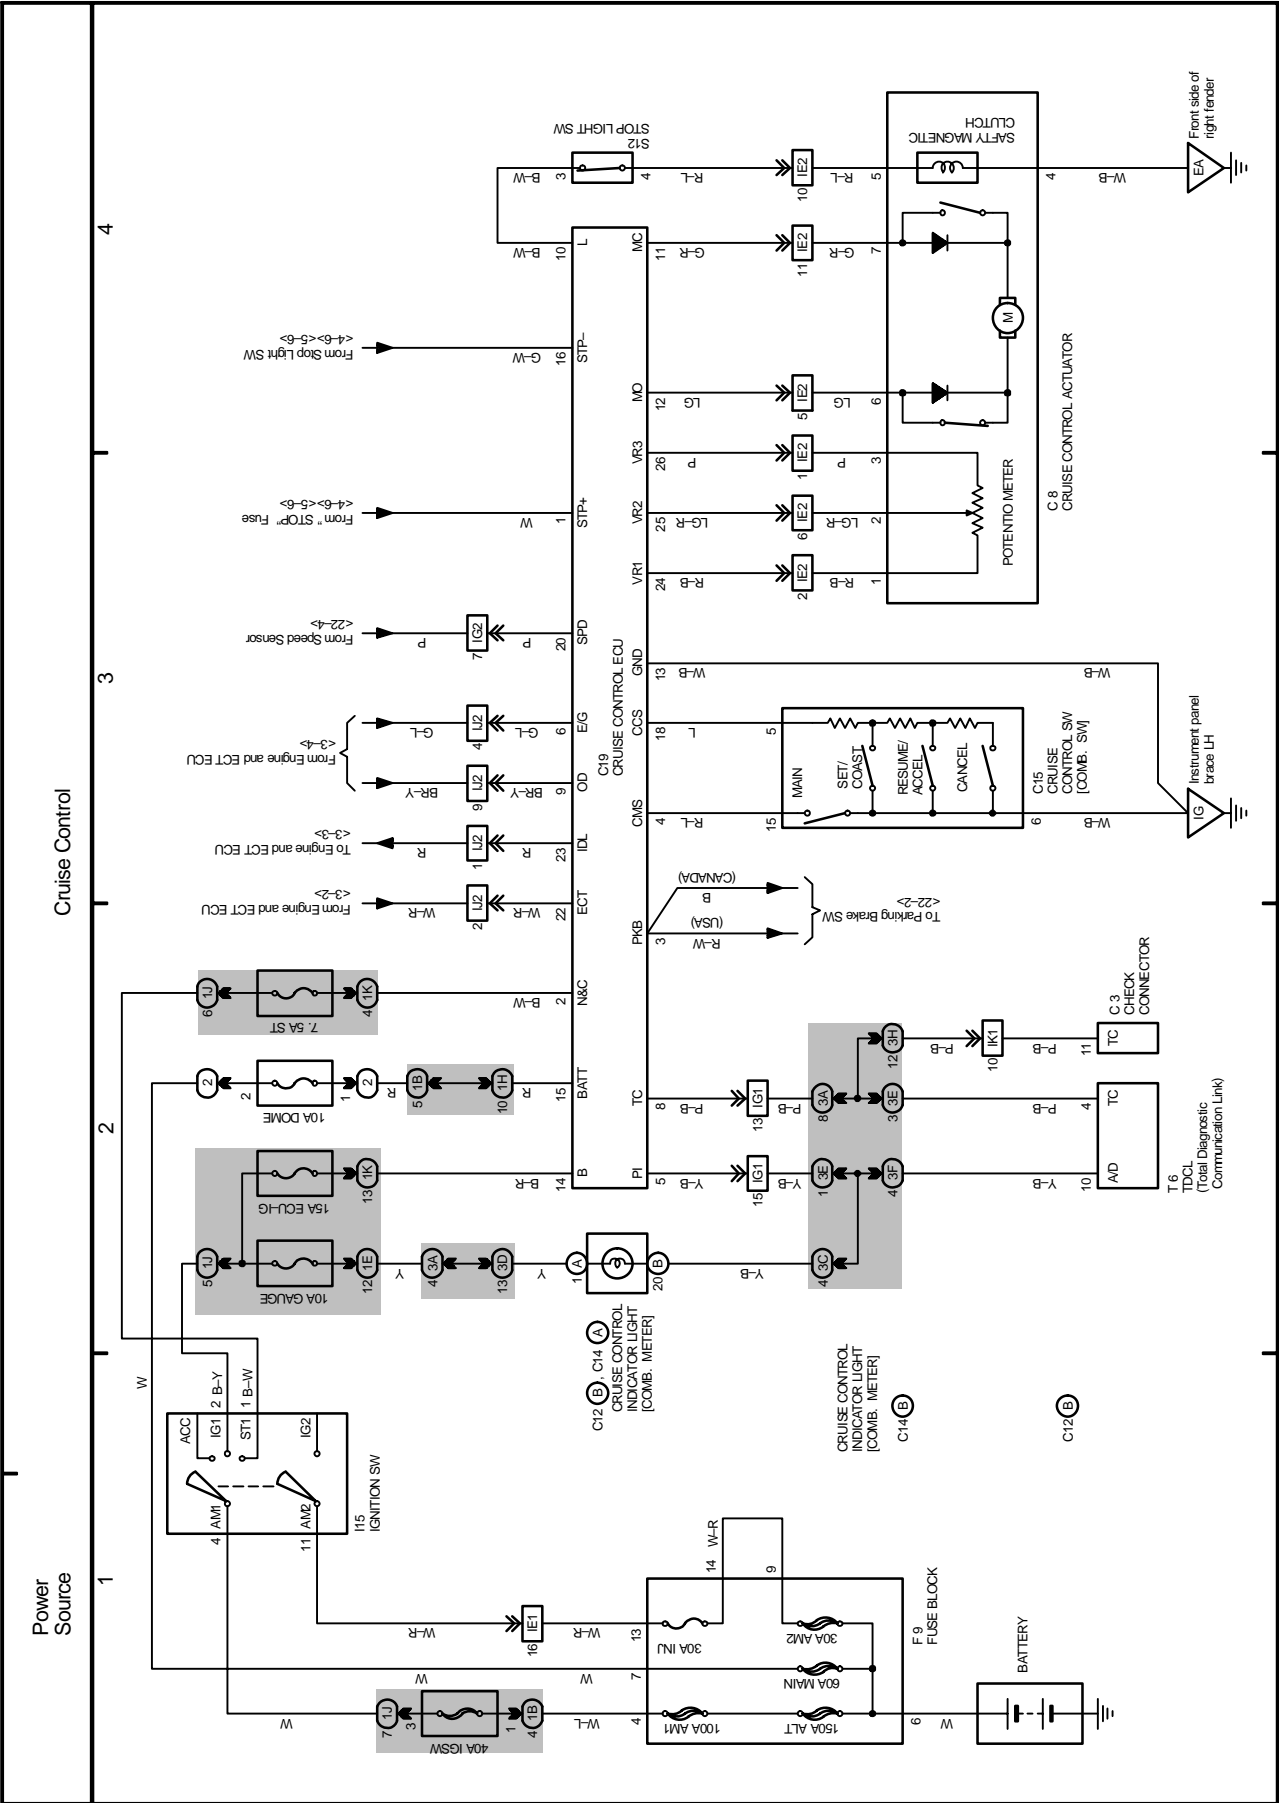


17 LEXUS SC400

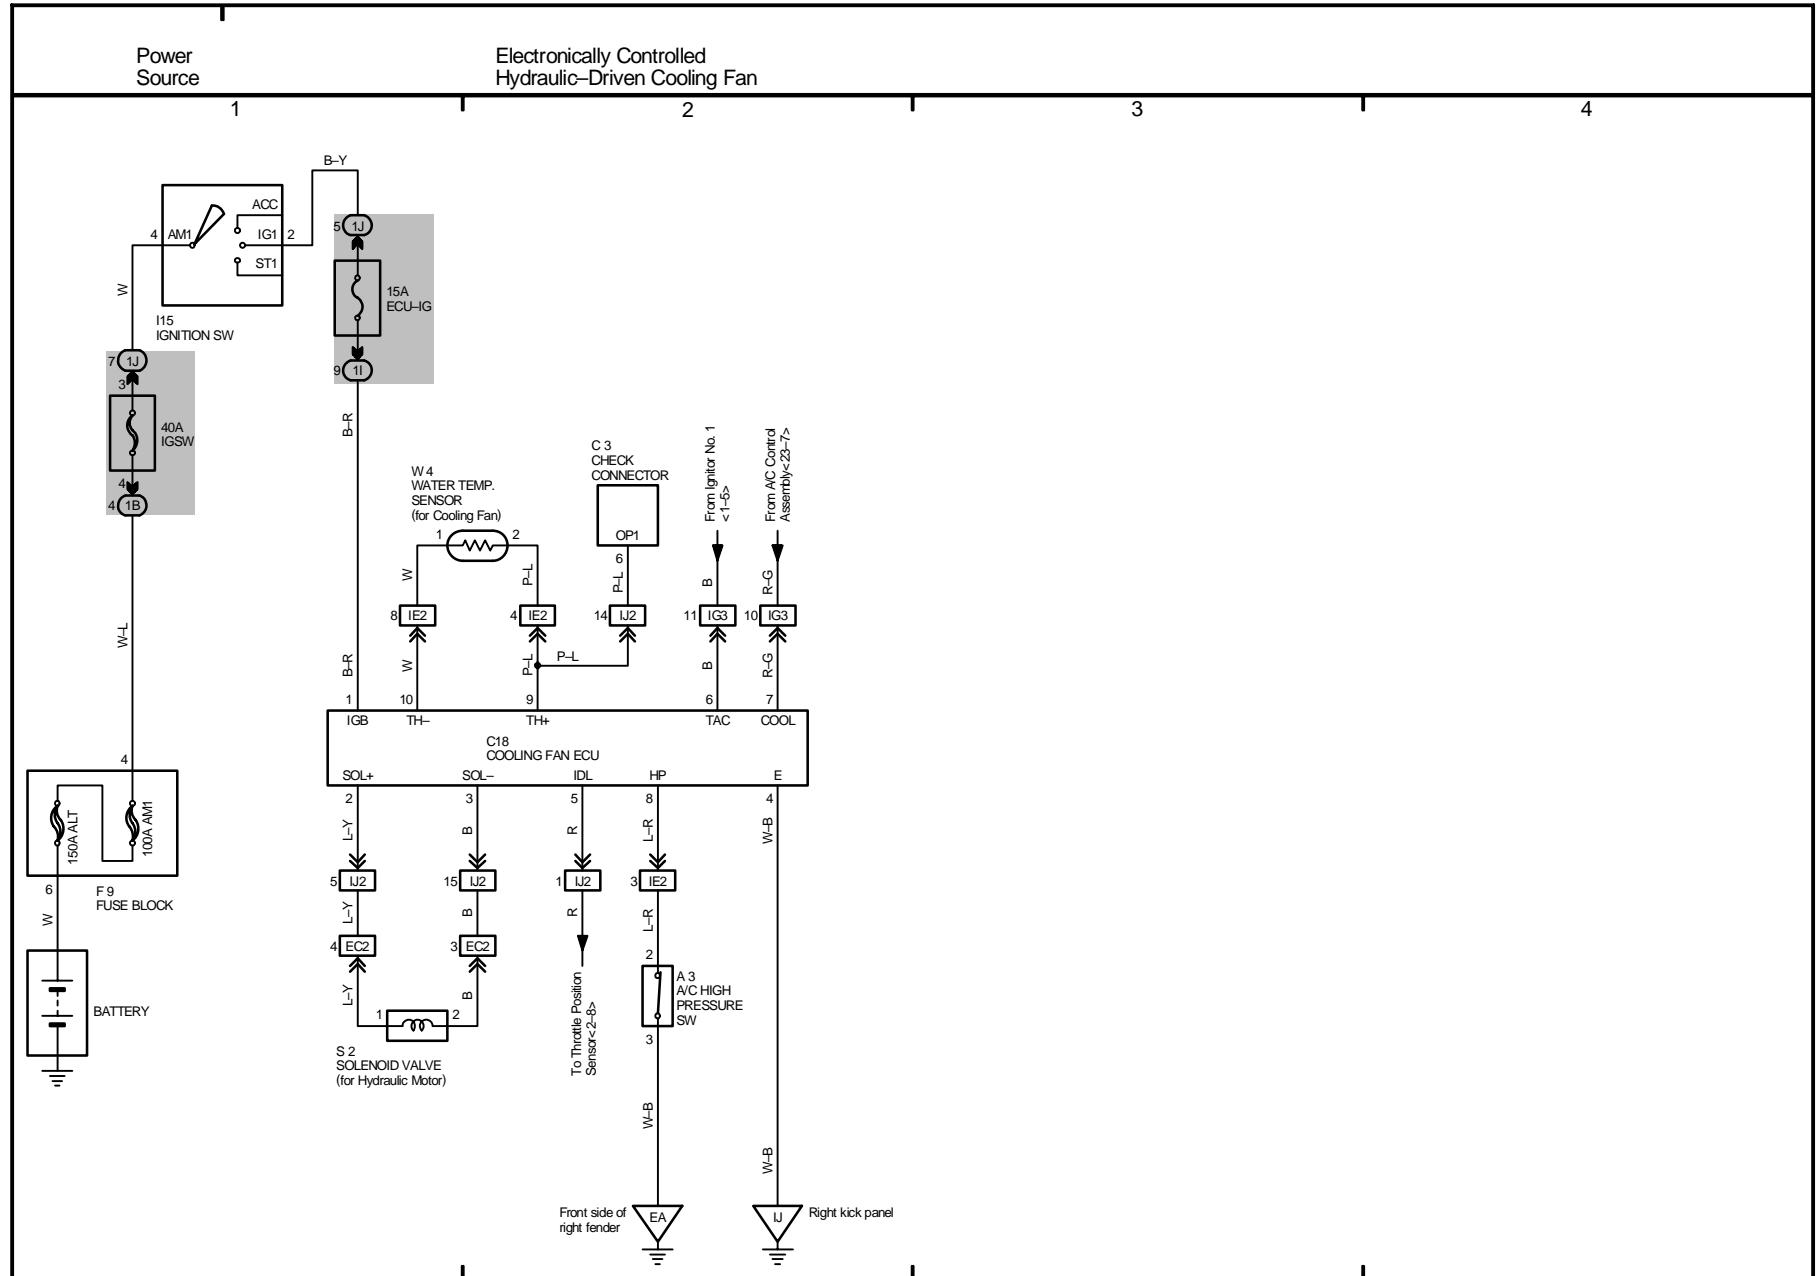

OVERALL ELECTRICAL WIRING DIAGRAM

18 LEXUS SC400


(Cont. next page)

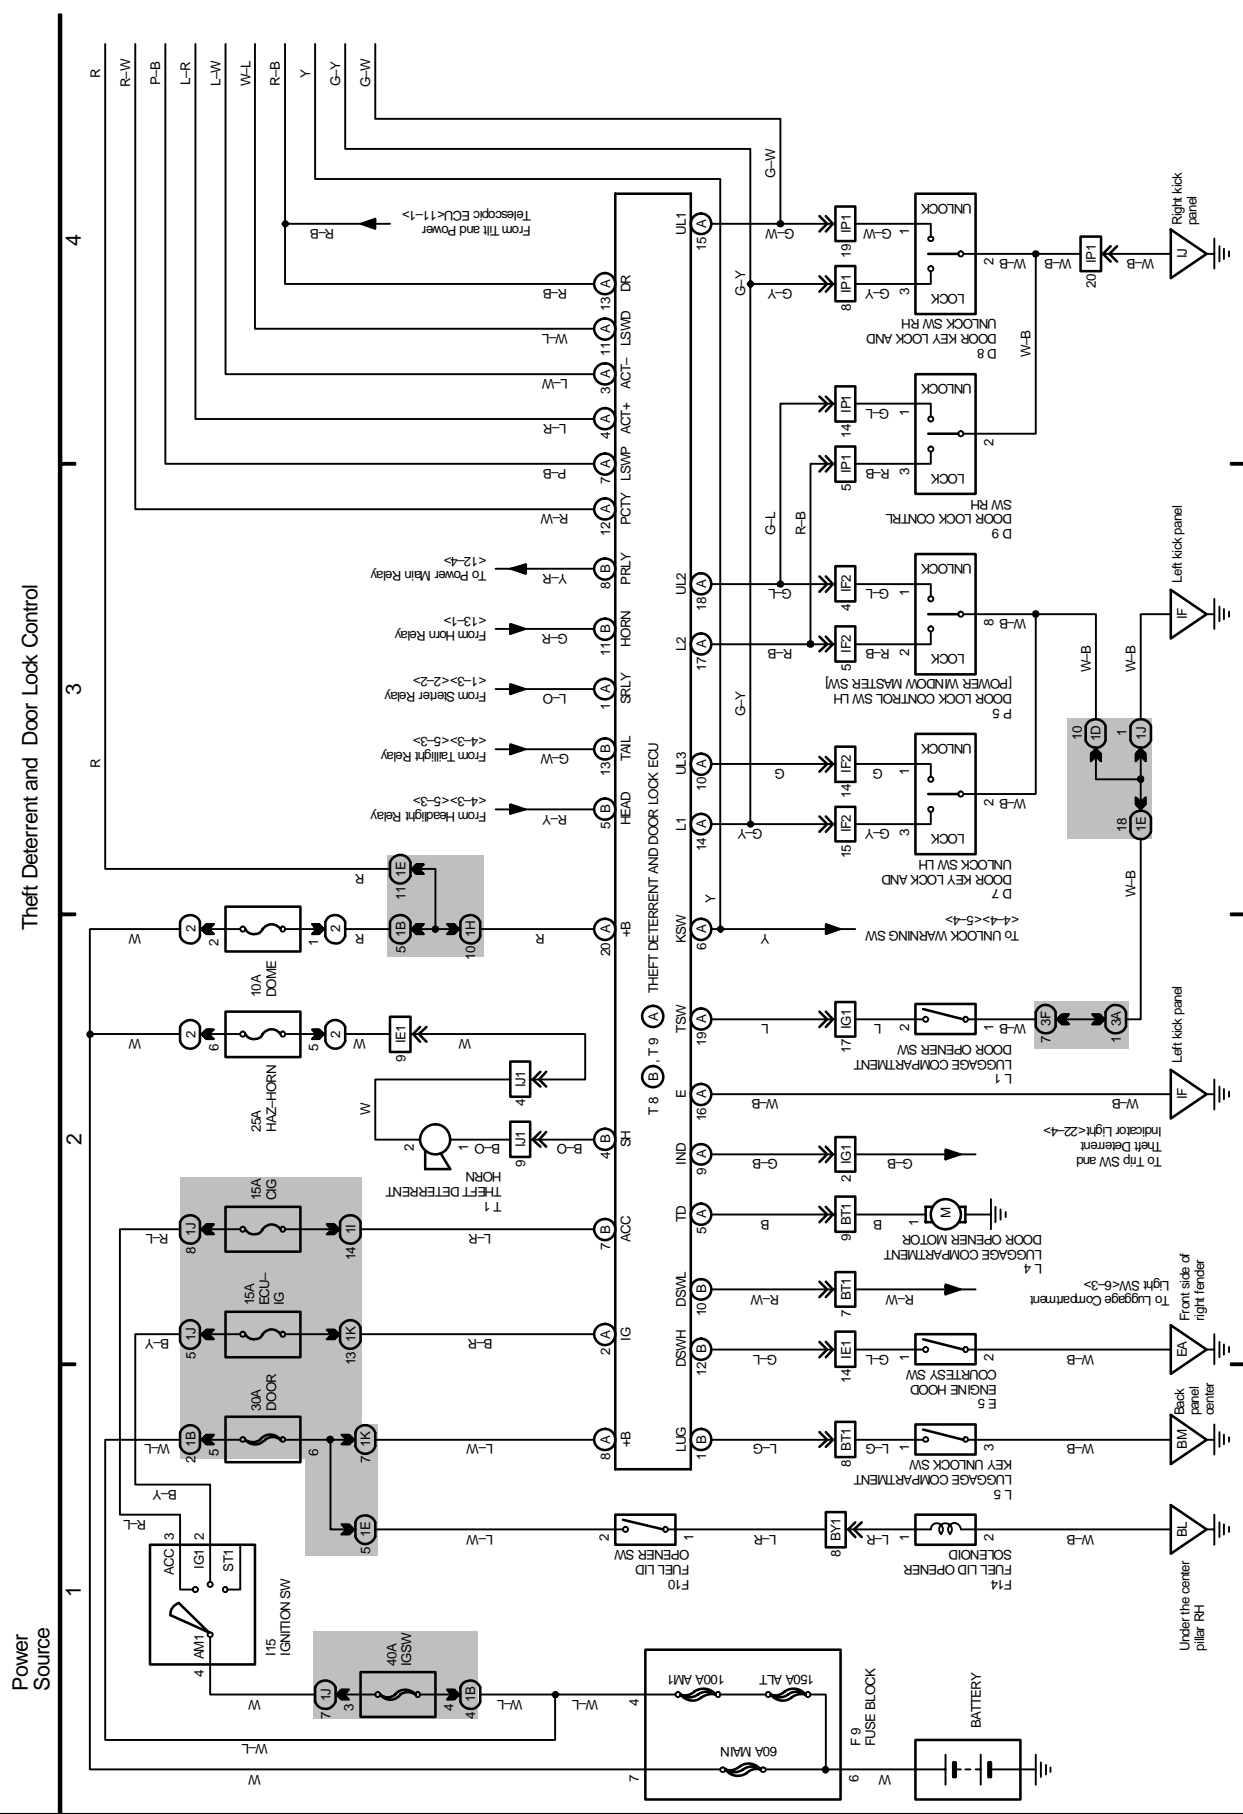

18 LEXUS SC400 (Cont' d)


Theft Deterrent and Door Lock Control

Wireless Door Lock Remote Control

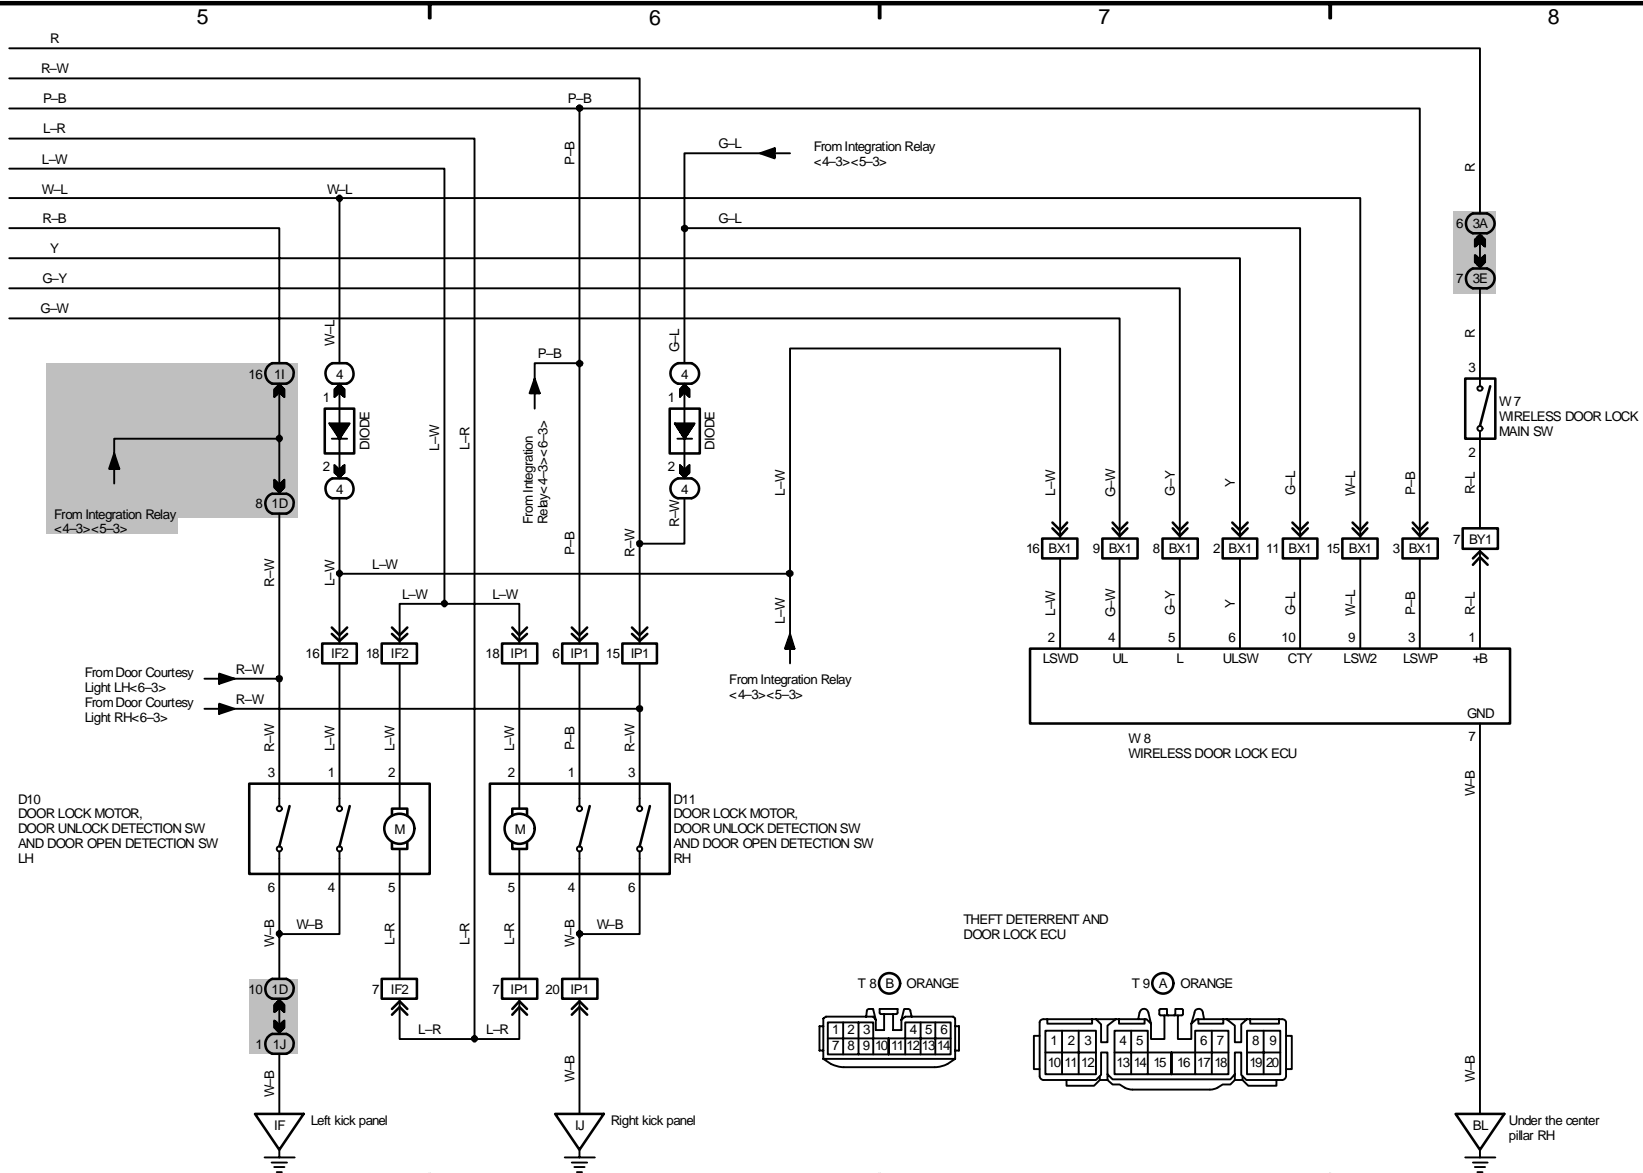


OVERALL ELECTRICAL WIRING DIAGRAM

19 LEXUS SC400

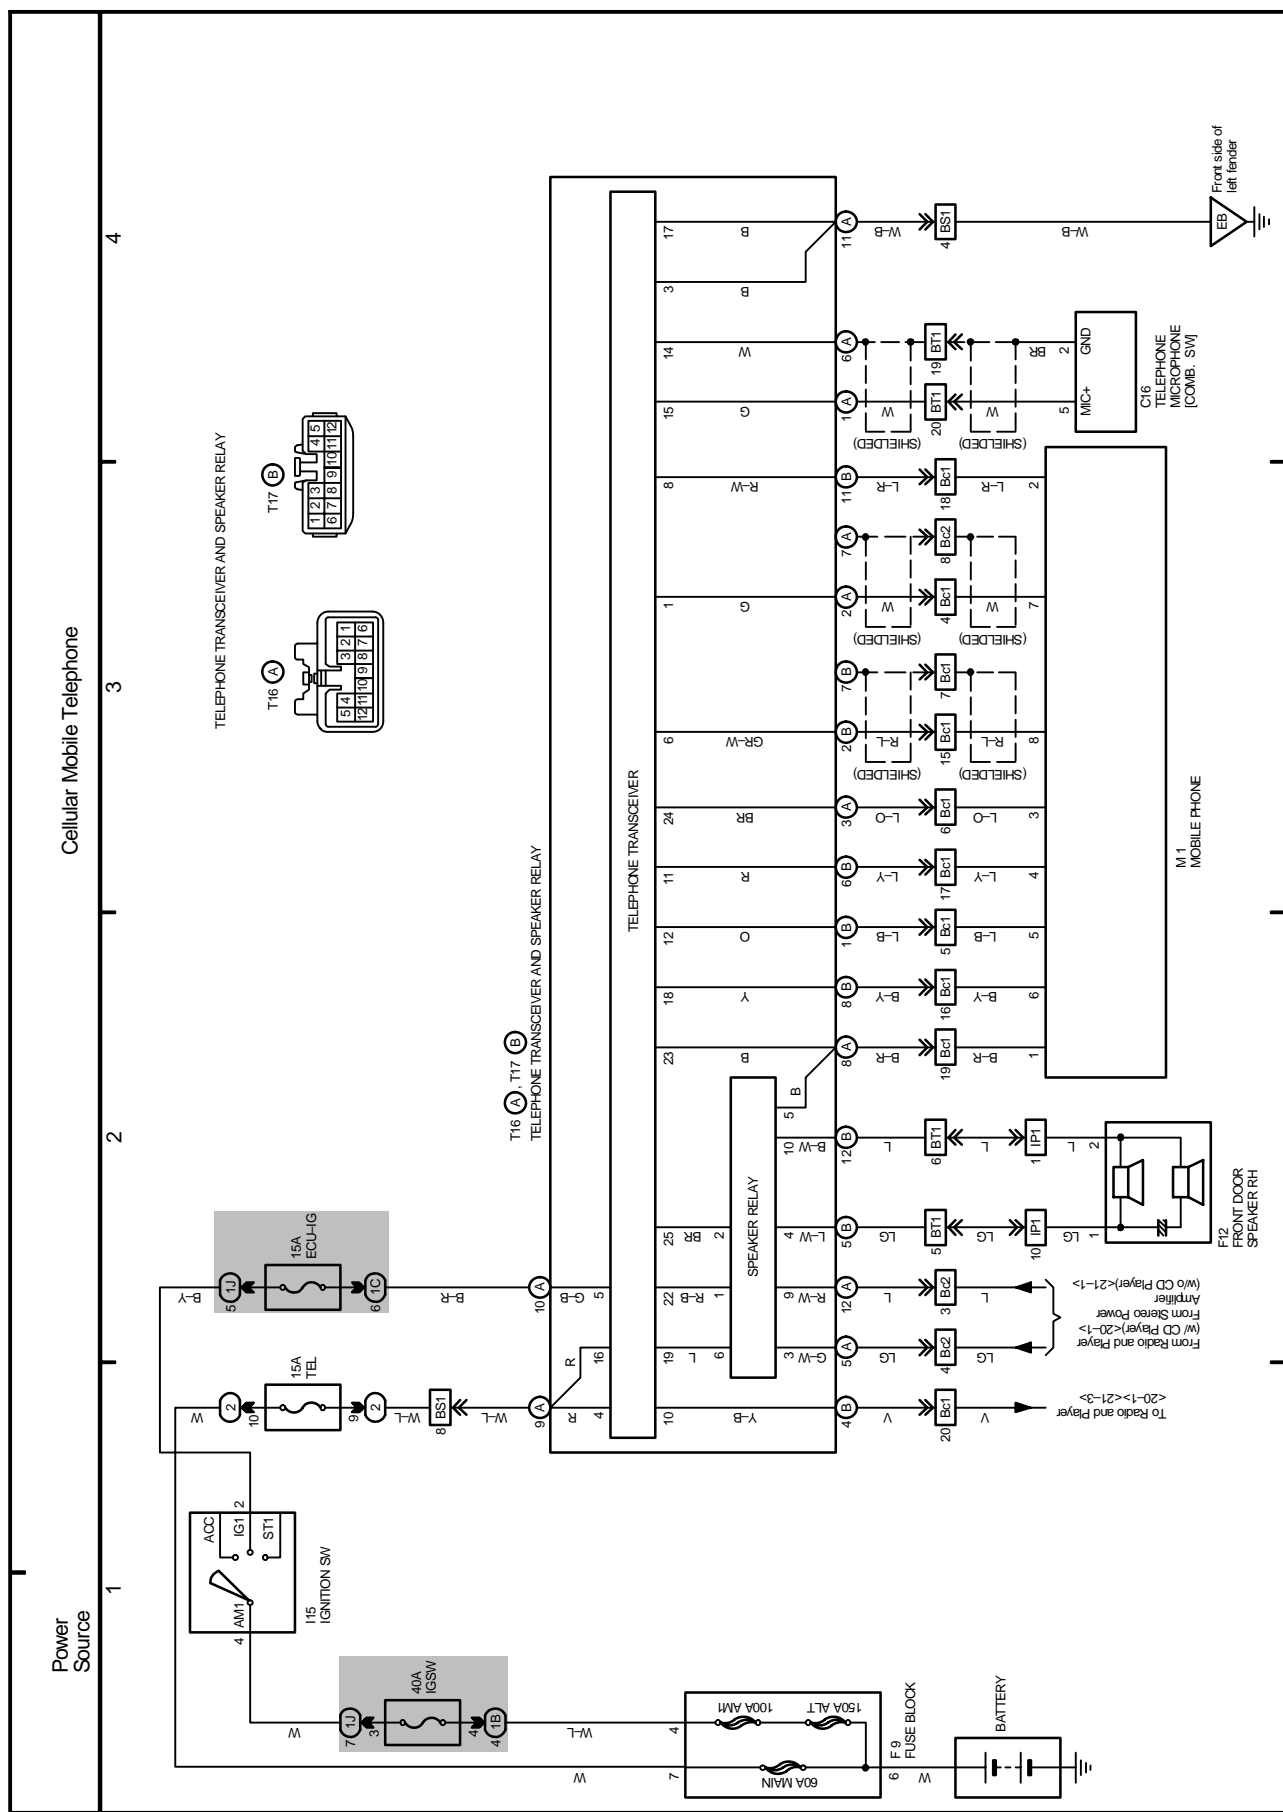

20 LEXUS SC400

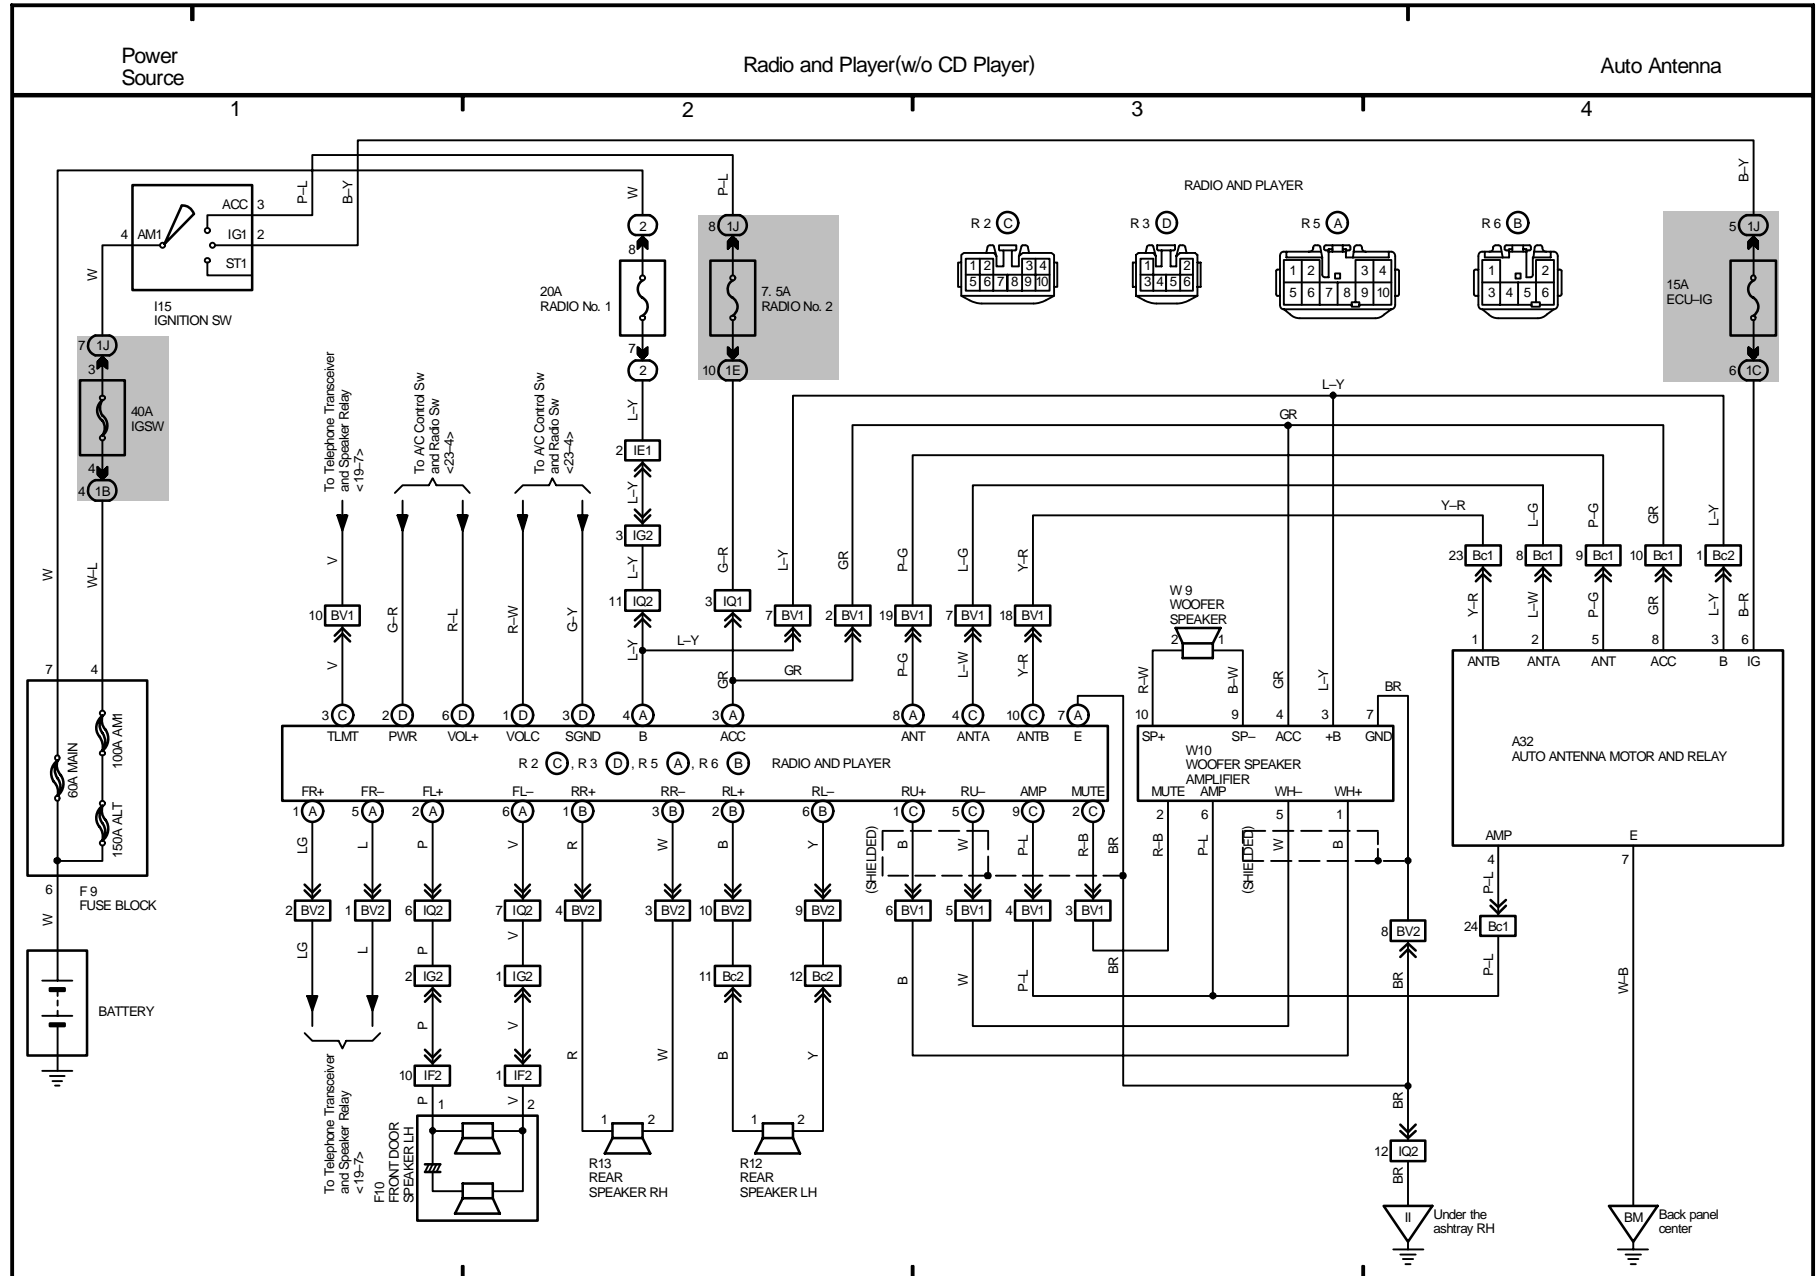


OVERALL ELECTRICAL WIRING DIAGRAM

21 LEXUS SC400


(Cont. next page)

Power Source

Radio and Player(w/ CD Player)

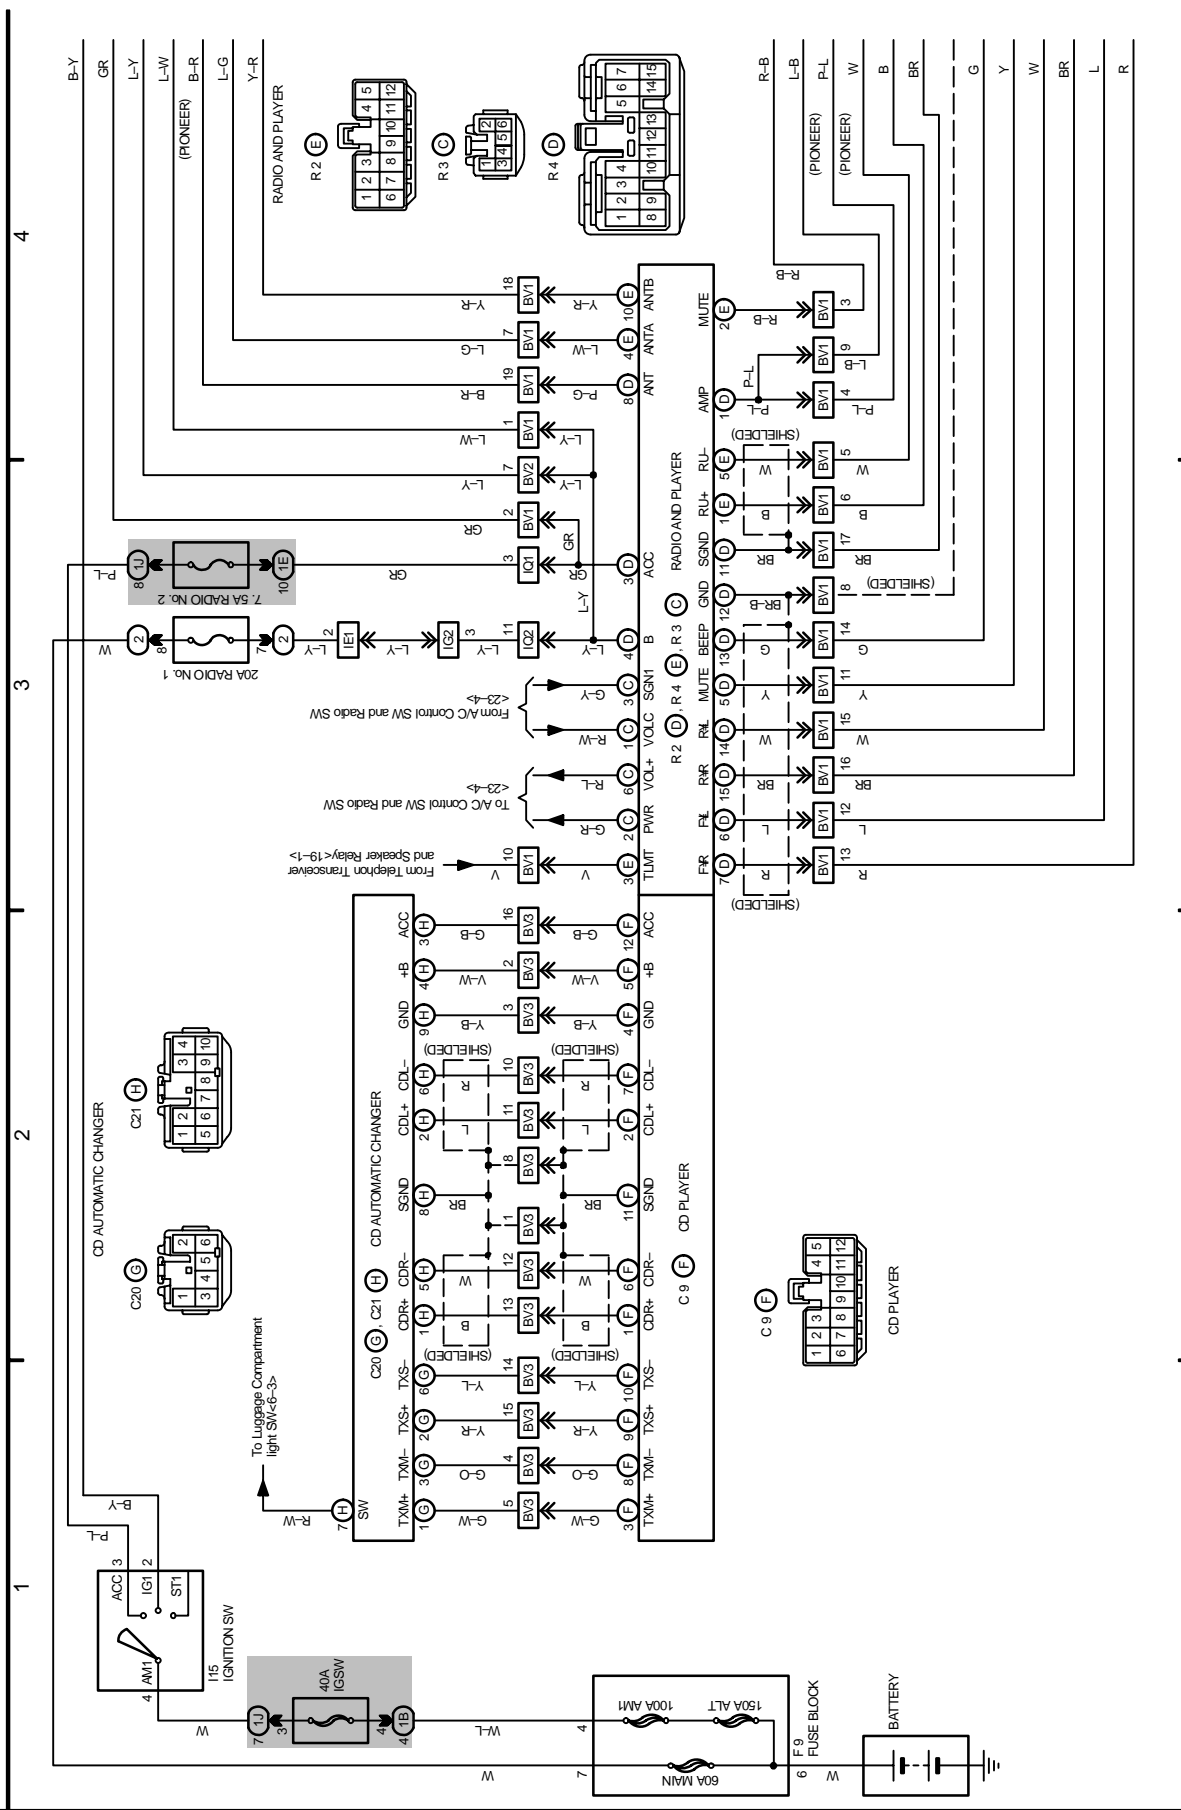


21 LEXUS SC400(Cont' d)

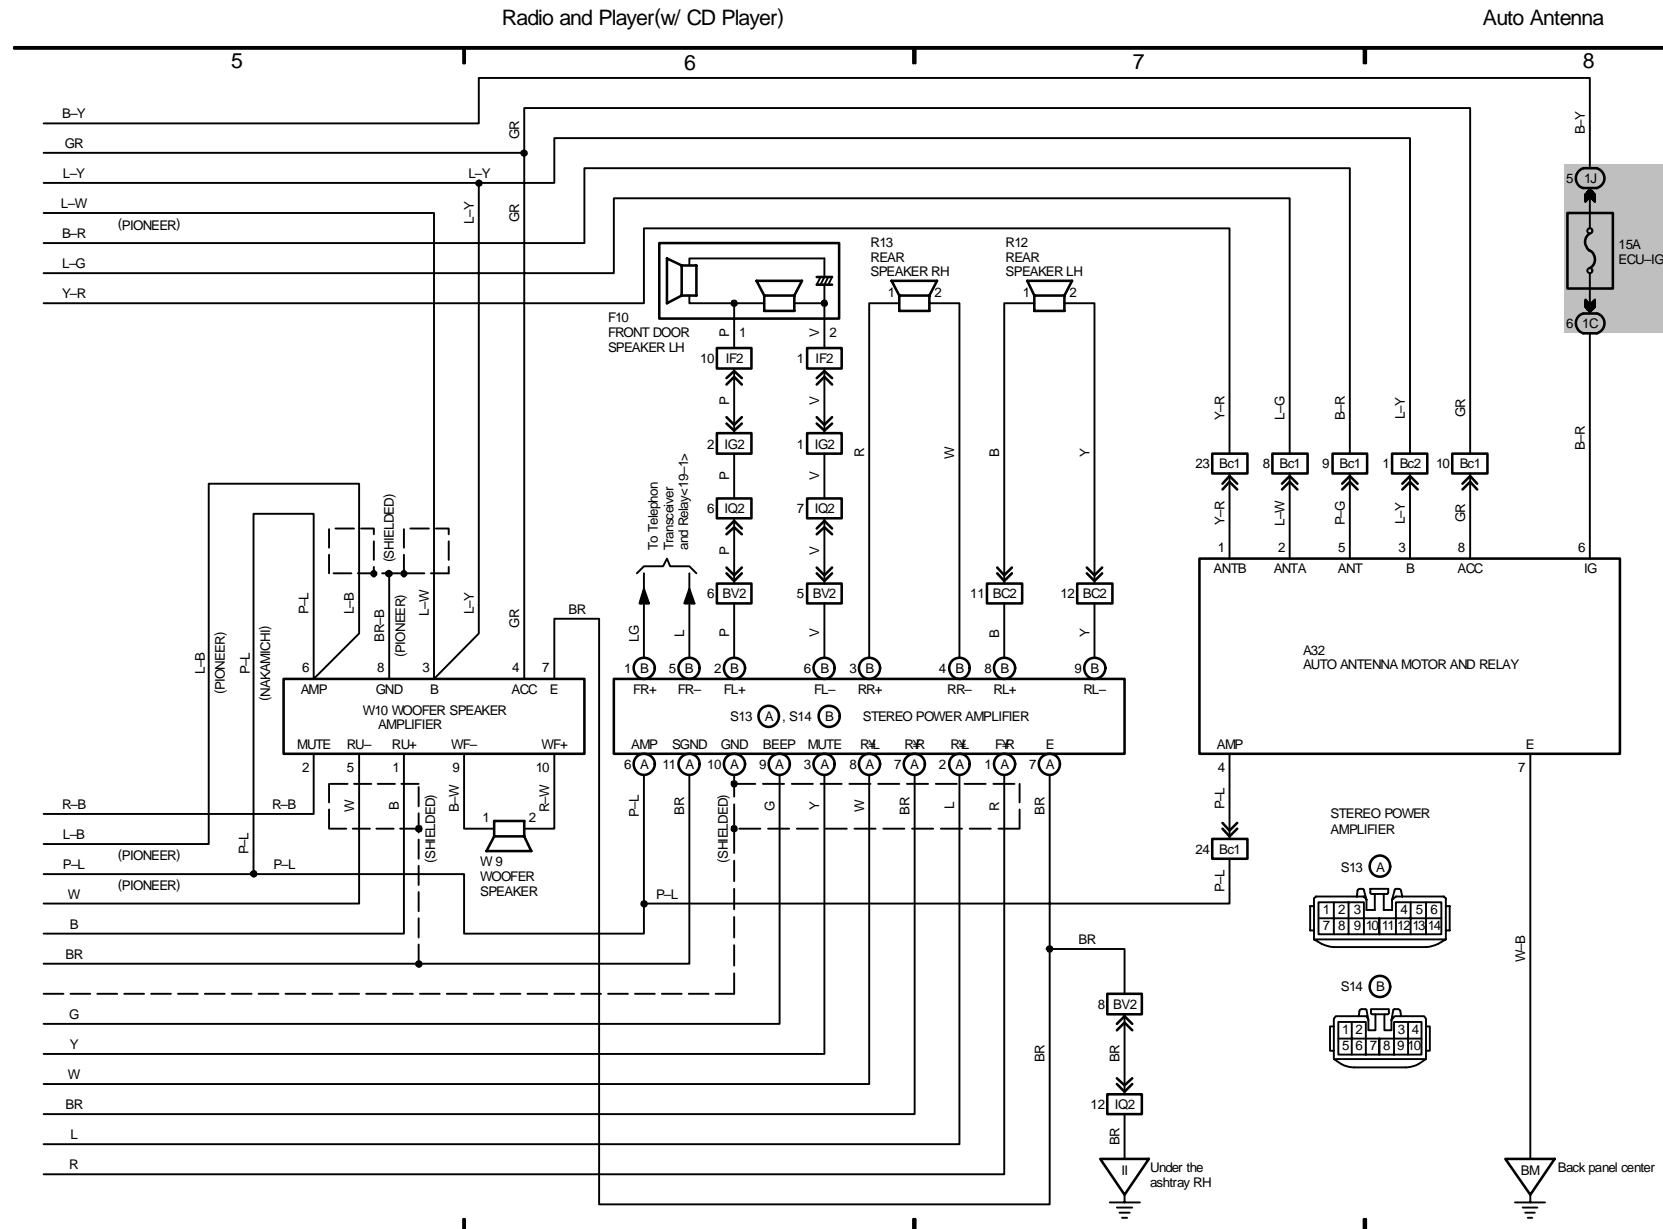


OVERALL ELECTRICAL WIRING DIAGRAM

22 LEXUS SC400

(Cont. next page)

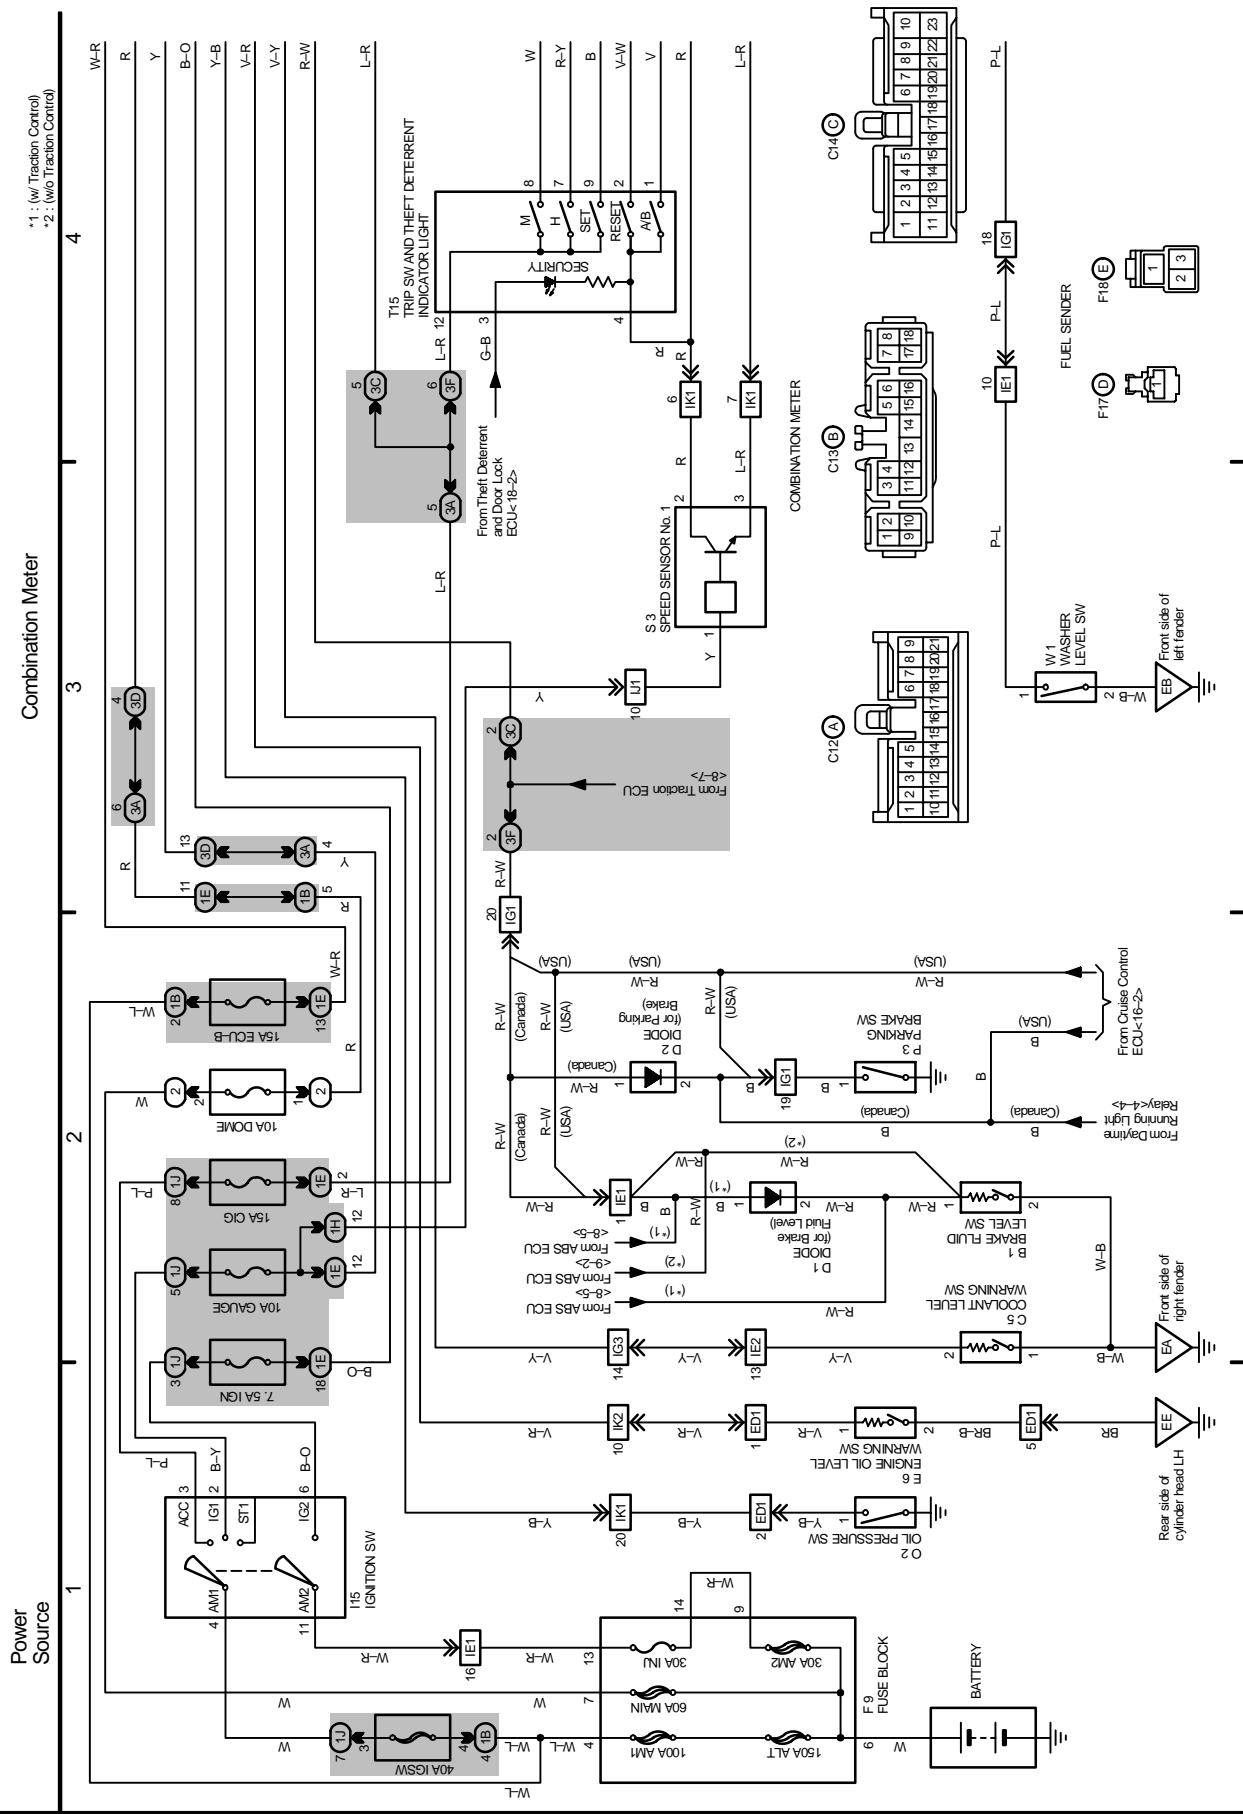

22 LEXUS SC400(Cont' d)

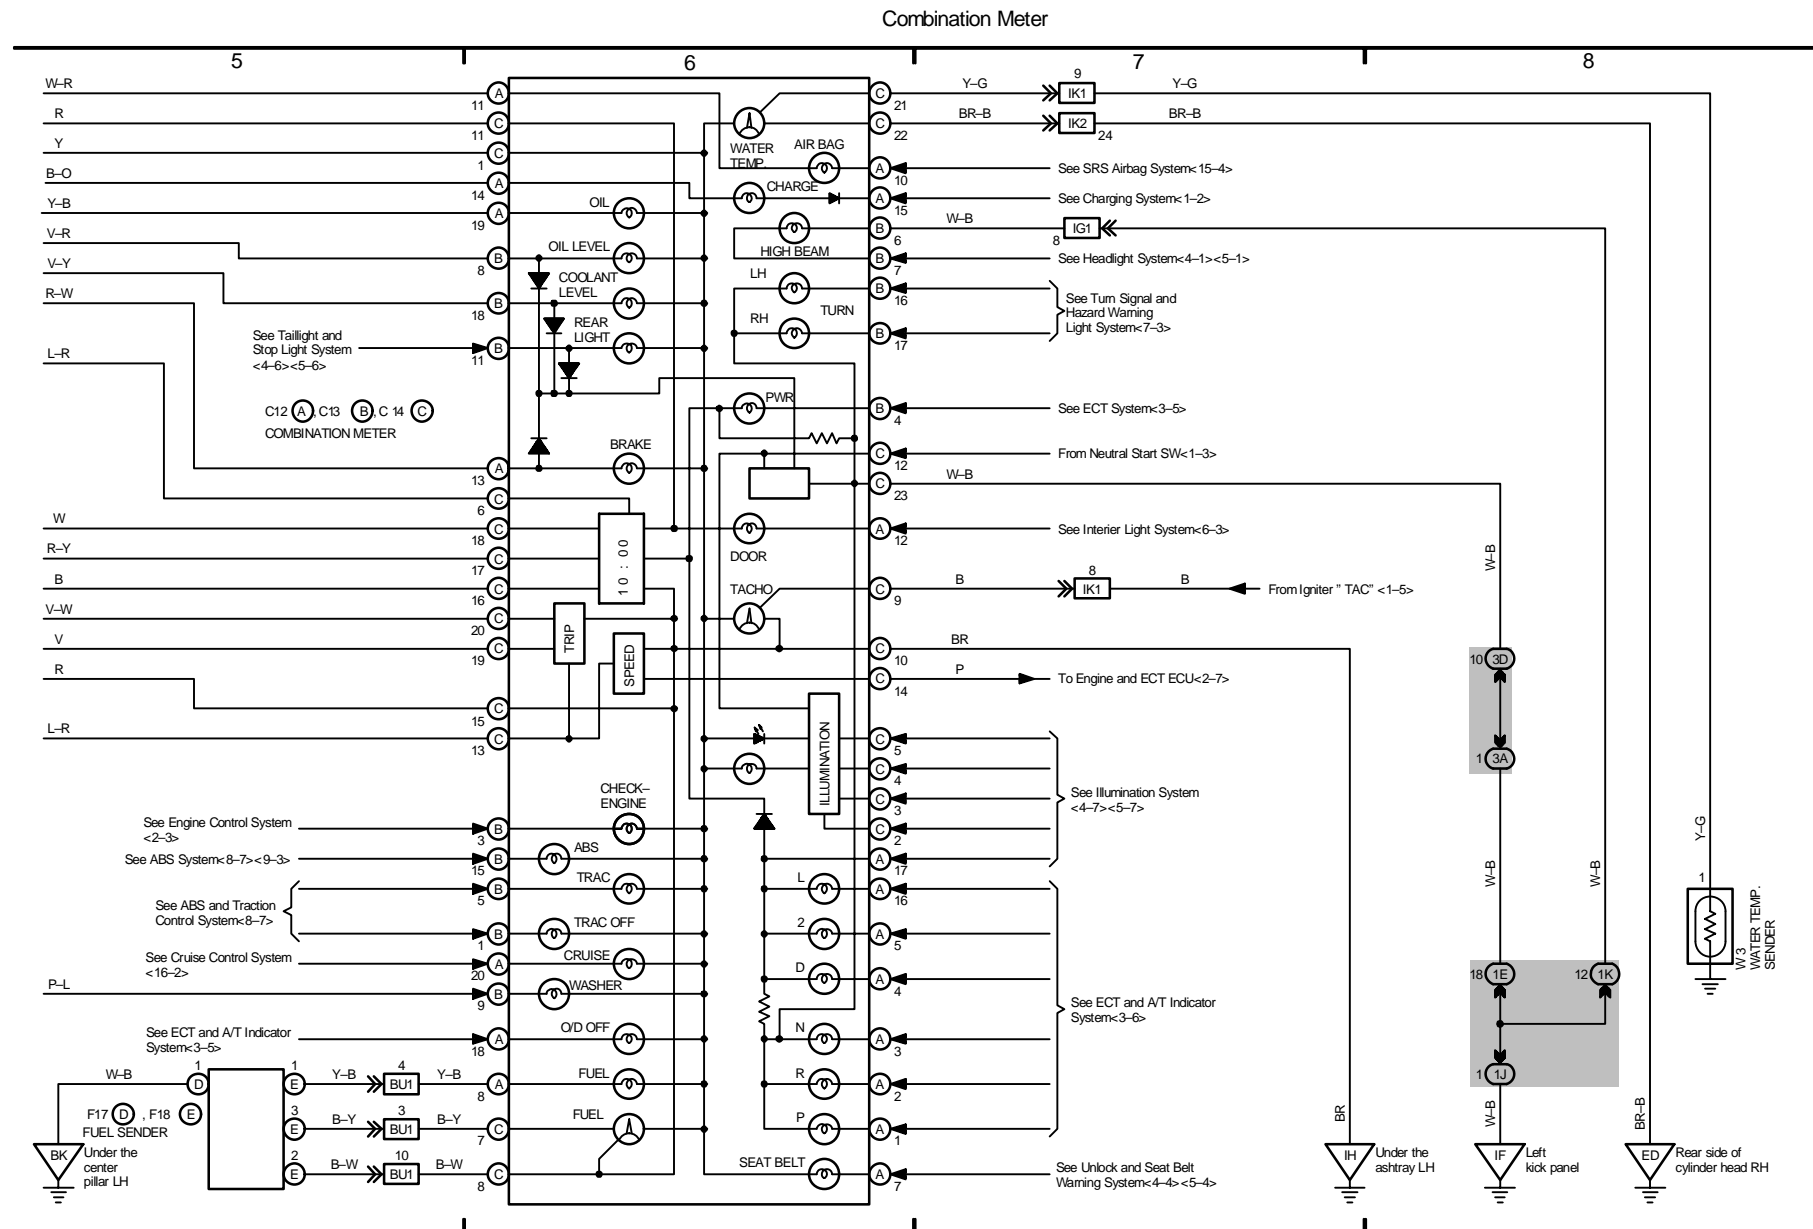


OVERALL ELECTRICAL WIRING DIAGRAM

23 LEXUS SC400

(Cont. next page)

Automatic Air Conditioner

Power Source

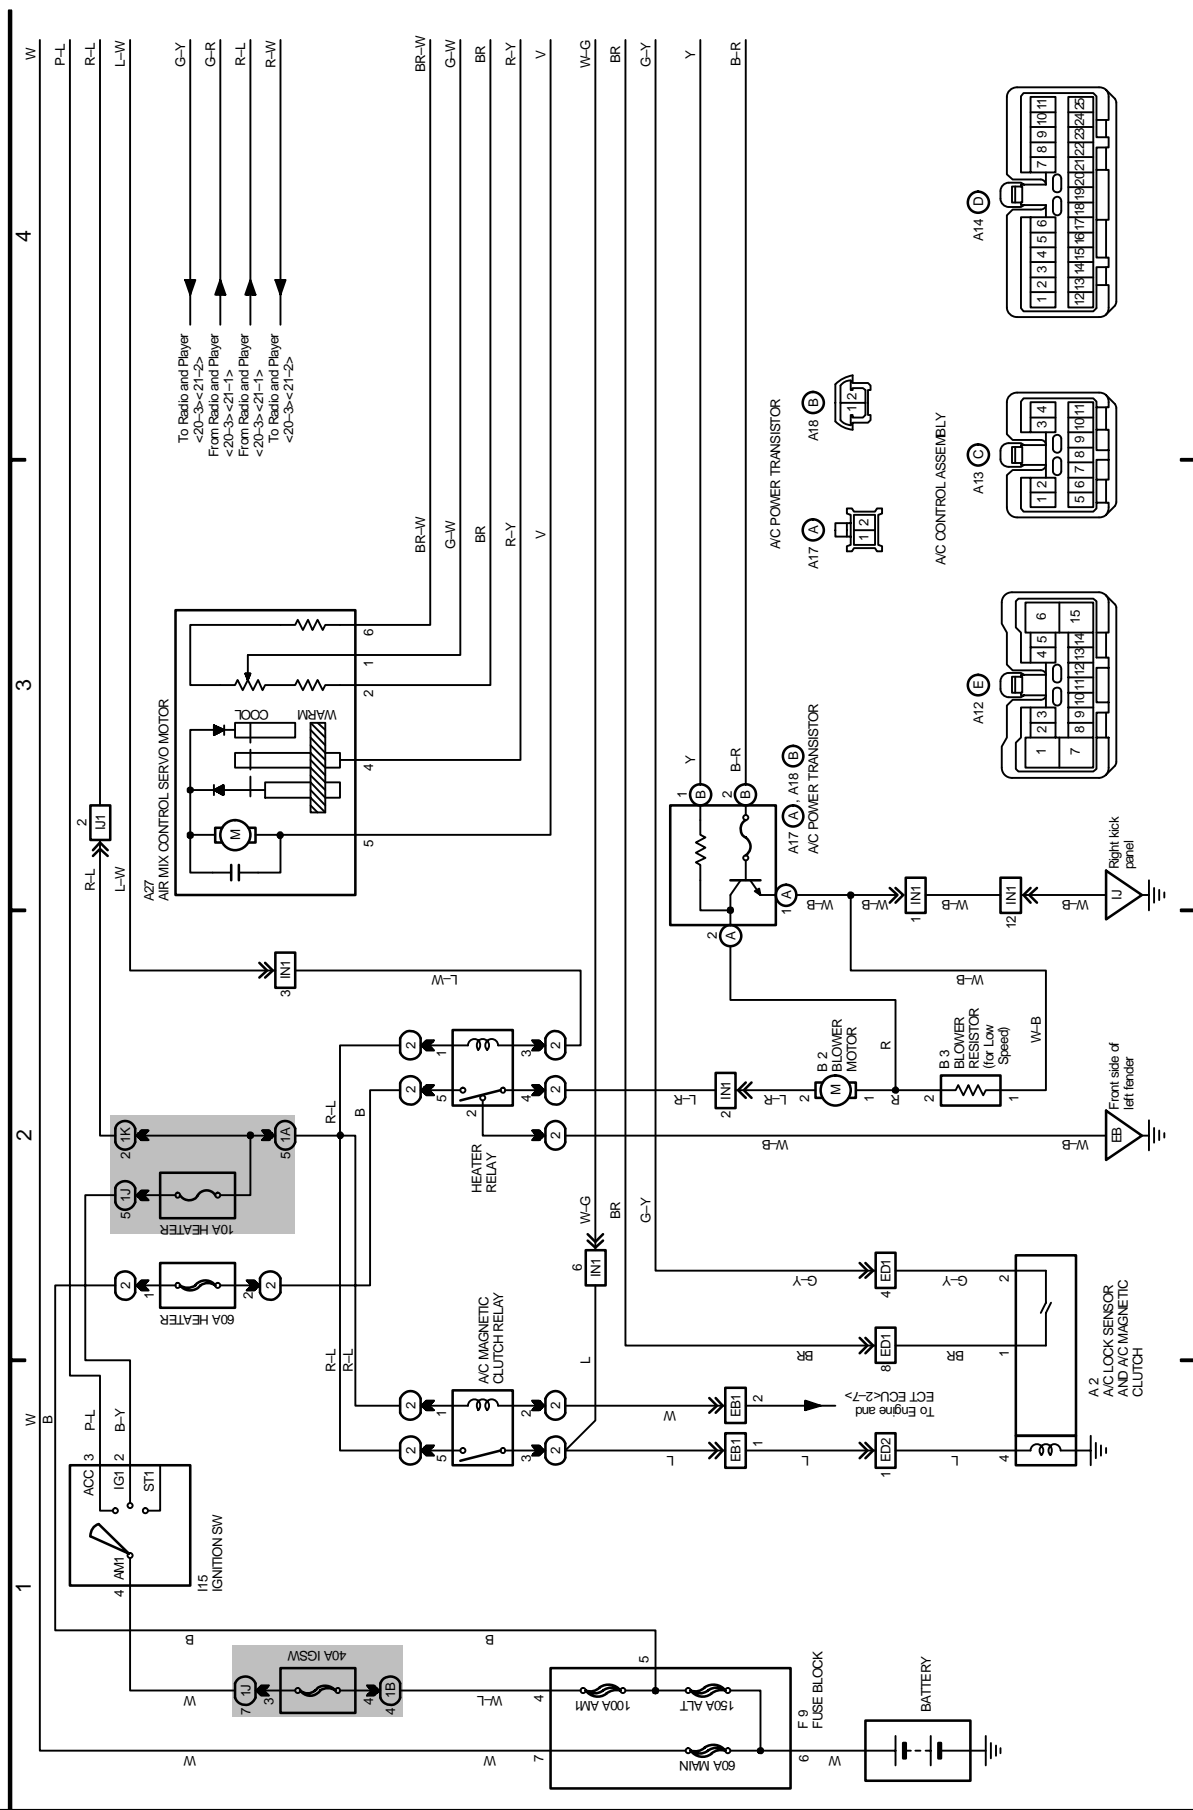

Automatic Air Conditioner

