


## DISASSEMBLY

### 1. REMOVE HOOD AUXILIARY CATCH HOOK

Torque: 8.3 N·m (85 kgf·cm, 75 in.-lbf)

### 2. REMOVE HOOD TO RADIATOR SUPPORT SEAL

Using a clip remover, remove 7 clips and seal.

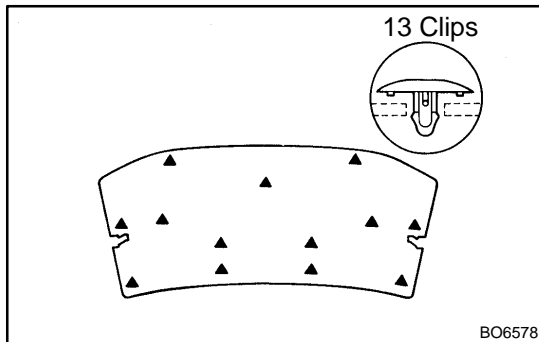


### 3. REMOVE HOOD INSULATOR

Turn the cushions counterclockwise with your hand to remove it.

### 4. REMOVE HOOD CUSHION

Turn the cushions counterclockwise with your hand to remove it.

### 5. REMOVE WINDOW WASHER HOSE

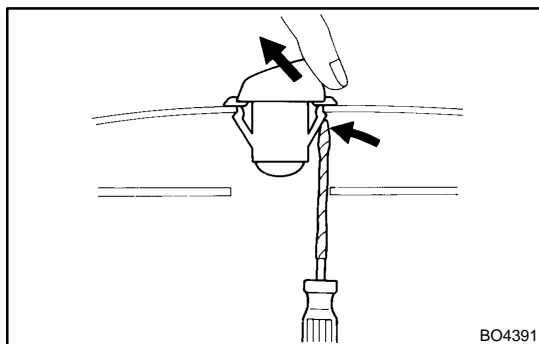

### 6. REMOVE WINDOW WASHER NOZZLE

(a) Remove the cover.

(b) Using a screwdriver, remove the nozzle.

HINT:

Tape the screwdriver tip before use.