


INSPECTION

1. INSPECT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	11 – 12	Continuity

If continuity is not as specified, replace the switch.

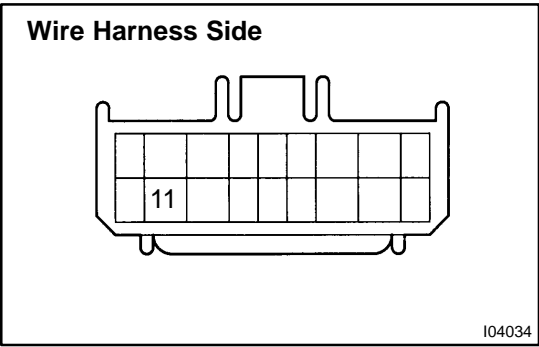


2. Connector disconnected:
INSPECT FOG LIGHT SWITCH CIRCUIT (See page [DI-985](#))

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
11 – Ground	Light control switch TAIL or HEAD and dimmer switch LOW or HI	Continuity

If circuit is not as specified, inspect the wire harness.

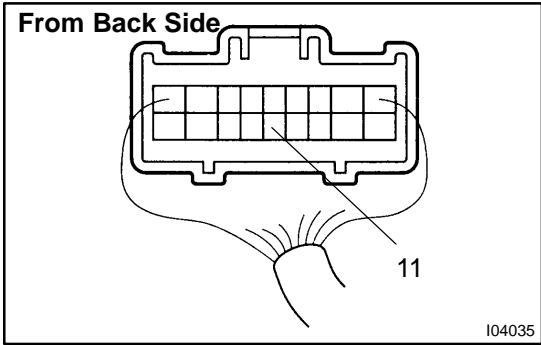


**3. Connector connected:
INSPECT FOG LIGHT SWITCH CIRCUIT**

Connect the wire harness side connector to the light control and dimmer switch and inspect the connector from the back side, as shown.

Tester connection	Condition	Specified condition
11 – Ground	Light control switch HEAD and headlight dimmer switch LO and fog light switch ON	No voltage
11 – Ground	Light control switch HEAD and headlight dimmer switch HI or FLASH and fog light switch ON	Battery positive voltage

If circuit is not as specified, inspect the wire harness.

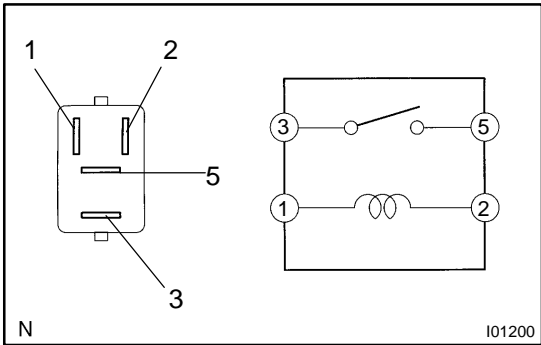

4. INSPECT FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

5. INSPECT FOG LIGHT RELAY CIRCUIT (See page [BE-21](#))