

I04116

INSPECTION

1. INSPECT POWER WINDOW MASTER SWITCH CONTINUITY

Front driver's switch:

Switch position	Tester connection	Specified condition
AUTO	7 – 16	Continuity
UP	6 – 16	Continuity
OFF	–	No continuity
DOWN	16 – 18	Continuity

Front passenger's switch:

Switch position	Tester connection	Specified condition
AUTO	3 – 13	Continuity
UP	3 – 12	Continuity
OFF	–	No continuity
DOWN	3 – 4	Continuity

Rear left switch:

Switch position	Tester connection	Specified condition
AUTO	13 – 14	Continuity
UP	12 – 14	Continuity
OFF	–	No continuity
DOWN	4 – 14	Continuity


Rear right switch:

Switch position	Tester connection	Specified condition
UP AUTO	11 – 13	Continuity
UP	11 – 12	Continuity
OFF	–	No continuity
DOWN	4 – 11	Continuity

If continuity is not as specified, replace the master switch.


2. INSPECT POWER WINDOW MASTER SWITCH CIRCUIT

(See page [DI-1017](#))

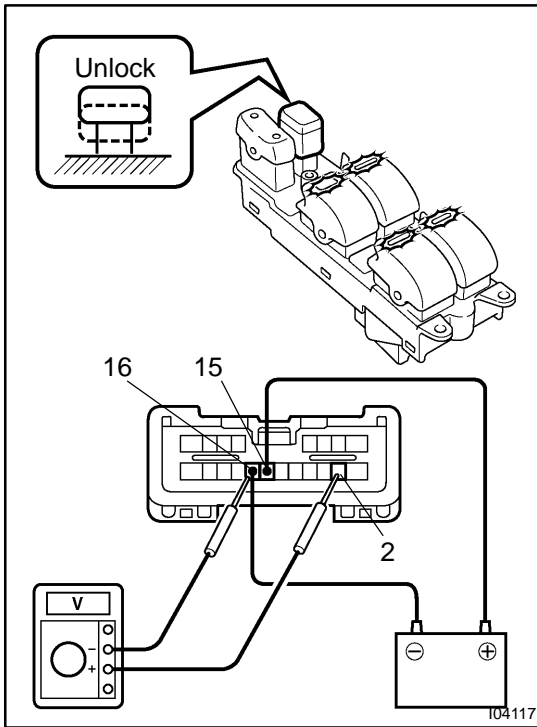


3. INSPECT POWER WINDOW MASTER SWITCH ILLUMINATION

- (a) Set the window lock switch to the unlock position.
- (b) Connect the positive (+) lead from the battery to terminal 15 and the negative (–) lead to terminal 16, and check that all the illuminations light up.
- (c) Connect the positive (+) lead from the voltmeter to terminal 15 and negative (–) lead to terminal 2, and check that the voltage meter needle indicates battery positive voltage.

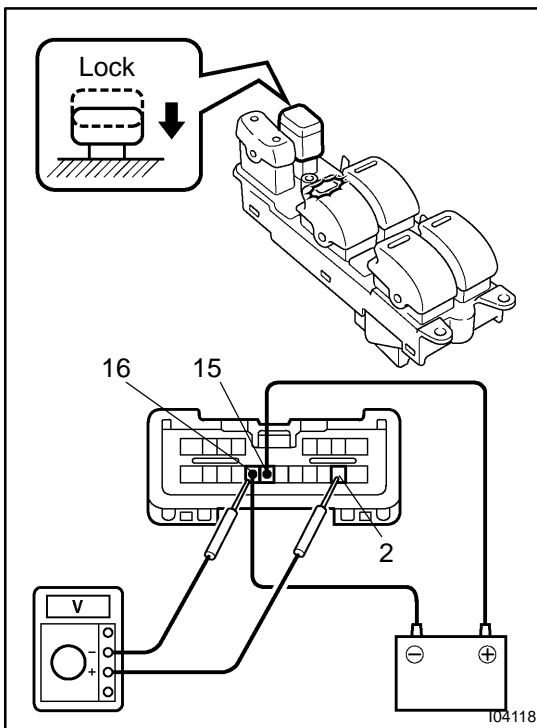

- (d) Set the window lock switch to the lock position, check that all the passenger's power window switch illuminations go out.
- (e) Then, check that the voltage meter needle indicates no voltage.

If operation is not as specified, replace the master switch.

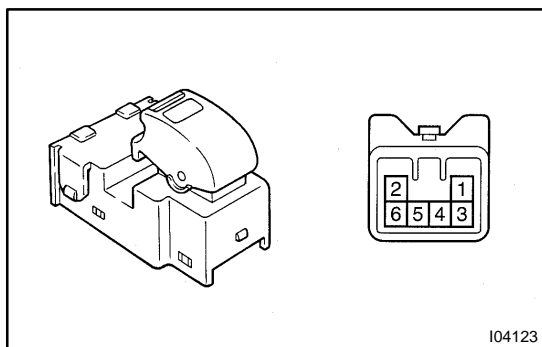**4. INSPECT POWER WINDOW SWITCH CONTINUITY**

Switch position	Tester connection	Specified condition
AUTO	3 – 5	Continuity
UP	3 – 6	Continuity
OFF	–	No continuity
DOWN	3 – 4	Continuity


If continuity is not as specified, replace the switch.

5. INSPECT POWER WINDOW SWITCH CIRCUIT

Passenger side: (See page [DI-1061](#))


Rear LH side: (See page [DI-1091](#))

Rear RH side: (See page [DI-1108](#))

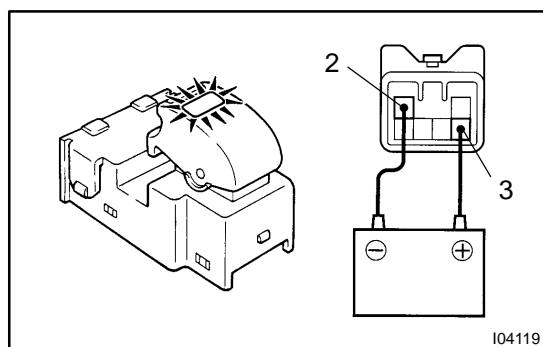**6. INSPECT POWER WINDOW SWITCH ILLUMINATION**


Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 2, and check that the indicator light lights up.

If operation is not as specified, replace the switch.

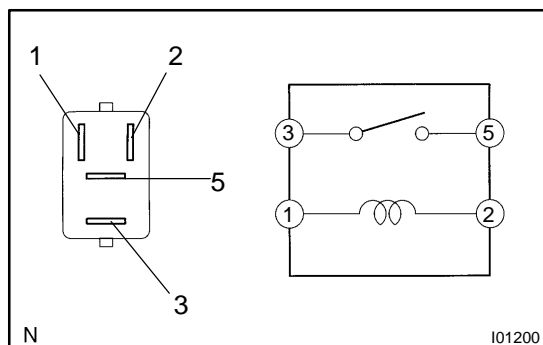
**7. INSPECT POWER MAIN RELAY CONTINUITY**

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

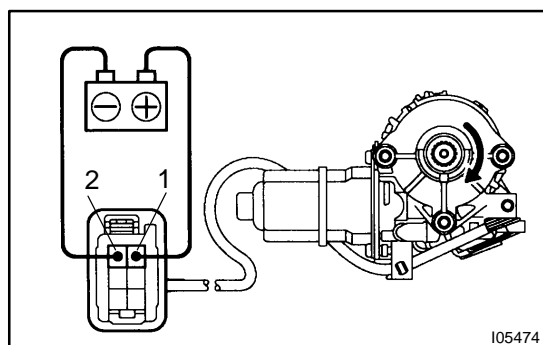8. INSPECT POWER MAIN RELAY CIRCUIT
(See page [BE-21](#))**9. Driver's door:****INSPECT POWER WINDOW MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the motor turns clockwise.

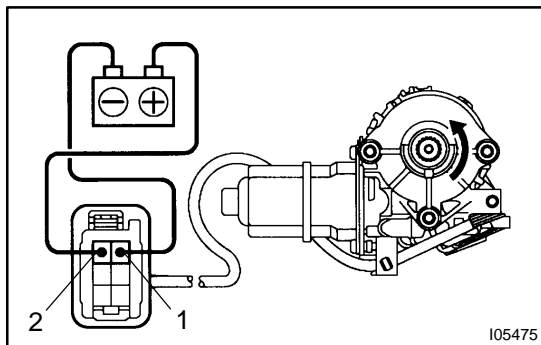


- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the motor.

10. Driver's door:

INSPECT POWER WINDOW MOTOR CIRCUIT


(See page [DI-1027](#))

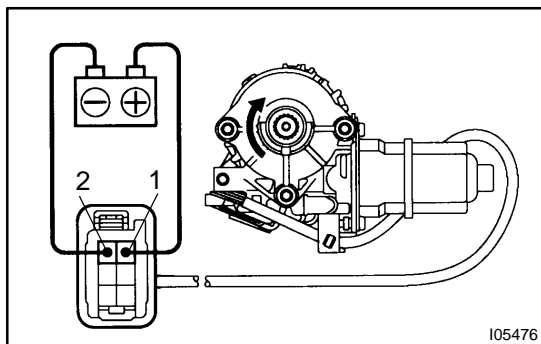

11. Front passenger's door:

INSPECT POWER WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, and check that the motor turns clockwise.

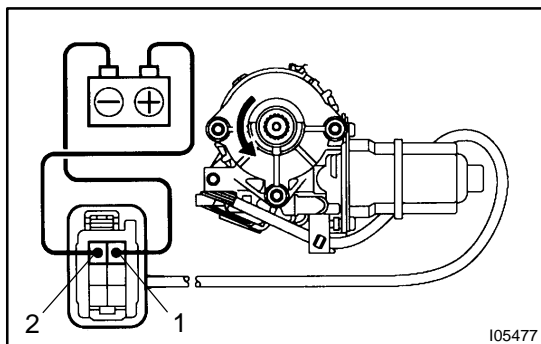


- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the motor.

12. Front passenger's door:

INSPECT POWER WINDOW MOTOR CIRCUIT


(See page [DI-1063](#))

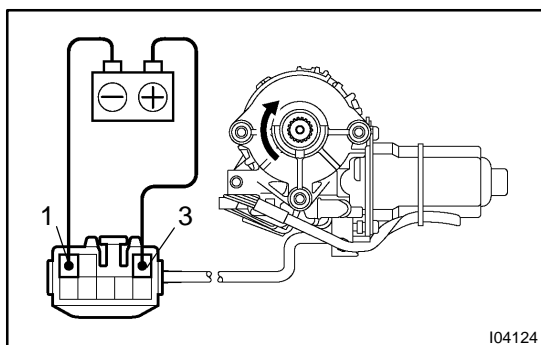

13. Rear left side door:


INSPECT POWER WINDOW MOTOR OPERATION

- (a) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 1, and check that the motor turns clockwise.

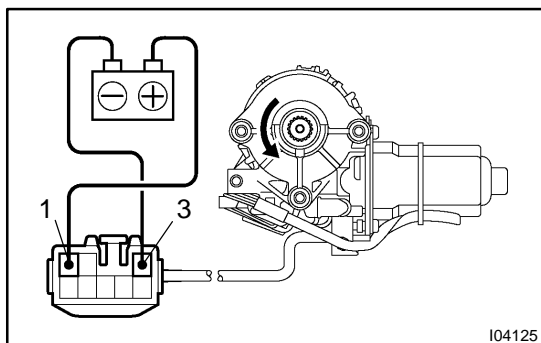


- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the motor.

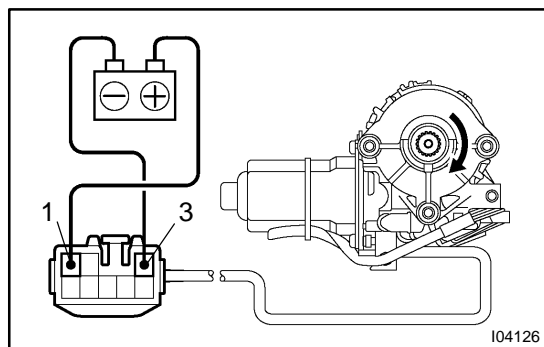
**14. Rear right side door:****INSPECT POWER WINDOW MOTOR OPERATION**

- (a) Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 3, and check that the motor turns clockwise.

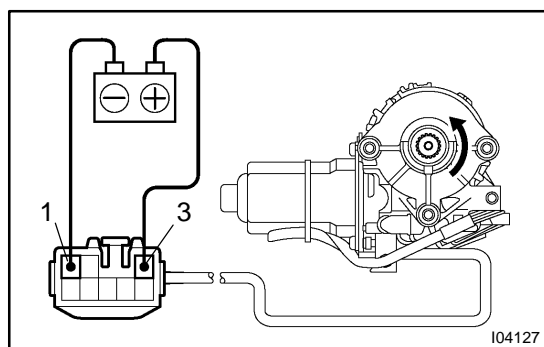



- (b) Reverse the polarity, check that the motor turns counter-clockwise.

If operation is not as specified, replace the motor.

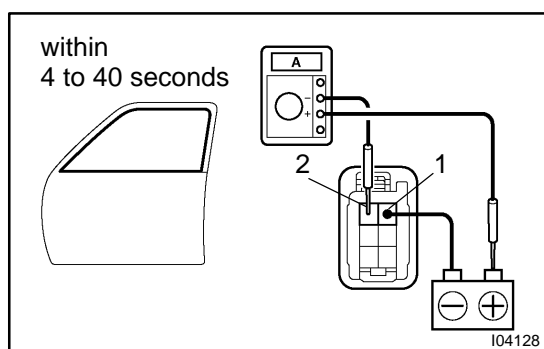
**15. Front door:****INSPECT POWER WINDOW MOTOR PTC OPERATION**

- (a) Disconnect the connector from the master switch.
 (b) Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1 on the wire harness side connector and raise the window to full closed position.
 (c) Continue to apply voltage, check that there is a PTC operation noise within approximately 4 to 90 seconds.
 (d) Reverse the polarity, check that the window begins to descend within approximately 60 seconds.


If operation is not as specified, replace the motor.

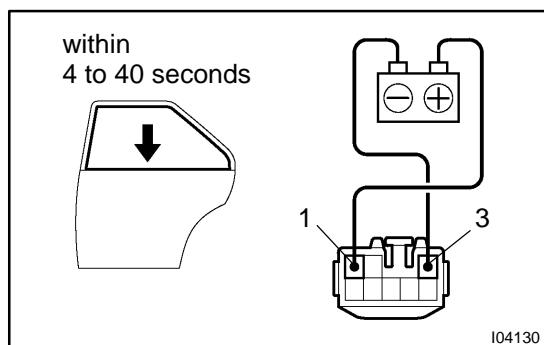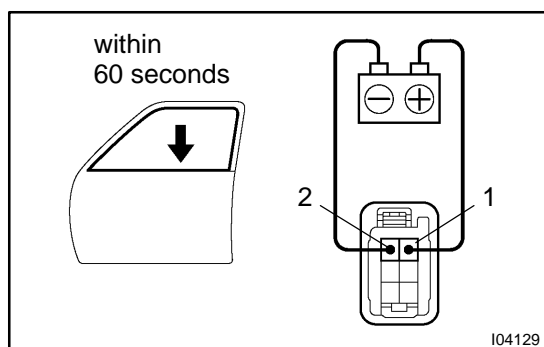**16. Rear door:****INSPECT POWER WINDOW MOTOR PTC OPERATION**

- (a) Disconnect the connector from the rear door ECU.
 (b) Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 1 on the wire harness side connector, and raise the window to full closed position.
 (c) Continue to apply voltage, check that there is a PTC operation noise within approximately 4 to 90 seconds.

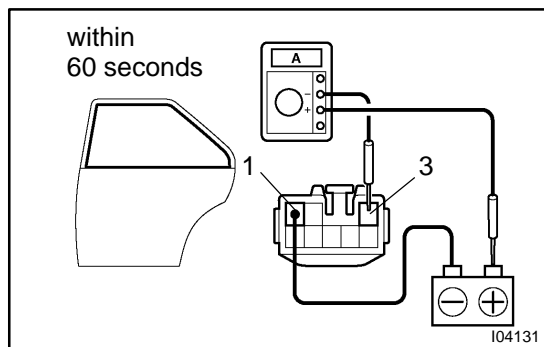


- (d) Reverse the polarity, check that the window begins to descend within approximately 60 seconds.
If operation is not as specified, replace the motor.

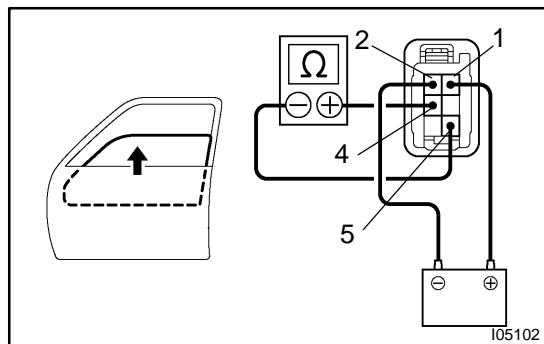

**17. Driver's door (window up):
INSPECT JAM PROTECTION LIMIT SWITCH OPERATION**

- (a) Connect the positive (+) lead from the ohmmeter to terminal 4 and the negative (–) lead to terminal 5.
(b) Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2.
(c) Check that the continuity exists when the window goes up.

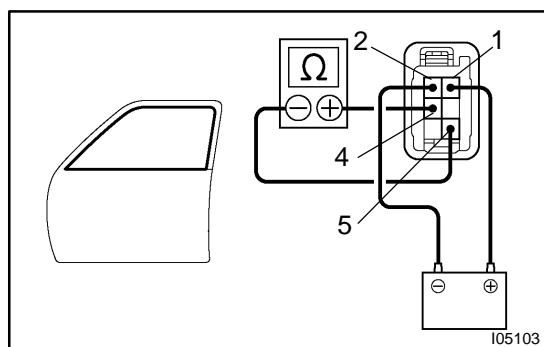


- (d) Check that no continuity exists when the window is in the fully closed position.

If operation is not as specified, replace the motor.

NOTICE:


If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

**18. Driver's door:
INSPECT JAM PROTECTION LIMIT SWITCH CIRCUIT
(See page DI-1029)**

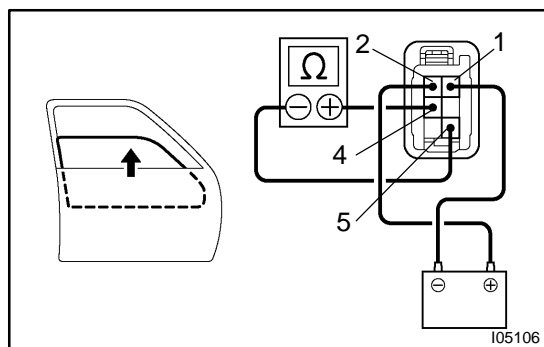

**19. Front passenger's door (window up):
INSPECT JAM PROTECTION LIMIT SWITCH OPERATION**

- (a) Connect the positive (+) lead from the ohmmeter to terminal 4 and the negative (–) lead to terminal 5.
(b) Connect the positive (+) lead from the battery to terminal 2 and the negative (–) lead to terminal 1.
(c) Check that the continuity exists when the window goes up.

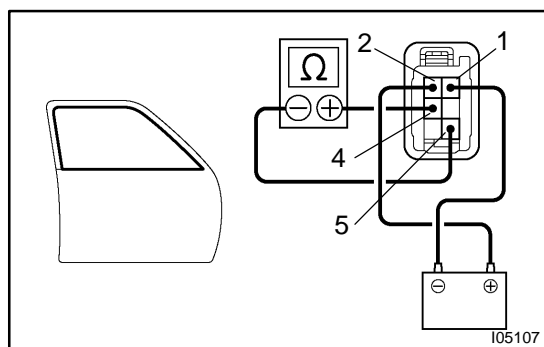


- (d) Check that no continuity exists when the window is in the fully closed position.

If operation is not as specified, replace the motor.

NOTICE:


If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

**20. Passenger's Door:
INSPECT JAM PROTECTION LIMIT SWITCH CIRCUIT
(See page DI-1065)**

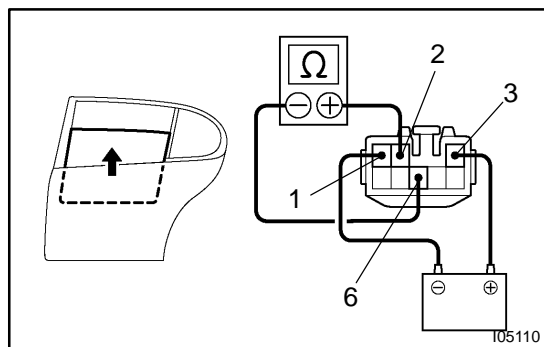

**21. Rear LH side door (window up):
INSPECT JAM PROTECTION LIMIT SWITCH OPERATION**

- Connect the positive (+) lead from the ohmmeter to terminal 2 and the negative (–) lead to terminal 6.
- Connect the positive (+) lead from the battery to terminal 3 and the negative (–) lead to terminal 1.
- Check that the continuity exists when the window goes up.

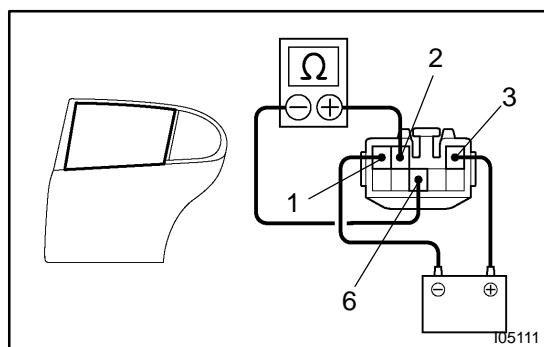


- Check that no continuity exists when the window is in the fully closed position.

If operation is not as specified, replace the motor.


NOTICE:

If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

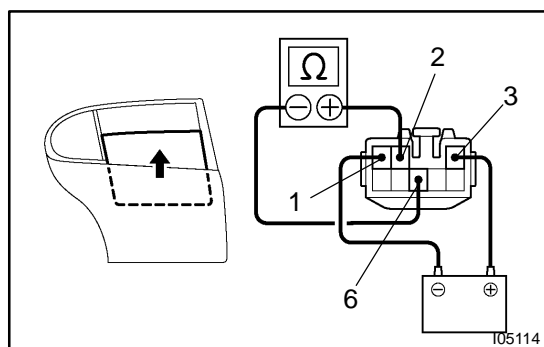

**22. Rear RH side door (window up):
INSPECT JAM PROTECTION LIMIT SWITCH OPERATION**

- Connect the positive (+) lead from the ohmmeter to terminal 2 and the negative (–) lead to terminal 6.
- Connect the positive (+) lead from the battery to terminal 3 and the negative (–) lead to terminal 1.
- Check that the continuity exists when the window goes up.

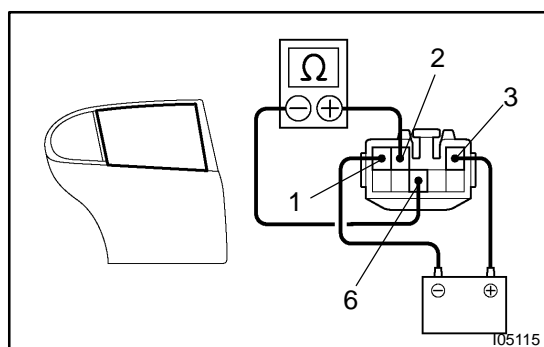


- Check that no continuity exists when the window is in the fully closed position.

If operation is not as specified, replace the motor.


NOTICE:

If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

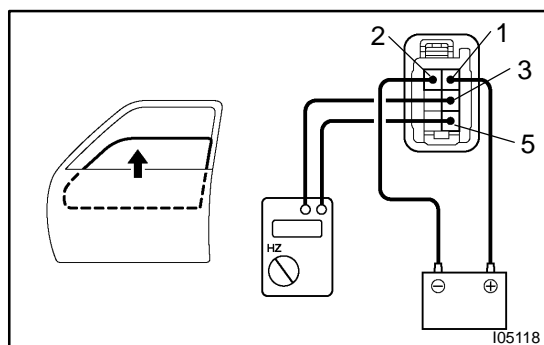

**23. Driver's door:
INSPECT JAM PROTECTION PULSE SWITCH OPERATION**

- Connect the positive (+) lead from the TOYOTA electrical tester to terminal 3 and the negative (–) lead to terminal 5.
- Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2.
- Check that pulse is generated during the motor running.

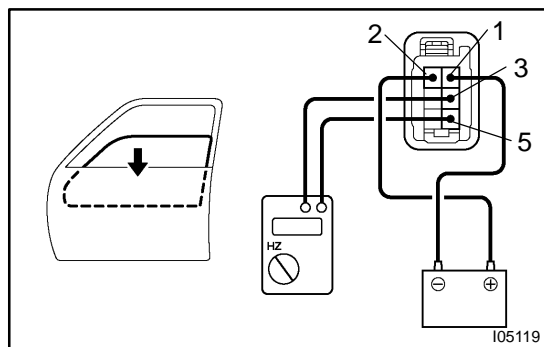

- (d) Reverse the polarity and check that pulse is generated. If pulse is not generated, replace the motor.


NOTICE:

If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

24. Driver's door:

INSPECT JAM PROTECTION PULSE SWITCH CIRCUIT


(See page [DI-1031](#))

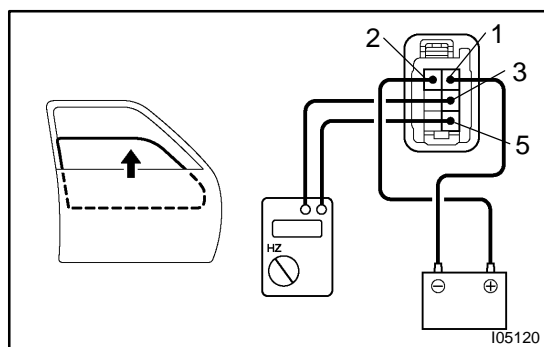

25. Front passenger's door:

INSPECT JAM PROTECTION PULSE SWITCH OPERATION

- Connect the positive (+) lead from the TOYOTA electrical tester to terminal 3 and the negative (–) lead to terminal 5.
- Connect the positive (+) lead from the battery to terminal 2 and the negative (–) lead to terminal 1.
- Check that pulse is generated during the motor running.

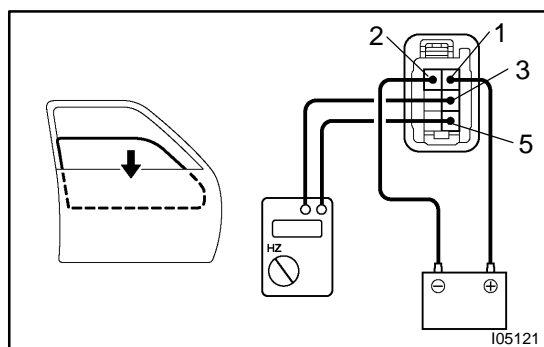

- (d) Reverse the polarity and check that pulse is generated. If pulse is not generated, replace the motor.


NOTICE:

If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

26. Front passenger's door:

INSPECT JAM PROTECTION PULSE SWITCH CIRCUIT


(See page [DI-1067](#))

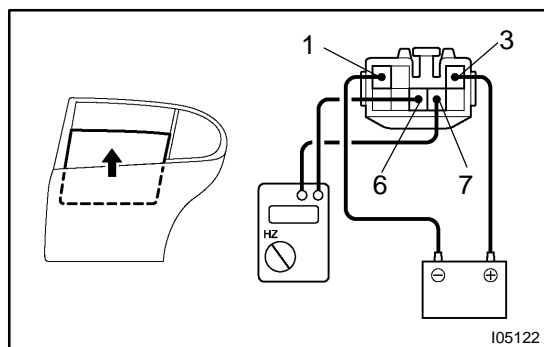

27. Rear LH side door:

INSPECT JAM PROTECTION PULSE SWITCH


- Connect the positive (+) lead from the TOYOTA electrical tester to terminal 3 and the negative (–) lead to terminal 5.
- Connect the positive (+) lead from the battery to terminal 2 and the negative (–) lead to terminal 1.
- Check that pulse is generated during the motor running.

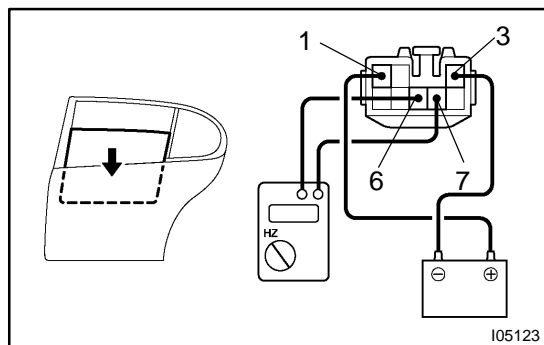


- (d) Reverse the polarity and check that pulse is generated. If pulse is not generated, replace the motor.

NOTICE:

If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

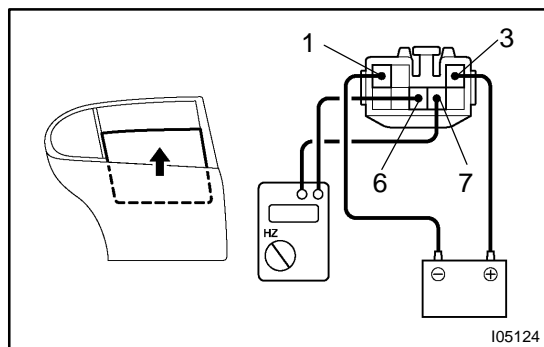**28. Rear RH side door:****INSPECT JAM PROTECTION PULSE SWITCH**

- (a) Connect the positive (+) lead from the TOYOTA electrical tester to terminal 3 and the negative (–) lead to terminal 5.
- (b) Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to terminal 2.
- (c) Check that pulse is generated during the motor running.

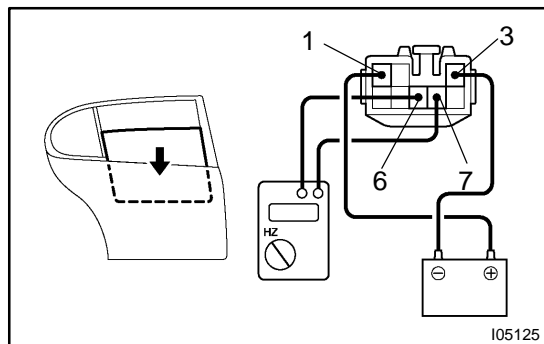

- (d) Reverse the polarity and check that pulse is generated. If pulse is not generated, replace the motor.

NOTICE:

If connecting the wire harness wrongly, the sensor might be damaged so caution is necessary.

29. CHECKING OF THE JAM PROTECTION FUNCTION**NOTICE:**

Never, ever be caught any part of your body when checking.

HINT:

In case of performing resetting of the limit switch, do checking after repeating up and down of the glass with automatic operation.

- (a) Confirmation of AUTO up operation:
Confirm that the window will be fully close with AUTO up operation.
- (b) Checking of the operation of the jam protection function:
 - (1) Move up the window with AUTO up operation and check that the window will go down when it touches the handle of the hammer studded.
 - (2) Confirm that the window will then stop going down about 200 mm.

HINT:

In case of removing the glass, glass guide, regulator and etc. be sure to perform checking of the jam protection function. If the jam protection is not function properly, adjust power window motor reset switch and pulse switch.