


Brake fluid level warning switch circuit

CIRCUIT DESCRIPTION

To detect abnormality of the brake fluid level.

WIRING DIAGRAM

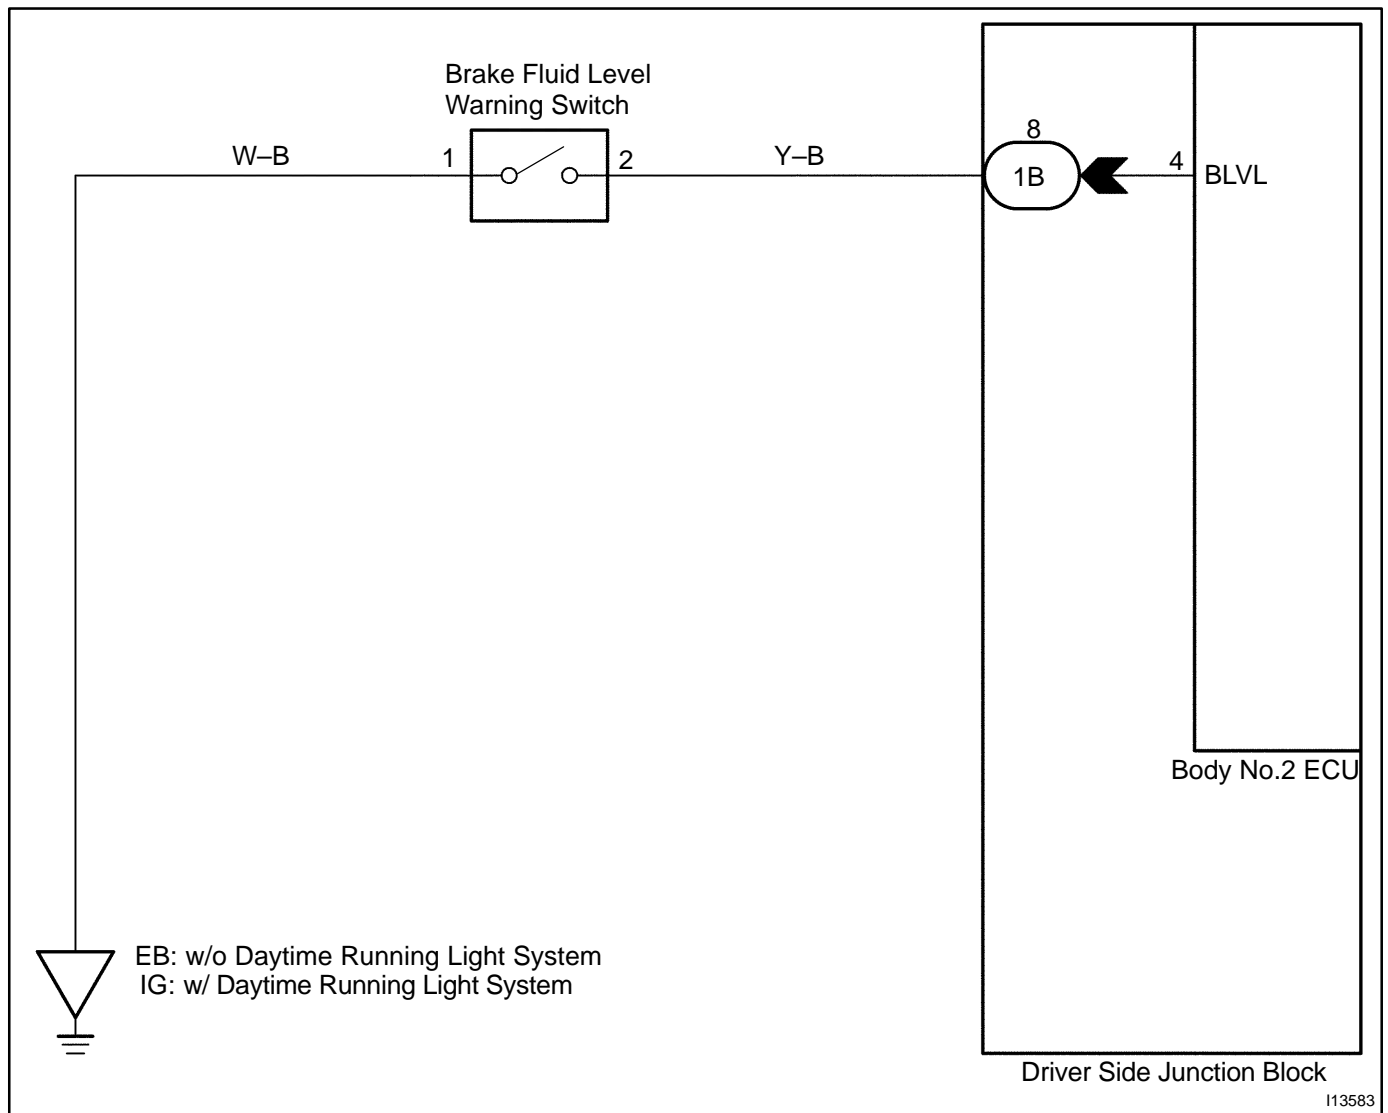

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check brake fluid level warning switch using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check the brake fluid level warning switch using DATA LIST.

Brake fluid level	Switch
Normal	OFF
Abnormal	ON

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-898](#)).

NG

2	Check brake fluid level warning switch. (See page BE-93).
---	--

NG

Replace the brake fluid level warning switch.

OK

3	Check wireharness and connector between brake fluid level warning switch and body ECU No. 2.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-898](#))