

CIRCUIT INSPECTION


DTC	B1211 / 11	Driver door ECU communication stop
------------	-------------------	---

CIRCUIT DESCRIPTION

This DTC is output when communication stops between driver door ECU and body ECU No. 1.

DTC No.	DTC Detecting Condition	Trouble Area
B1211/11	No communication from driver door ECU more than 10 seconds.	<ul style="list-style-type: none"> • Driver door ECU • Wireharness

WIRING DIAGRAM

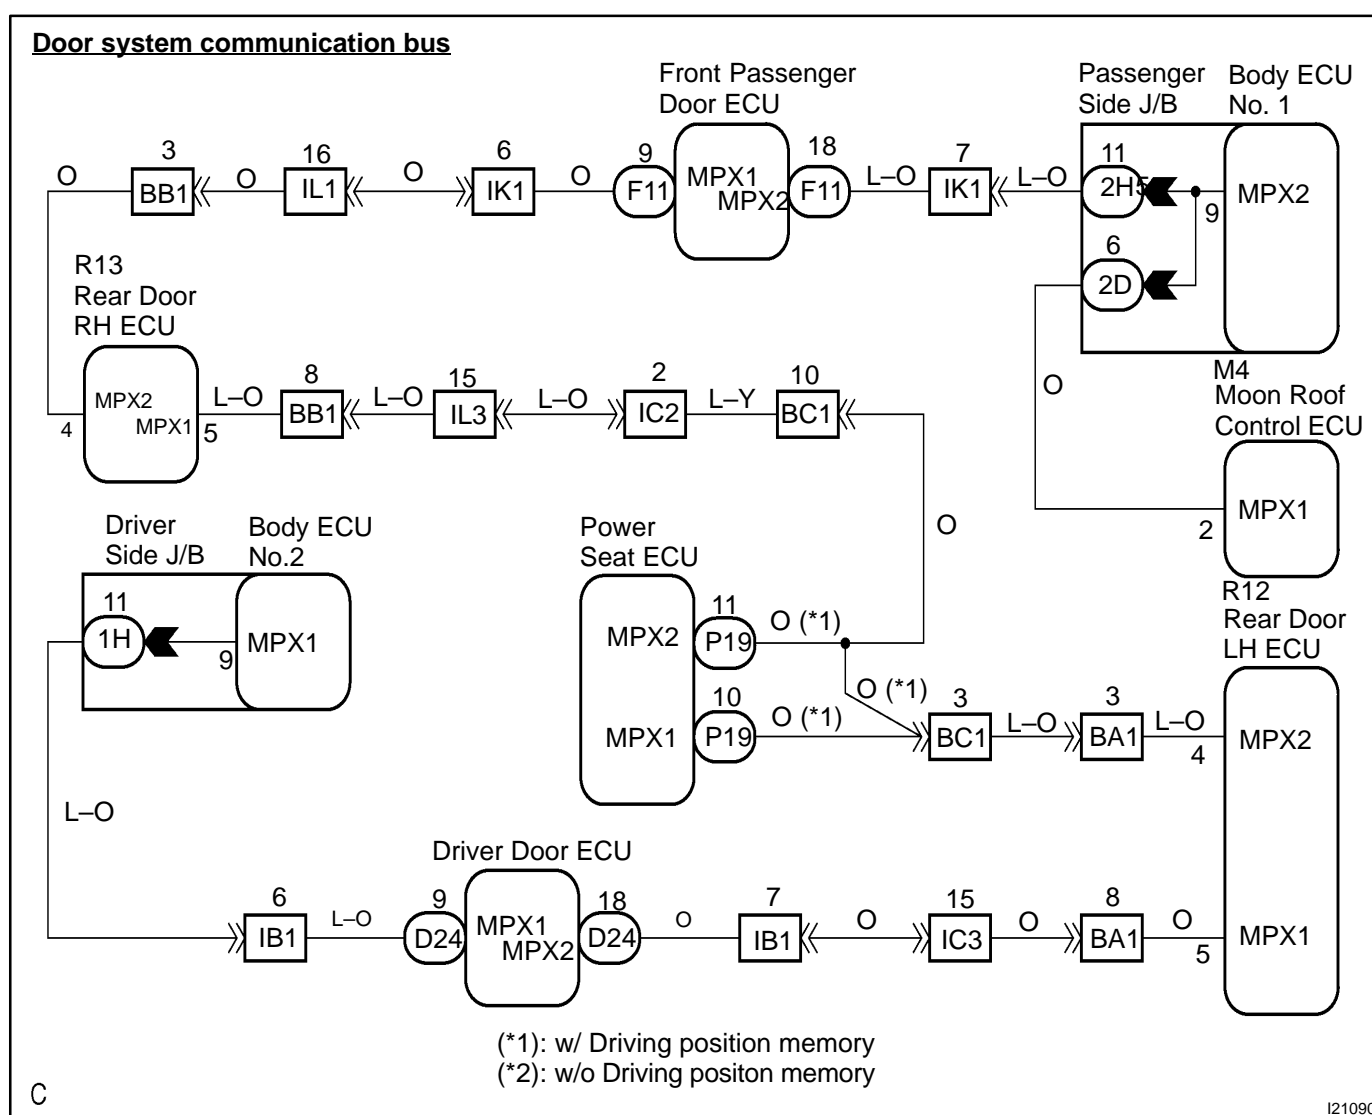

INSPECTION PROCEDURE

1	Check driver door ECU.
----------	-------------------------------

CHECK:


Check if the driver door window glass auto up.

HINT:

With this inspection, the driver door ECU CPU can be diagnosed if it works normally or not.

NG**Replace the driver ECU.****OK**

2 Check wireharness.

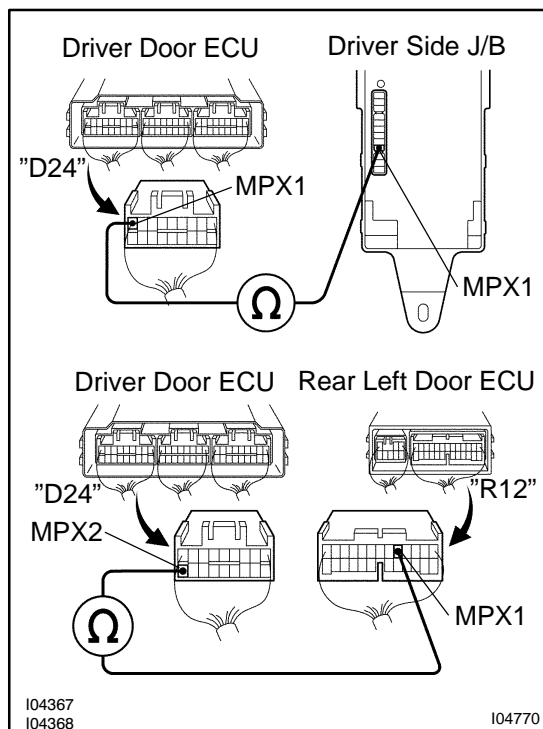

PREPARATION:

Disconnect connector of Body ECU No. 2, "D24" of driver door ECU and "D12" of rear left ECU.

CHECK:

- Check continuity between terminals MPX1 of Body ECU No. 2 and MPX1 of driver door ECU.
- Check continuity between terminals MPX2 of driver door ECU and MPX1 of rear left door ECU.

OK:

There is a continuity in wireharness of both (a) and (b). or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG

Repair or replace wireharness.

OK

Replace the driver door ECU.