


TERMINALS OF ECU

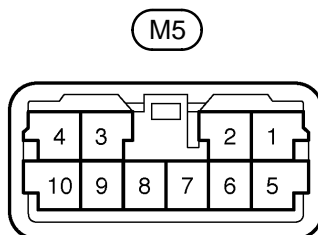

I04611

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
MPX1 ↔ Body ground (M5 – 2 ↔ Body ground)	O ↔ Body ground	Signal between sliding roof control ECU and Body ECU	10 – 14 V
		Others	Resistance (Approx. 2.5 kΩ)
DWN ↔ E (M5 – 3 ↔ M5 – 7)	R–W ↔ W–B	Sliding roof control switch TILT DOWN	10 – 14 V
		Others	Below 1 V
UP ↔ E (M5 – 4 ↔ M5 – 7)	R–Y ↔ W–B	Sliding roof control switch TILT UP	10 – 14 V
		Others	Below 1 V
B ↔ E (M5 – 5 ↔ M5 – 7)	L–O ↔ W–B	Always	10 – 14 V
E ↔ Body ground (M5 – 7 ↔ Body ground)	W–B ↔ Body ground	Always	Below 1 V
IG ↔ E (M5 – 8 ↔ M5 – 7)	B–R ↔ W–B	Ignition switch ON	10 – 14 V
		Ignition switch OFF or ACC	Below 1 V
OPN ↔ E (M5 – 9 ↔ M5 – 7)	P ↔ W–B	Sliding roof control switch OPEN	10 – 14 V
		Others	Below 1 V
CLS ↔ E (M5 – 10 ↔ M5 – 7)	G–Y ↔ W–B	Sliding roof control switch CLOSE	10 – 14 V
		Others	Below 1 V