


## INSPECTION

### 1. INSPECT FOG LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	–	No continuity
ON	A10 – A11	Continuity

If continuity is not as specified, replace the switch.

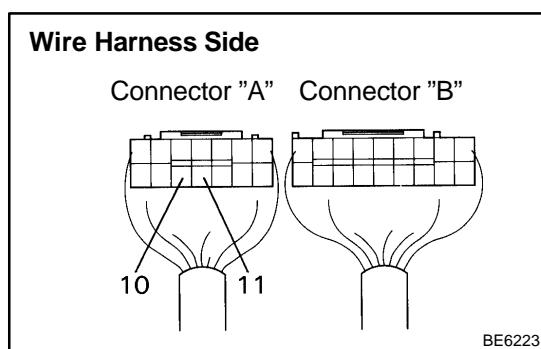


### 2. INSPECT FOG LIGHT SWITCH CIRCUIT

- Pull the spool body forward and separate spool body from steering column.
- Connect the wire harness side connector to the combination switch and inspect the wire harness side connect or from the back side, as shown.

### Fog Light Switch Circuit

Tester connection	Condition	Specified condition
A10 – Ground	Dimmer switch HI or FLASH	No continuity
A10 – Ground	Dimmer switch LO	Continuity
A11 – Ground	Light control switch OFF or TAIL	No voltage
A11 – Ground	Light control switch HEAD	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.

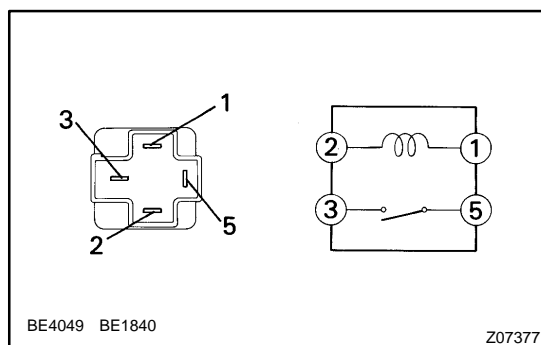

### 3. INSPECT FOG LIGHT RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

### 4. INSPECT FOG LIGHT RELAY CIRCUIT (See page BE-16)