

DTC	P0753, P0758	Shift Solenoid A/B Electrical Malfunction (Shift Solenoid Valve No.1/No.2)
------------	---------------------	---

CIRCUIT DESCRIPTION

Shifting from 1st to O/D is done in combination with ON and OFF of the shift solenoid valves No.1 and No.2 controlled by ECM. If an open or short circuit occurs in either of the shift solenoid valves, the ECM controls the remaining normal shift solenoid valve to allow the vehicle to be operated safely (Fail safe function).

Fail safe function:

If either of the shift solenoid valve circuits develops an open or a short, the ECM turns the other shift solenoid ON and OFF to shift to the gear positions shown in the table below. The ECM also turns the shift solenoid valve SL OFF at the same time. If both solenoids are malfunction, hydraulic control cannot be done electronically so it must be done manually.

Manual shifting as shown in the following table must be done. (If the case of a short circuit, the ECM stops sending current to the short circuited solenoid).

Position	Normal			Shift Solenoid Valve No.1 Malfunctioning			Shift Solenoid Valve No.2 Malfunctioning			Both Solenoids Malfunctioning
	Solenoid valve		Gear	Solenoid valve		Gear	Solenoid valve		Gear	Gear when shift selector is manually operated
	No.1	No.2		No.1	No.2		No.1	No.2		
D	ON	OFF	1	X	ON	3	ON	X	1	O/D
	ON	ON	2	X	ON	3	OFF	X	O/D	O/D
	OFF	ON	3	X	ON	3	OFF	X	O/D	O/D
	OFF	OFF	O/D	X	OFF	O/D	OFF	X	O/D	O/D
2	ON	OFF	1	X	ON	3	ON	X	1	3
	ON	ON	2	X	ON	3	OFF	X	3	3
	OFF	ON	3	X	ON	3	OFF	X	3	3
L	ON	OFF	1	X	OFF	1	ON	X	1	1
	ON	ON	2	X	ON	2	ON	X	1	1


*: Malfunctions

HINT:

Check the shift solenoid valve No.1 when DTC P0753 is output and check the shift solenoid valve No.2 when DTC P0758 is output.


DTC No.	DTC Detecting Condition	Trouble Area
P0753 P0758	<p>The ECM checks for an open or short circuit in the shift solenoid valves No.1 and No.2 circuit when it changes.</p> <p>The ECM records DTC P0753 or P0758 if condition (a) or (b) is detected once, but it does not light up the MIL.</p> <p>After ECM detects condition (a) or (b) continuously 2 times or more in one-trip, it causes the MIL light up until condition (a) or (b) disappears.</p> <p>After that, if the ECM detects condition (a) or (b) once, it starts lighting up the MIL again.</p> <p>(a) Solenoid resistance is 8 Ω or less short circuit when solenoid is energized.</p> <p>(b) Solenoid resistance is 100 kΩ or more open circuit when solenoid is not energized.</p>	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No.1/No.2 circuit • Shift solenoid valve No.1/No.2 • ECM

WIRING DIAGRAM

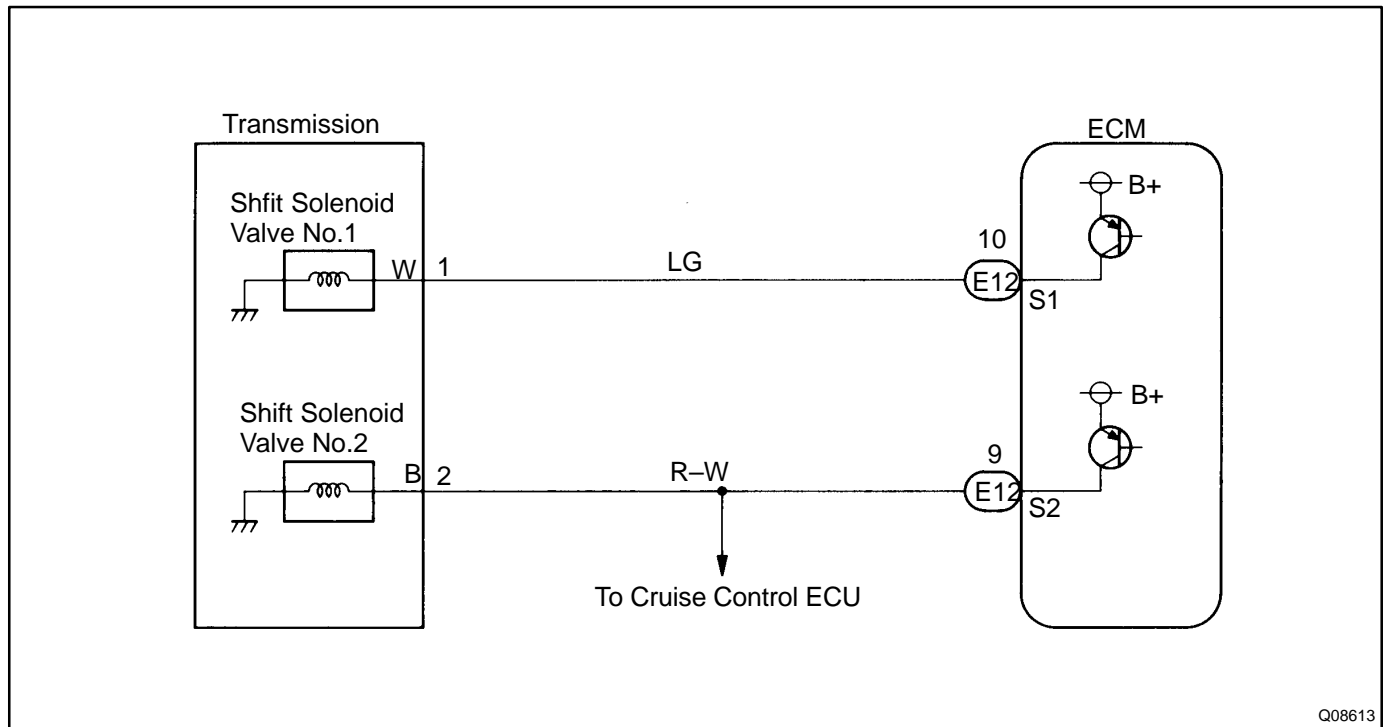

INSPECTION PROCEDURE

- 1 Measure resistance between terminal S1 or S2 or ECM and body ground.

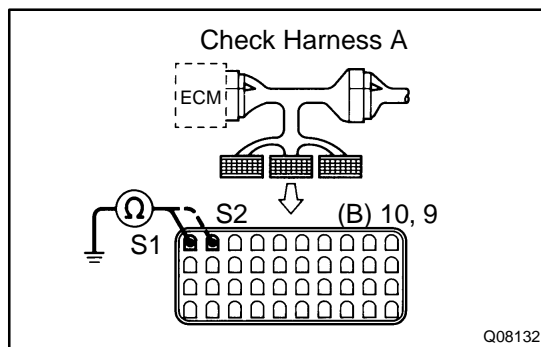

PREPARATION:

- (a) Disconnect the connector from ECM.
- (b) Connect the check harness A to the harness side connector.

NOTICE:

Do not connect the check harness A to ECM.

CHECK:

Measure resistance between terminal S1 or S2 of check harness A connector and body ground.


OK:

Resistance: 11 – 15 Ω

OK

Check and replace ECM.

NG

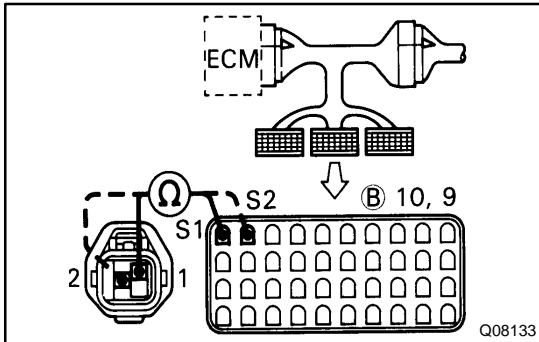2**Check harness and connector between ECM and automatic transmission solenoid connector.****PREPARATION:**

- (a) Disconnect the connector from ECM.
- (b) Connect the check harness A to the harness side connector.
- (c) Disconnect the solenoid connector from the automatic transmission.

NOTICE:**Do not connect the check harness A to ECM.****CHECK:**


Check harness and connector between terminal S1 or S2 of check harness A connector and terminal 1 or 2 of solenoid connector.

OK:

There is no open or short circuit.

NG**Repair or replace harness or connector.****OK**

3 Check shift solenoid valve No.1 or No.2.

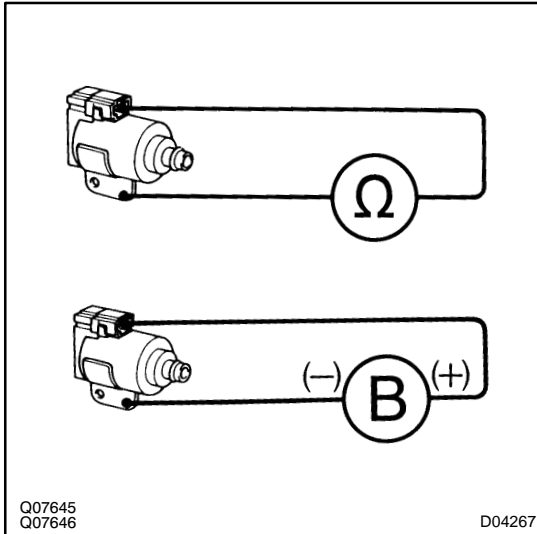**PREPARATION:**

- (a) Jack up the vehicle.
- (b) Remove the oil pan.
- (c) Disconnect the solenoid connector.
- (d) Remove the shift solenoid valve No.1 or No.2.

CHECK:

Measure resistance between solenoid connector and body ground.

OK:

Resistance: 11 – 15 Ω

CHECK:

Connect positive ⊕ lead to terminal of solenoid connector, negative ⊖ lead to solenoid body.

OK:

The solenoid makes an operating noise.

NG

Replace shift solenoid valve.

OK

Repair or replace solenoid wire.