

DTC	P1200	Fuel Pump Relay/ECU Circuit Malfunction
------------	--------------	--

CIRCUIT DESCRIPTION

The fuel pump speed is controlled at 2 steps (high speed, low speed) by the condition of the engine (starting, light load, heavy load), when the engine starts (STA ON), the ECM sends a Hi signal (about 5 V) to the fuel pump ECU (FPC terminal).

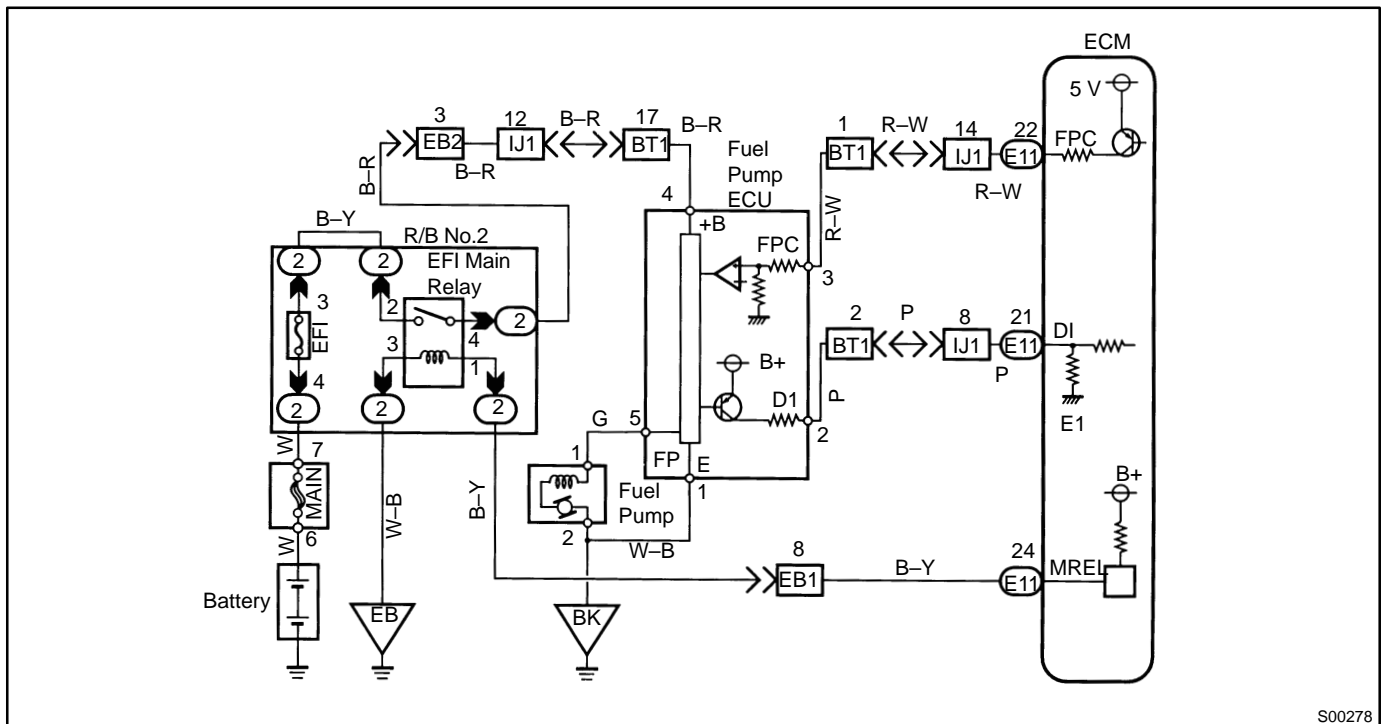
The fuel pump ECU then outputs Hi voltage (battery positive voltage) to the fuel pump so that the fuel pump operates at high speed.

After the engine starts, during idling or light loads, the ECM outputs a Low signal (about 2.5 V) to the fuel pump ECU, the fuel pump ECU outputs Low voltage (about 9 V) to the fuel pump and causes the fuel pump to operate at low speed.

If the intake air volume increases (high engine load), the ECM sends a Hi signal to the fuel pump ECU and causes the fuel pump to operate at high speed.

DTC No.	DTC Detecting Condition	Trouble Area
P1200	(1) Open or short in fuel pump circuit for 1 sec. or more with engine speed 1,000 rpm or less. (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in fuel pump ECU circuit • Fuel pump ECU • ECM power source circuit • Fuel pump • ECM
	(2) Open in input circuit of fuel pump ECU (FPC) with engine speed 1,000 rpm or less. (2 trip detection logic)	
	(3) Open or short in diagnostic signal line (DI) of fuel pump ECU with engine speed 1,000 rpm or less. (2 trip detection logic)	

WIRING DIAGRAM



S00278

INSPECTION PROCEDURE

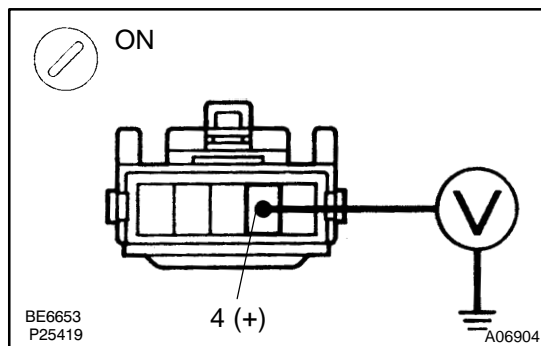
- | | |
|----------|--|
| 1 | Connect the LEXUS hand-held tester and check operation of fuel pump
(See page SF-6). |
|----------|--|

OK

Go to step 7.

NG

- | | |
|----------|---|
| 2 | Check voltage of fuel pump ECU power source. |
|----------|---|

**PREPARATION:**

- (a) Remove LH quarter trim panel (See page SF-68).
- (b) Disconnect fuel pump ECU connector.
- (c) Turn ignition switch ON.

CHECK:

Measure voltage between terminal 4 of fuel pump ECU connector and body ground.

OK:

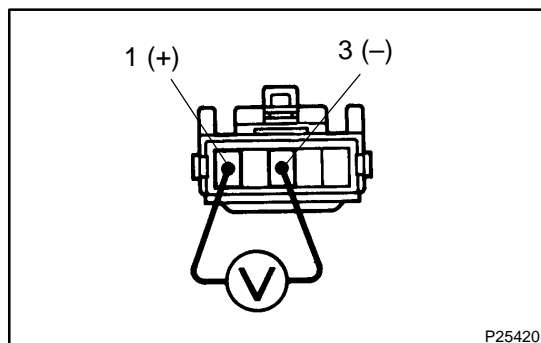
Voltage: 9 – 14 V

NG

Check for open and short in harness and connector between EFI main relay and fuel pump ECU (See page IN-29).

OK

- | | |
|----------|--|
| 3 | Check voltage between terminals 1 and 3 of fuel pump ECU connector. |
|----------|--|

**PREPARATION:**

- (a) Remove LH quarter trim panel (See page SF-68).
- (b) Disconnect fuel pump ECU connector.

CHECK:

Measure voltage between terminals 1 and 3 of fuel pump ECU connector when ignition switch is turned to start.

OK:

Voltage: 4.5 – 5.5 V

OK

Go to step 5.

NG

- 4** Check for open and short in harness and connector between terminals FPC of ECM and 3 of fuel pump ECU, terminal 1 of pump ECU and body ground (See page [IN-29](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-29](#)).

- 5** Check fuel pump (See page [SF-6](#)).

NG

Repair or replace fuel pump.

OK

- 6** Check for open and short in harness and connector between terminal 5 and fuel pump and body ground (See page [IN-29](#)).

NG

Repair or replace harness or connector.

OK

Replace fuel pump ECU.

- 7** Check for open and short in harness and connector between terminals DI of ECM and 2 of fuel pump ECU (See page [IN-29](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-29](#)).