


Power Seat Position Sensor Circuit


CIRCUIT DESCRIPTION

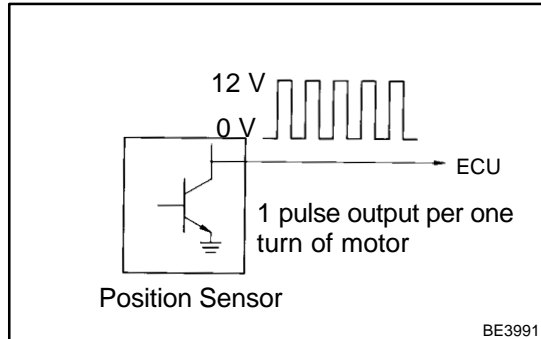

The position sensor senses movement of the seat and send pulse signals to the ECU. The position sensor sends pulses to the ECU in proportion to the amount of seat movement, as shown in the diagram of the left.


If a malfunction occurs in a position sensor and a sensor signal is not input to the ECU even when the motor operates, the ECU prohibits return operation.

WIRING DIAGRAM

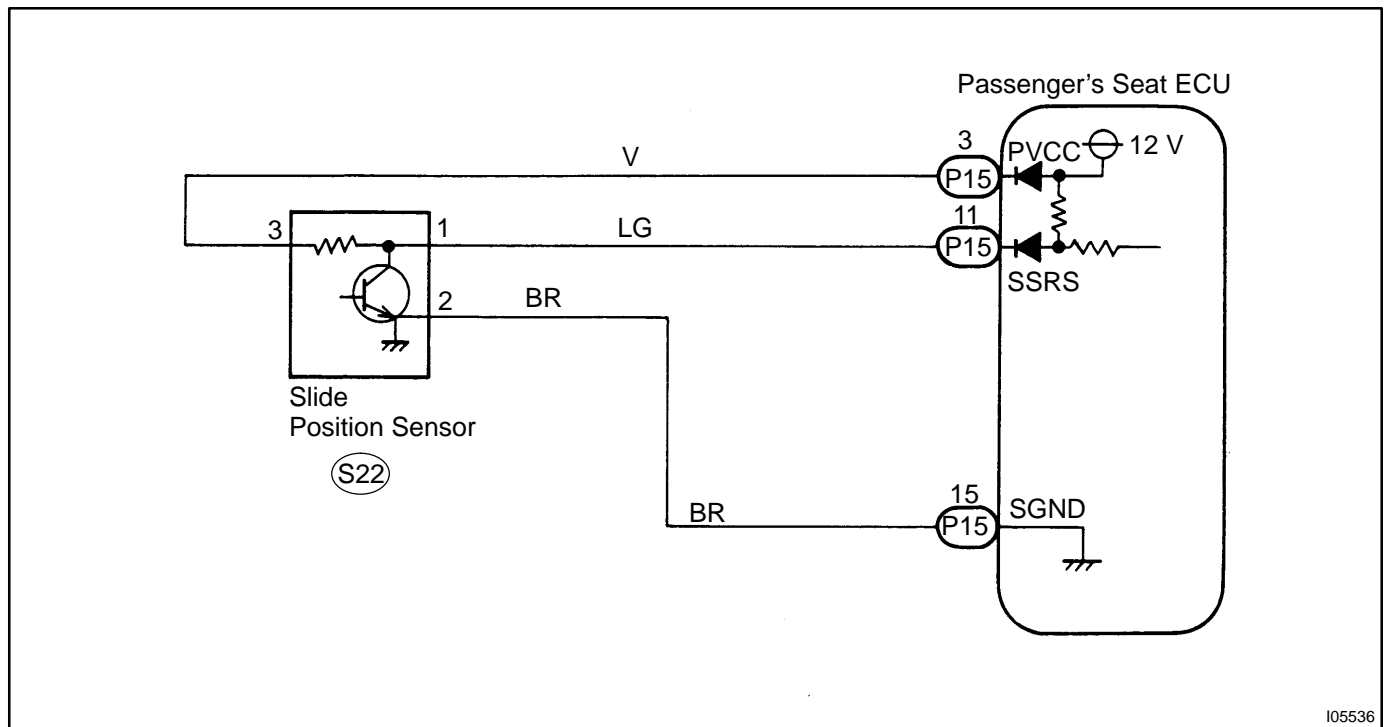

INSPECTION PROCEDURE

1 Position Sensor Check.

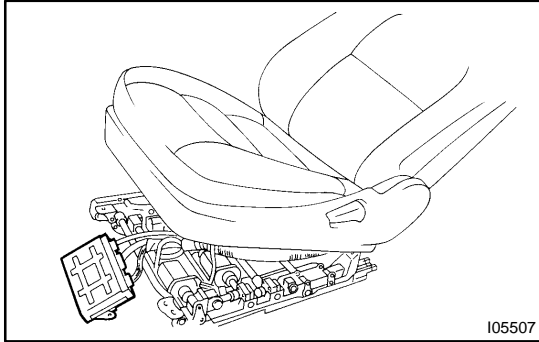
**PREPARATION:**

- (a) Remove the passenger's seat.
- (b) Remove the bolts for seat rail and lift the seat cushion up a little.


NOTICE:

If the seat cushion is lifted too high, the harness will be pulled and the clamp may come loose.

- (c) Remove the ECU with the connector attached from where it is installed to the underside of the seat cushion.

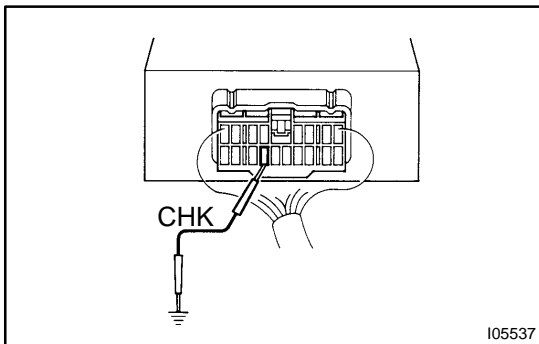**Position sensor check****CHECK:**


- (a) Connect terminal CHK of the ECU to body ground to put the ECU into check mode.

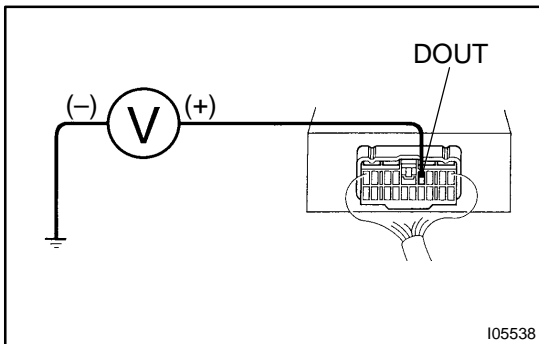


- (b) Measure voltage between terminal DOUT of ECU and body ground.

HINT:


Use an analog type volt meter.

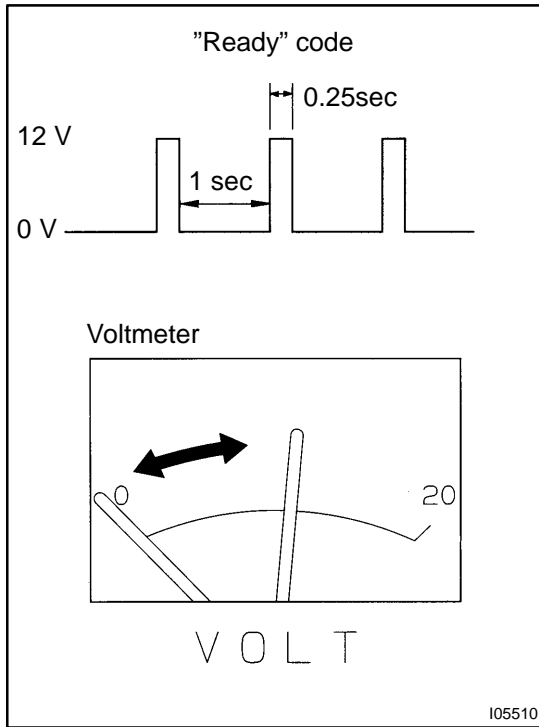


- (c) Check that the "ready" code is output, as shown in the illustration.

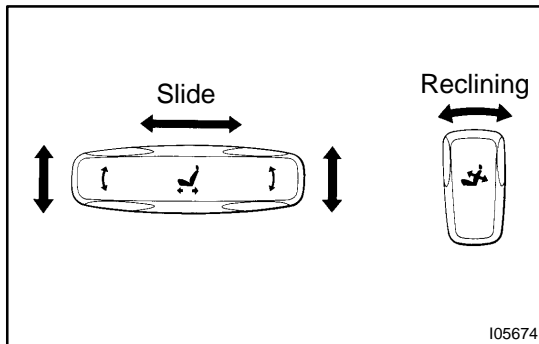

- (d) Operate the power seat manual switch and check the change in the voltage when the seat is moving.

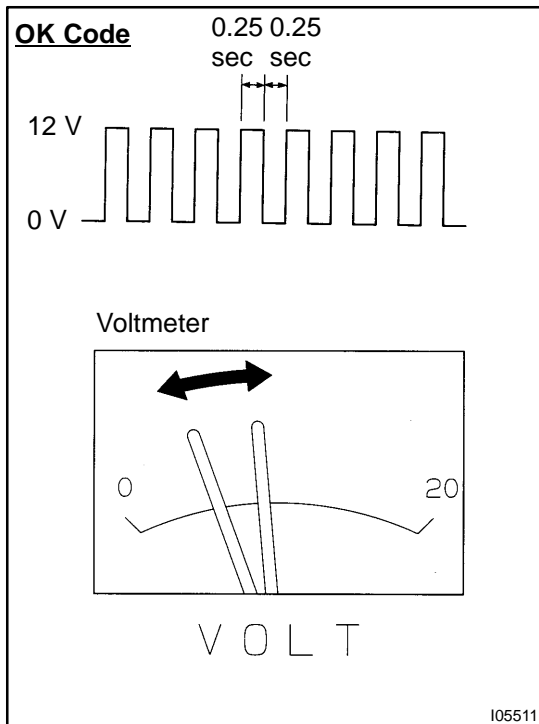

- (e) The changes in the output voltage when the input signal is normal and when it is abnormal, as shown in the illustrations. Compare the results with those from (4) and diagnose the condition of each circuit.

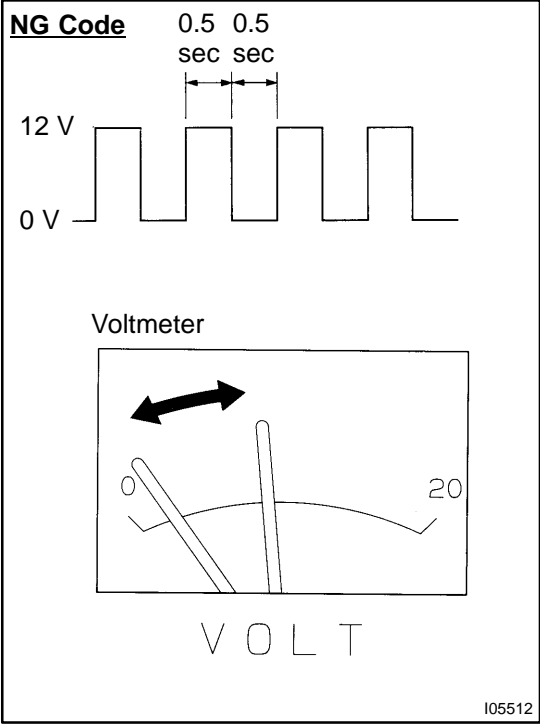

HINT:

- The OK and NG codes continue to be output while the manual switch is ON.
- When the seat reaches the limit of movement, e.g. when the headrest reaches the highest or lowest position, the voltage changes from the OK code to the NG code. After operating any of the system functions with no problem and confirming the OK code and NG code by comparing the amount of wavering of the voltmeter needle, inspect the function with a problem.
- The amount of wavering of the voltmeter needle depends on the meter.

OK:

Output	OK	OK Code
Output	NG	NG Code


OK

Proceed to next circuit inspection shown on matrix chart (See page DI-633).

NG

2

Check position sensor.

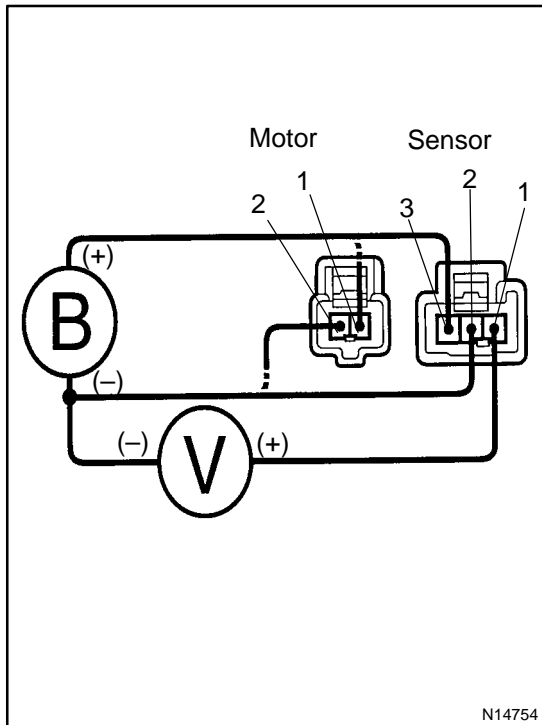

PREPARATION:

Disconnect the connector of the sensor and the connector of the motor leading to the sensor.

CHECK:

- Connect positive \oplus lead to terminal 3 of sensor and negative \ominus lead to terminal 2.
- Measure voltage between terminal 1 of sensor and body ground when battery positive voltage is applied between terminals 1 and 2 of motor connector.

HINT:

When the battery positive voltage is applied to the motor connector terminals, \oplus and \ominus are interchangeable.

OK:

Condition	Voltage
Motor stopped Check several times with the motor in a different position each time.	0 V or battery positive voltage according to stop position
With motor turning	Half of battery positive voltage

NG

Replace position sensor.

OK

3

Check for open and short in harness and connectors between ECU and position sensor (See page IN-29).

NG

Repair or replace harness or connectors.

OK

Check and replace ECU.