


## Door Key Lock and Unlock Switch Circuit (Lock Side)

### CIRCUIT DESCRIPTION

Refer to page [DI-772](#)


Transistor inside the wireless door lock ECU coming ON causes the theft deterrent ECU to output a signal to lock all the doors.

### WIRING DIAGRAM

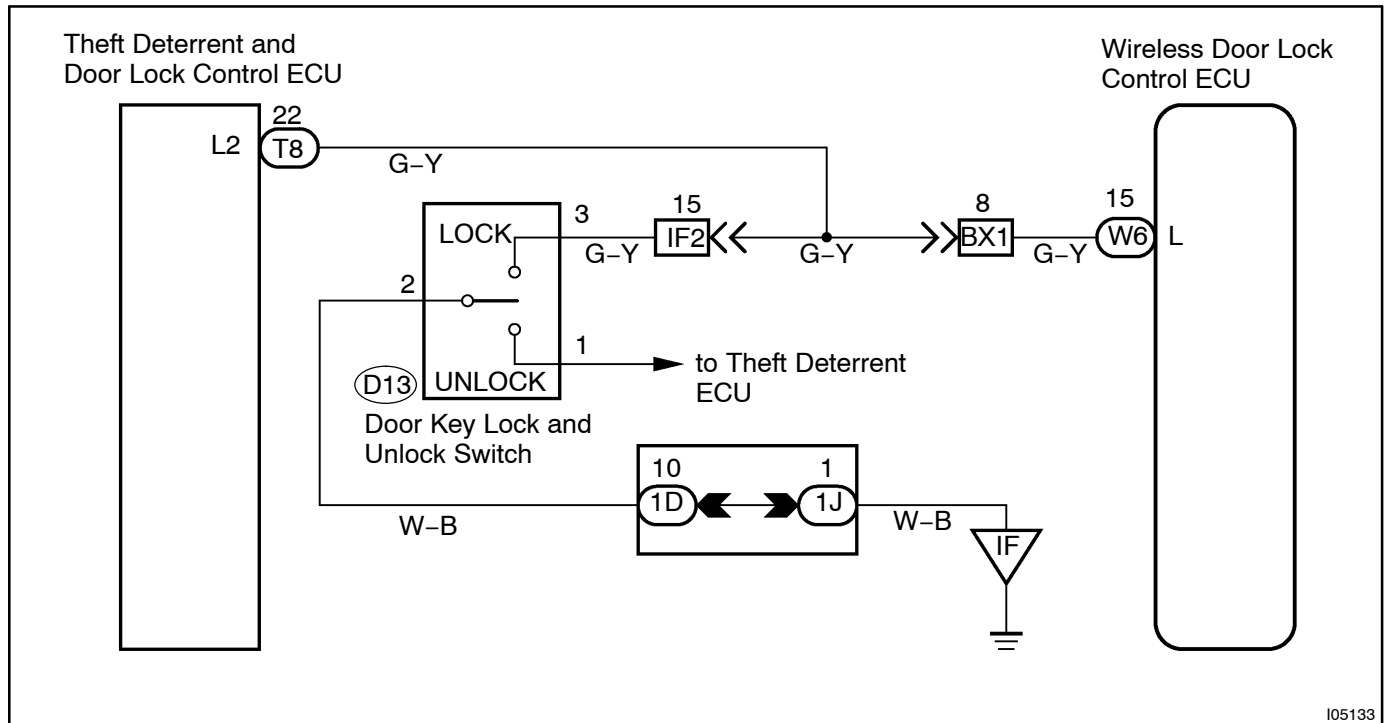

**INSPECTION PROCEDURE**

- |          |  |
|----------|--|
| <b>1</b> | <b>Check voltage between terminal L of wireless door lock ECU connector and body ground.</b> |
|----------|--|

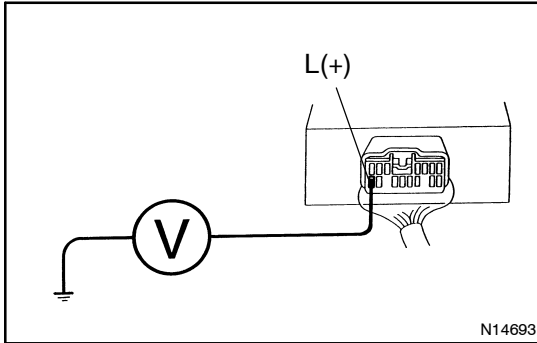**PREPARATION:**

Remove the wireless door lock ECU from No.1 instrument panel brace.

**CHECK:**

Measure voltage between terminal L of wireless door lock ECU connector and body ground.

**OK:**

**Voltage 10 – 14 V**

**OK**

**Proceed to next circuit inspection shown on matrix chart (See page [DI-765](#)).**

**NG**

**Check and repair harness and connector between wireless door lock ECU and door key lock and unlock switch.**