


# INSPECTION

## 1. INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Switch pin free (Pedal depressed)	–	No continuity
Switch pin pushed in (Pedal released)	1 – 2	Continuity
Switch pin free (Pedal depressed)	–	No continuity
Switch pin pushed in (Pedal released)	3 – 4	Continuity

If continuity is not as specified, replace the switch.

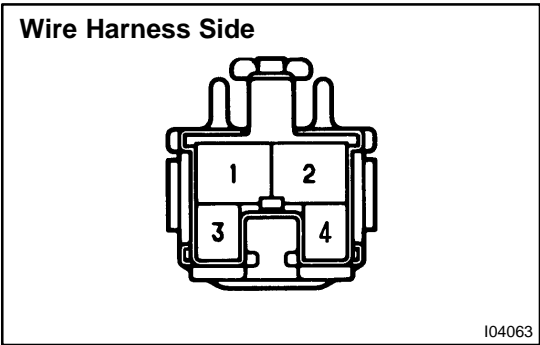


## 2. INSPECT STOP LIGHT SWITCH CIRCUIT (See page [DI-992](#))

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Battery positive voltage

If circuit is not as specified, inspect the power source or wire harness.

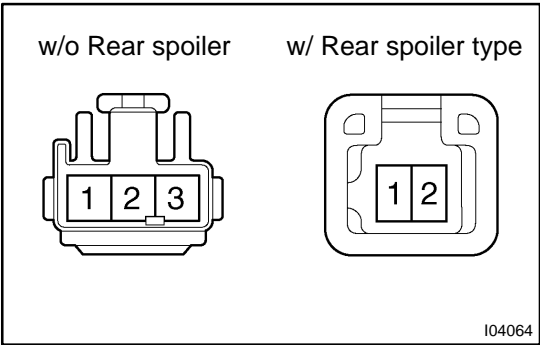


## 3. INSPECT HI-MOUNTED STOP LIGHT CONTINUITY

Using an ohmmeter, check that continuity exists between terminals.

If continuity is not as specified, replace the light assembly or bulb.

## Wire Harness Side

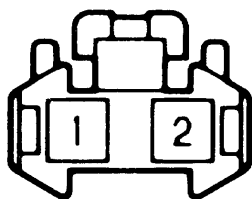

I04053

**4. INSPECT HI-MOUNTED STOP LIGHT CIRCUIT**

Disconnect the connector from the light and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
2 – Ground	Constant	Continuity

If circuit is not as specified, inspect the power source or wire harness.

**5. INSPECT LIGHT FAILURE SENSOR**  
(See page [DI-994](#) and [BE-93](#))