


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the body ECU No. 2.

WIRING DIAGRAM

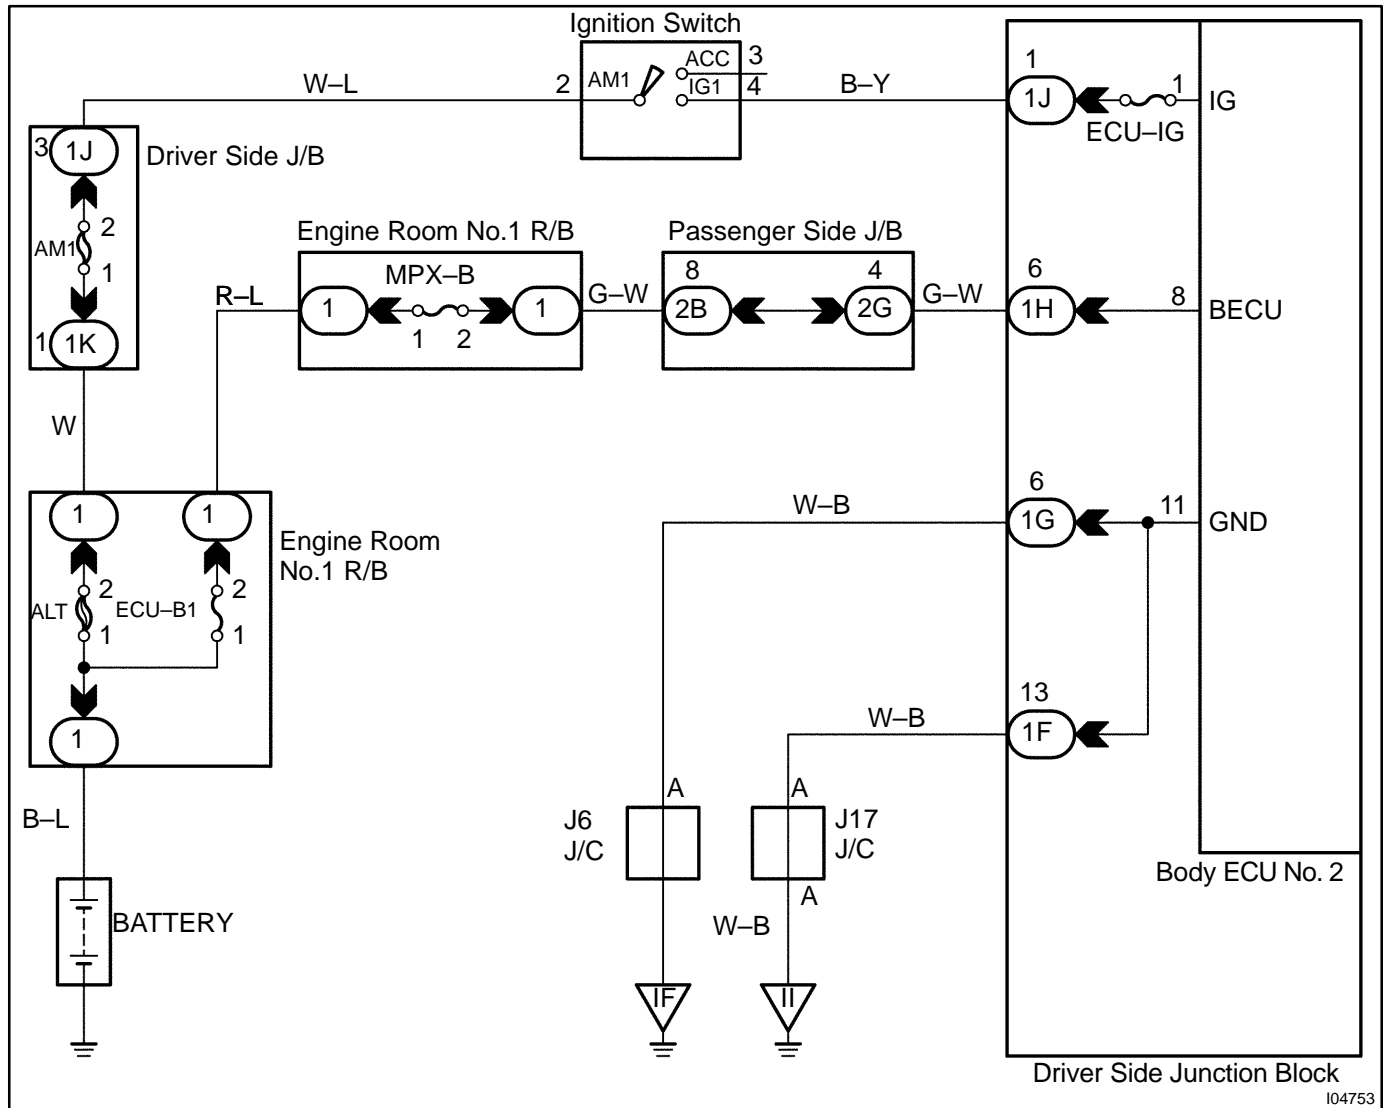

INSPECTION PROCEDURE

1	Check MPX–B and ECU–IG fuse.
----------	-------------------------------------

CHECK:

Check continuity of MPX–B and ECU–IG fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK**

2	Check voltage between terminals BECU, IG and GND of body ECU No. 2 connector.
----------	--

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals IG and GND.

OK:

Voltage: 10 – 14V

PREPARATION:

(a) Turn ignition switch OFF.

(b) Disconnect the body ECU No. 2 connector.

CHECK:

Measure voltage between terminals BECU and GND.

OK:

Voltage: 10 – 14V

OK**Proceed to next circuit inspection shown on problem symptoms table (See page [DI-977](#)).****NG**

3	Check wireharness and connector between body ECU No. 2 and body ground.
---	---

NG**Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector
between body ECU No. 2 and battery.**