

DTC	B1218 / 18	Body ECU No. 2 communication stop
------------	-------------------	--

CIRCUIT DESCRIPTION

This DTC is output when communication stops between Body ECU No. 2 and Body ECU No. 1.

DTC No.	DTC Detecting Condition	Trouble Area
B1218/18	No communication from Body ECU No. 2 more than 10 seconds.	<ul style="list-style-type: none"> • Body ECU No. 2 • Wireharness

WIRING DIAGRAM

See page [DI-1125](#), [DI-1130](#)

INSPECTION PROCEDURE

1	Check Body ECU No. 2.
----------	------------------------------

CHECK:

Check that the headlight comes on when operating the light control switch with the ignition switch off.

HINT:

With this inspection rear left door ECU CPU can be diagnosed if it works normal or not.

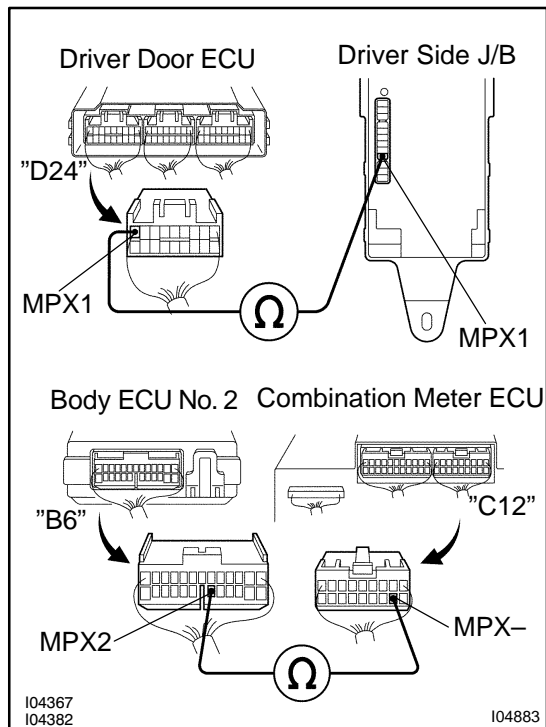
NG

Replace the Body ECU No. 2.

OK

2

Check wireharness

**PREPARATION:**

- Disconnect connector of Body ECU No. 2, "D24" of Driver door ECU and "C12" of Combination meter ECU.
- Remove the Body ECU No. 2 from Driver side junction block.

CHECK:

- Check continuity between terminals MPX1 of Body ECU No. 2 and MPX1 of Driver door ECU.
- Check continuity between terminals MPX2 of Body ECU No. 2 and MPX- of Combination meter ECU.

OK:

There is a continuity in wireharness of both (a) and (b), or either (a) or (b).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG**Repair or replace wireharness.****OK****Replace the Body ECU No. 2.**