

DTC	B1293 / 93	Gateway ECU communication stop
------------	-------------------	---------------------------------------

CIRCUIT DESCRIPTION

This DTC is output when communication stops between tilt and telescopic ECU, A/C amplifier and gateway ECU.

DTC No.	DTC Detecting Condition	Trouble Area
B1293/93	No communication from gateway ECU more than 10 seconds.	<ul style="list-style-type: none">• Gateway ECU• Wireharness

WIRING DIAGRAM

See page [DI-1160](#)

INSPECTION PROCEDURE

1	Check gateway ECU.
----------	---------------------------

CHECK:

Check that the operation of is normal.

HINT:

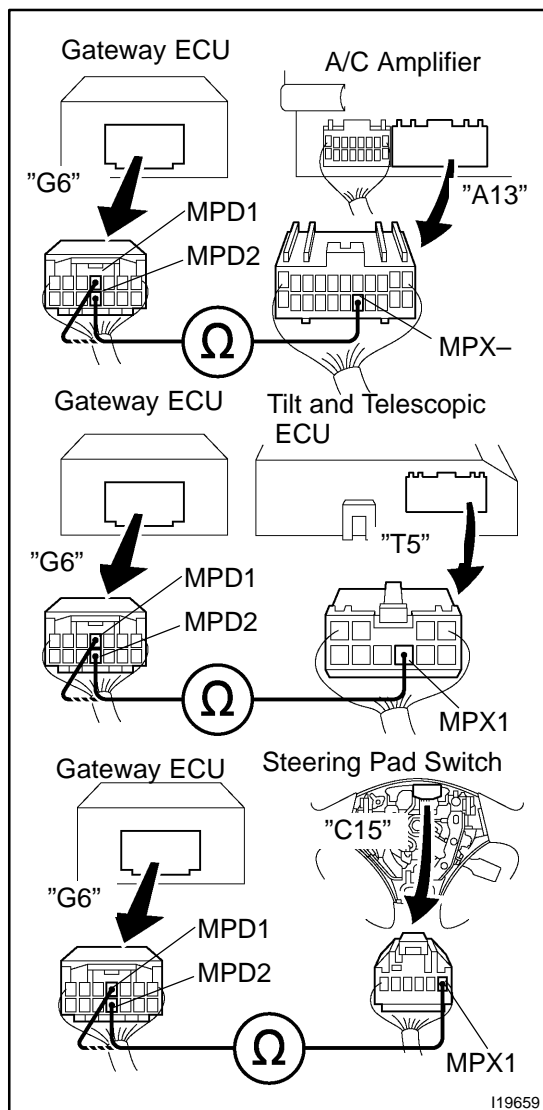
With this inspection, the gateway ECU CPU can be diagnosed if it works normally or not.

NG

Replace the gateway ECU.

OK

2

Check wireharness.**PREPARATION:**

Disconnect connector "T5" of tilt and telescopic ECU, "A13" of A/C amplifier ECU, steering pad switch and "G6" of gateway ECU.

CHECK:

- Check continuity between terminals MPD1, MPD2 of gateway ECU and MPX- of A/C amplifier.
- Check continuity between terminals MPD1, MPD2 of gateway ECU and MPX1 of tilt and telescopic ECU.
- Check continuity between terminal MPD1, MPD2 of gateway ECU and MPX of steering pad switch.

OK:

There is a continuity in wireharness of both (a) and (b) or (a) and (c), or either (b) or (c).

HINT:

If there is OPEN in wireharness of either (a) or (b), please repair it.

NG**Repair or replace wireharness.****OK****Replace the gateway ECU.**