


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the rear left door ECU.

WIRING DIAGRAM

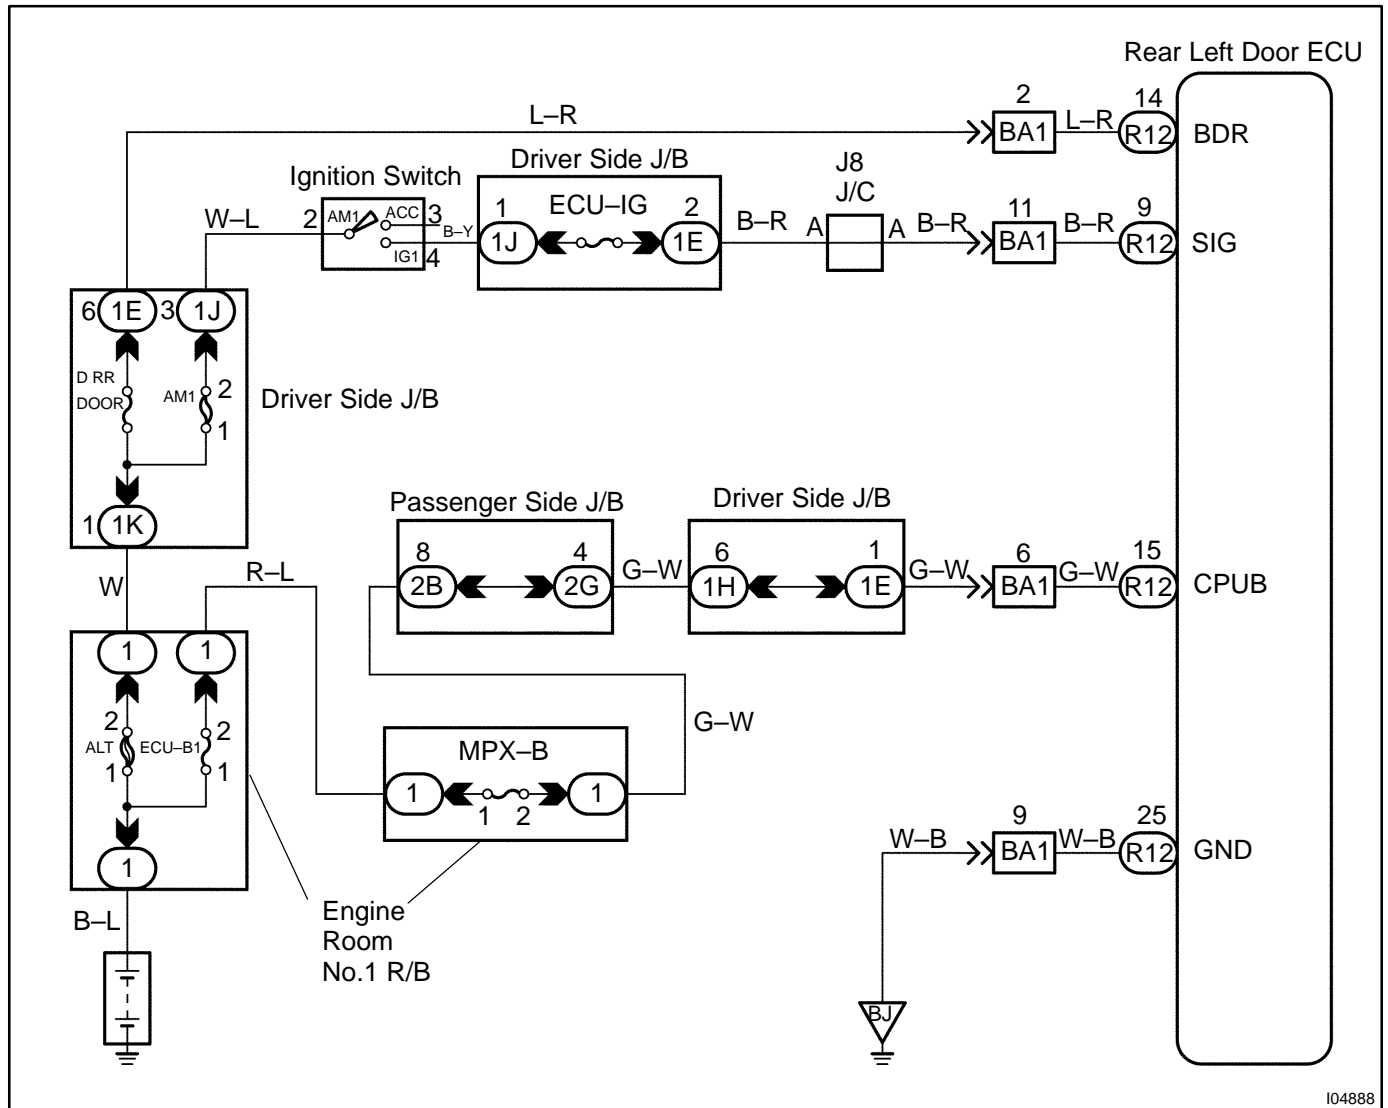

I04888

INSPECTION PROCEDURE

1	Check MPXB, GAUGE and DOOR(RL) fuse.
---	--------------------------------------

CHECK:

Check continuity of MPXB,GAUGE and DOOR(RL) fuse.

OK:

Continuity

NG**Replace the failure fuse.****OK**

2	Check voltage between terminals BDR,CPUB, SIG and GND of rear left door ECU connector.
---	--

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals SIG, and GND.

OK:

Voltage: 10 – 14V

PREPARATION:

(a) Turn ignition switch OFF.

(b) Disconnect the rear left door ECU connector.

CHECK:

Measure voltage between terminals BDR, CPUB and GND.

OK:

Voltage: 10 – 14V

OK**Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1081](#)).****NG**

3	Check wireharness and connector between ECU and body ground.
---	--

NG**Repair or replace wireharness or connector.****OK****Check and repair wireharness and connector
between ECU and battery.**