

Parts Inspection (Combination Switch Assembly)

(See page [BE-39](#))

HINT: Inspect turn signal light switch.

(Turn Signal Flasher)

REMOVAL AND INSTALLATION OF TURN SIGNAL FLASHER

(See page [BE-16](#))

INSPECTION OF TURN SIGNAL FLASHER

INSPECT TURN SIGNAL FLASHER

(Operation)

LHD Side

- Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to 4.
- Connect the two turn signal light bulbs parallel to each other to terminals 3 and 4, check that bulbs flash.

RHD Side

- Connect the positive (+) lead from the battery to terminal 1 and the negative (–) lead to 2.
- Connect the two turn signal light bulbs parallel to each other to terminals 2 and 5, check that the bulbs flash.



HINT: The turn signal lights should flash 60 to 120 times per minute.

If one of the front or rear turn signal lights has an open circuit, the number of flashes will be more than 140 per minute.

If operation is not as specified, replace the flasher.

(Flasher Circuit)


(See page [BE-23](#))

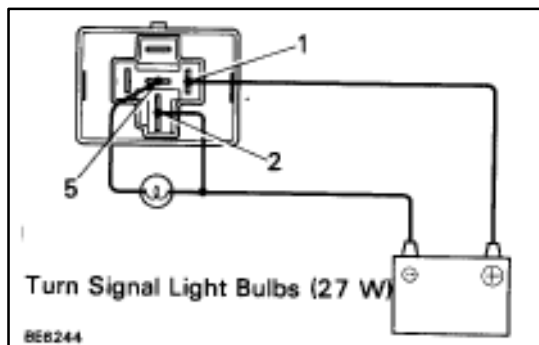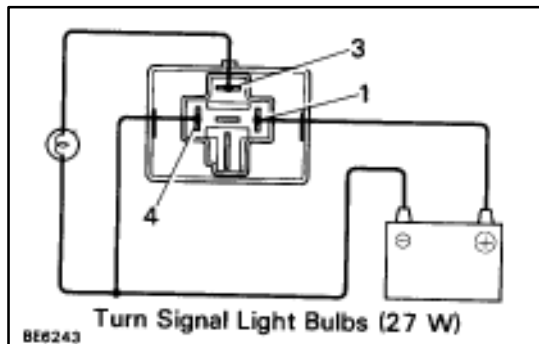

(Hazard Warning Switch)

REMOVAL AND INSTALLATION OF HAZARD WARNING SWITCH

- REMOVE INSTRUMENT PANEL NO. 2 REGISTER ASSEMBLY**
(See page [BO-111](#))
- REMOVE HAZARD WARNING SWITCH**
Remove two screws and hazard warning switch from register.
- INSTALL HAZARD WARNING SWITCH AND REGISTER**
For installation, follow the removal procedure in reverse.


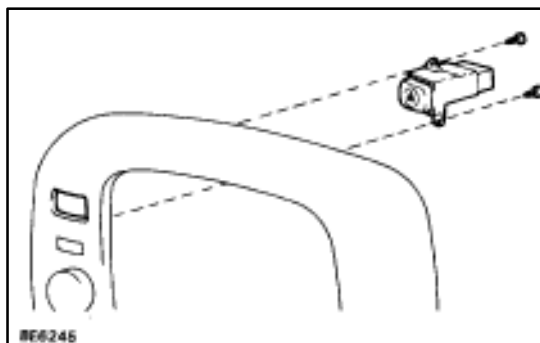


INSPECTION OF HAZARD WARNING SWITCH

INSPECTION HAZARD WARNING SWITCH

(Continuity)

Inspect the switch continuity between terminals.

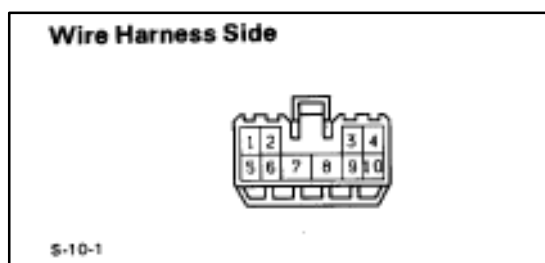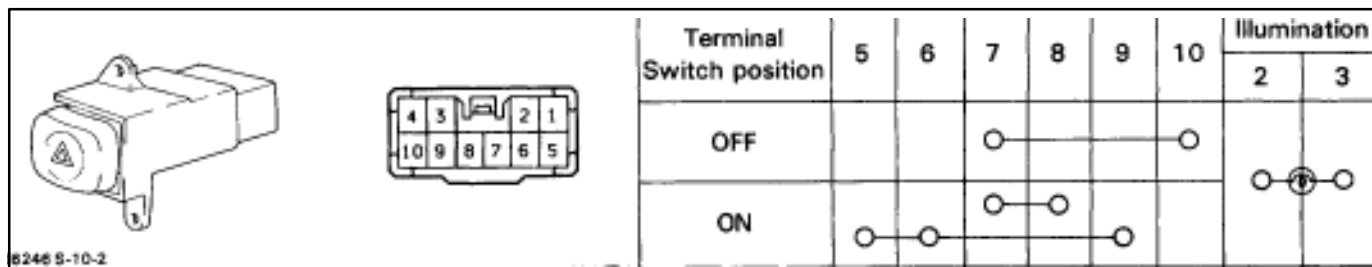

If continuity is not as specified, replace the switch.

(Switch Circuit)

Disconnect the switch connector and inspect the connection on the wire harness side as shown.

Check for	Tester connection	Condition		Specified value
Voltage	8–Ground	Constant		Battery voltage
	10–Ground	Ignition switch position	LOCK or ACC	No voltage
			ON	Battery voltage
	*12–Ground	Light control switch position	OFF	No voltage
			TAIL or HEAD	Battery voltage
Continuity	*13–Ground	Constant		Continuity
	5–Ground	Constant		*2Continuity
	6–Ground	Constant		*2Continuity

*1: Illumination

*2: There is resistance because this circuit is grounded through the bulb.

If the circuit is not as specified, refer to [BE-66](#) wiring diagram and inspect the circuits connected to other parts.