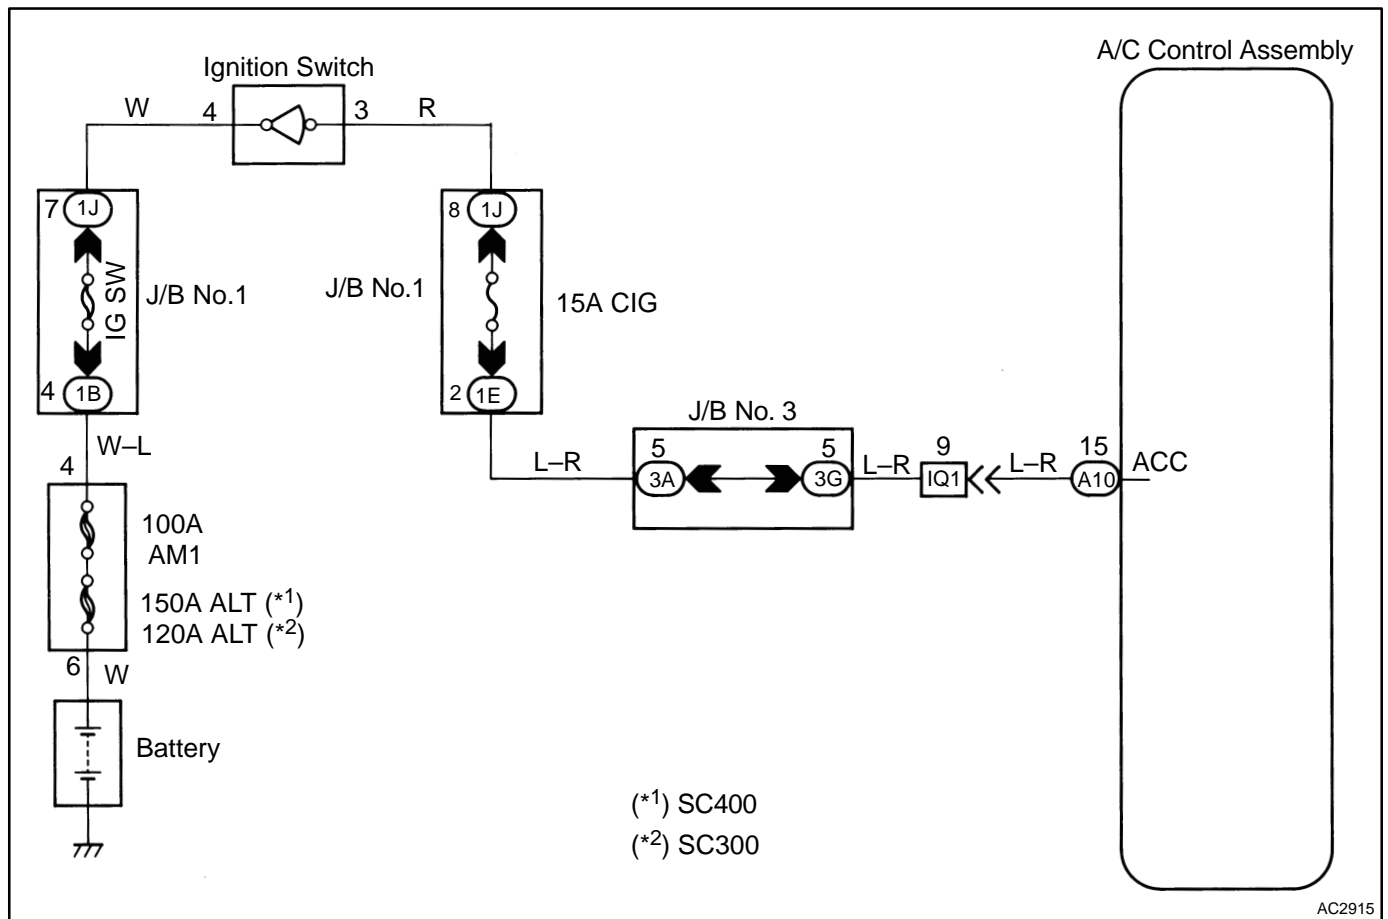


## ACC Power Source Circuit

## CIRCUIT DESCRIPTION

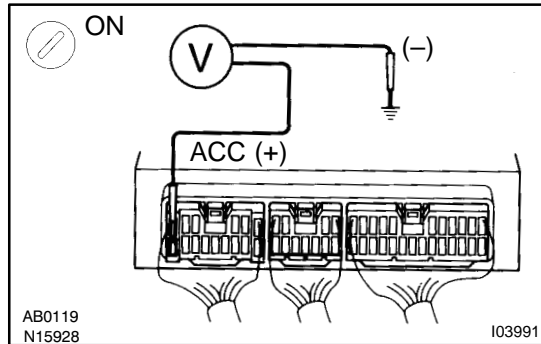
This circuit supplies power to the air conditioning control assembly (contains the A/C control assembly).

## WIRING DIAGRAM



## INSPECTION PROCEDURE

- |   |   |
|---|---|
| 1 | <b>Check voltage between terminal ACC of air conditioning control assembly connector and body ground.</b> |
|---|---|

**PREPARATION:**

- (a) Remove upper console panel.
- (b) Remove A/C control assembly with connectors still connected.
- (c) Turn ignition switch ON.

**CHECK:**

Measure voltage between terminal ACC of air conditioning control assembly connector and body ground.

**OK:**

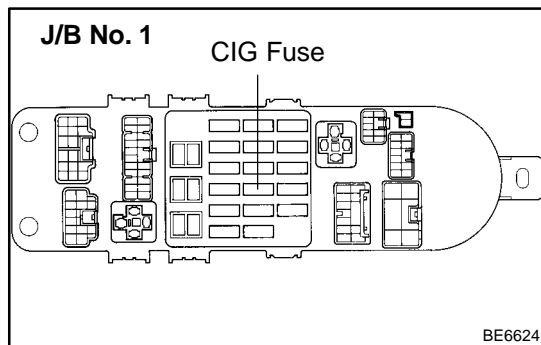
**Voltage: 10 – 14 V**

**OK**

**Proceed to next circuit inspection shown on matrix chart (See page DI-821).**

**NG**

- |   |                        |
|---|------------------------|
| 2 | <b>Check CIG fuse.</b> |
|---|------------------------|

**PREPARATION:**

Remove CIG fuse from J/B No.1.

**CHECK:**

Check continuity of CIG fuse.

**OK:**

**Continuity**

**NG**

**Check for short in all the harness and components connected to the CIG fuse (See attached wiring diagram).**

**OK**

**Check and repair harness and connector between air conditioning control assembly and battery.**