

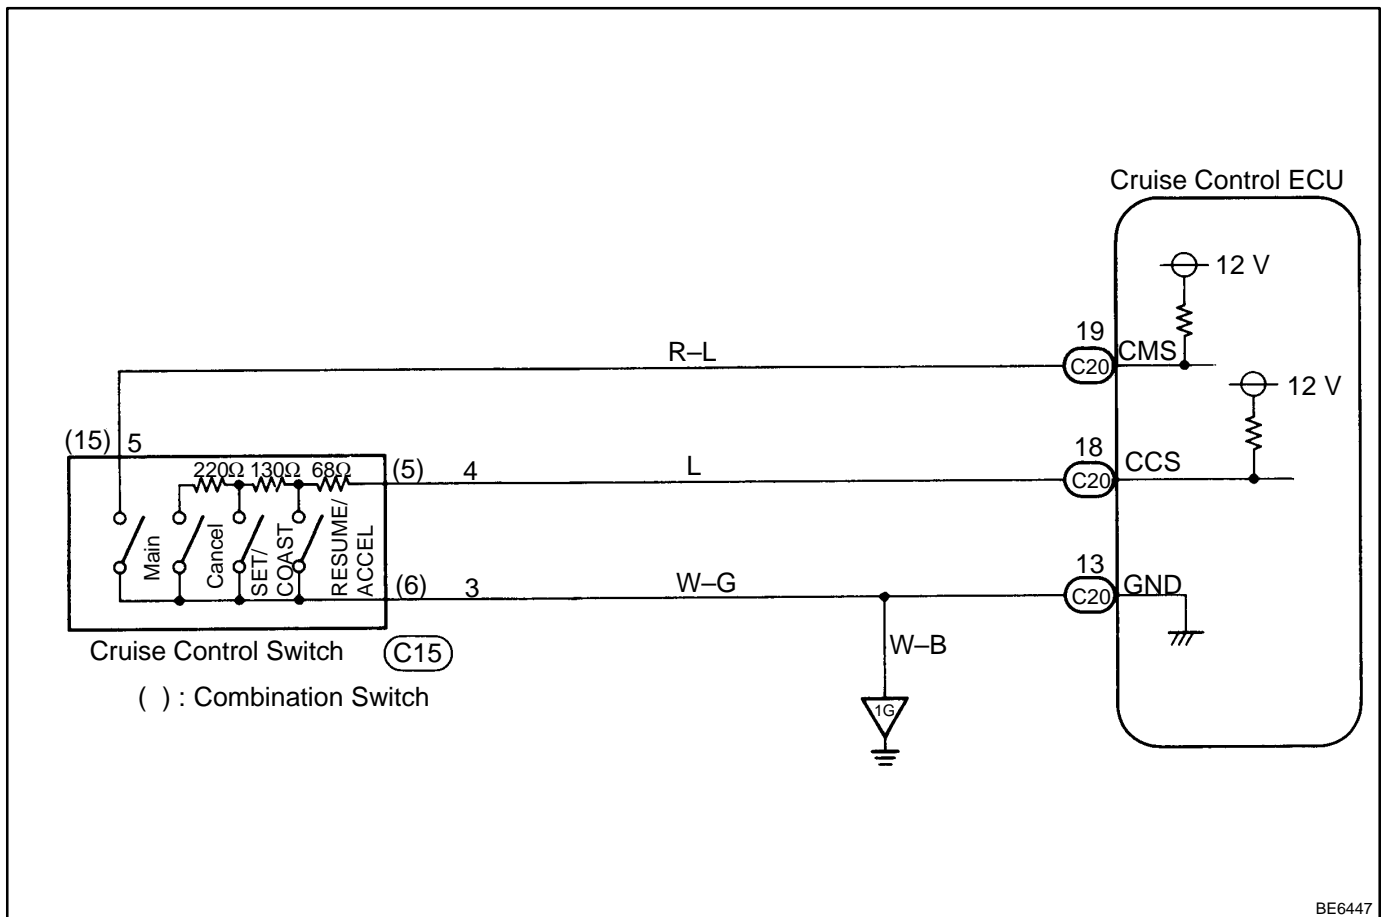
DTC	32	Control Switch Circuit (Cruise Control Switch)
------------	-----------	---

CIRCUIT DESCRIPTION

This circuit carries the SET/COAST, RESUME/ACCEL and CANCEL signals (each voltage) to the ECU.

DTC No.	Detection Item	Trouble Area
32	<ul style="list-style-type: none"> Short in control switch circuit. 	<ul style="list-style-type: none"> Cruise control switch Harness or connector between cruise control ECU and cruise control switch, cruise control switch and body ground Cruise control ECU

WIRING DIAGRAM



INSPECTION PROCEDURE

1 Input signal check.

Input Signal	Indicator Light Blinking Pattern
SET / COAST switch	ON OFF 2 Pulses
RESUME / ACCEL switch	ON OFF 3 Pulses
CANCEL switch	ON OFF SW OFF SW ON

PREPARATION:

See input signal check on page DI-760.

CHECK:

Check the indicator light operation when each of the SET/COAST, RESUME/ACCEL and CANCEL is turned on.

OK:**SET/COAST, RESUME/ACCEL switch**

The signals shown in the table on the left should be output when each switch is ON. The signal should disappear when the switch is turned OFF.

CANCEL switch

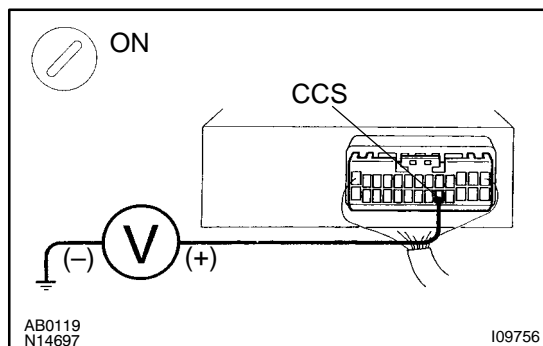
The indicator light goes off when the cancel switch is turned on.

OK

Wait and see.

NG

2 Check voltage between terminals CCS of cruise control ECU connector and body ground.

**PREPARATION:**

- Remove the ECU with connector still connected.
- Turn ignition switch ON.

CHECK:

Measure voltage between terminals CCS of ECU connector and body ground, when each of the SET/COAST, RESUME/ACCEL and CANCEL is turned ON.

OK:

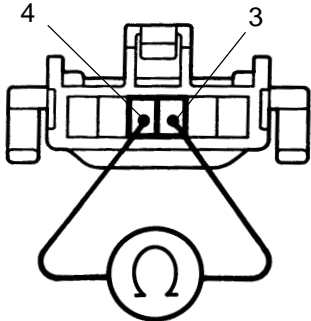
Switch position	Resistance (Ω)
Neutral	10 – 14 V
RES/ACC	0.8 – 3.6 V
SET/COAST	2.5 – 6.2 V
CANCEL	4.3 – 8.7 V

NG

Proceed to next circuit inspection shown on problem symptom table (See page DI-769).

OK

3

Check control switch.


N16045

PREPARATION:

- (a) Remove steering wheel center pad.
- (b) Disconnect the control switch connector.

CHECK:

Measure resistance between terminals 3 and 4 of control switch connector when control switch is operated.

Switch position	Resistance (Ω)
Neutral	∞ (No continuity)
RES/ACC	50 – 80
SET/COAST	180 – 220
CANCEL	400 – 440

NG
Repair control switch.
OK

4

Check harness and connector between cruise control ECU and cruise control switch, cruise control switch and body ground (See page [IN-29](#)).
NG
Repair or replace harness or connector.
OK

5

Input signal check (See step 1).
OK
Wait and see.
NG

Check and replace cruise control ECU (See page [IN-29](#)).