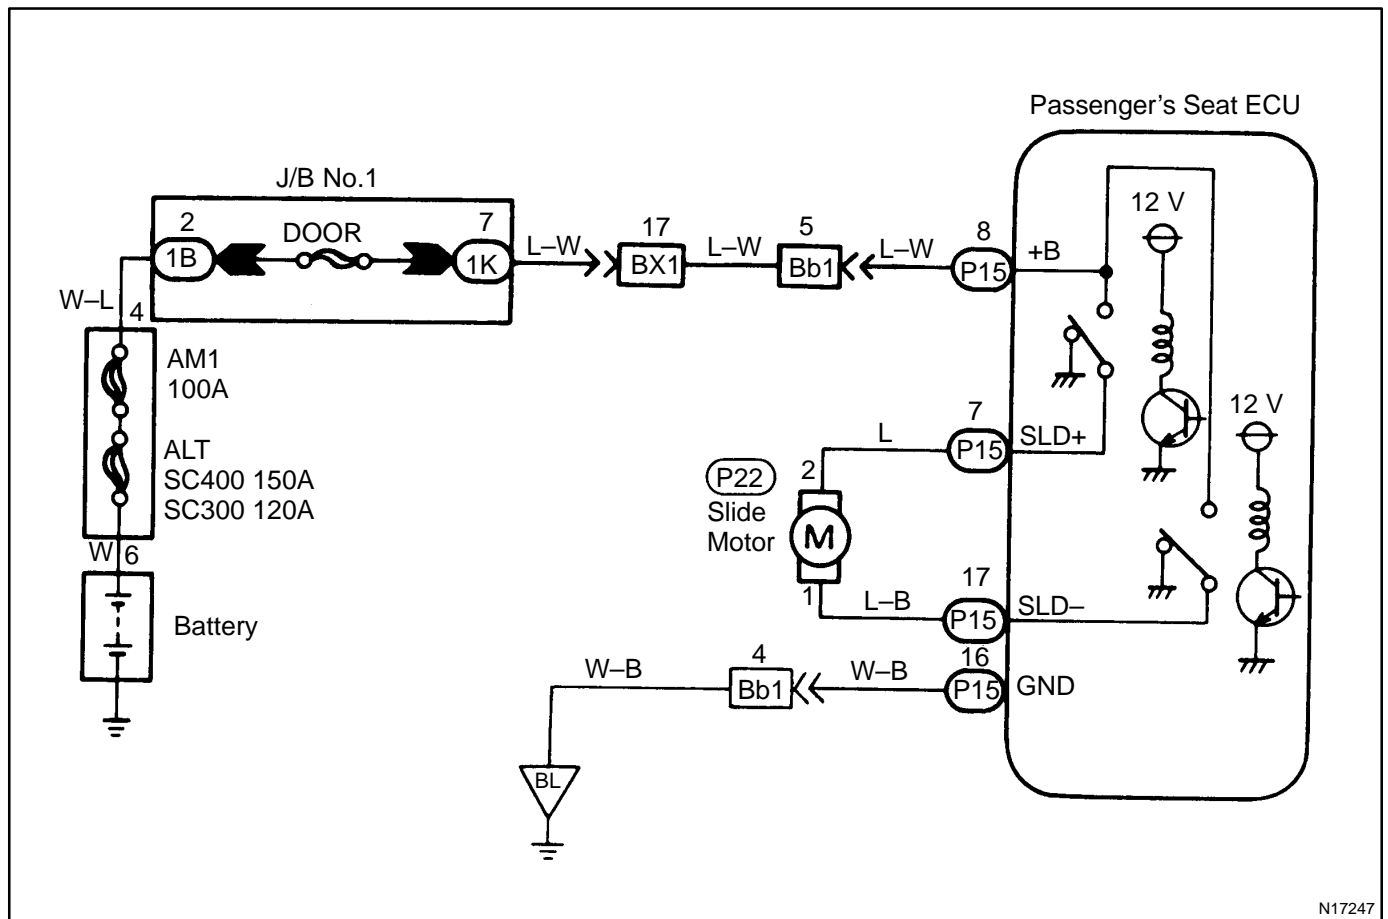


Slide Motor Power Source Circuit

CIRCUIT DESCRIPTION

This is the power source for slide motor.

WIRING DIAGRAM



INSPECTION PROCEDURE

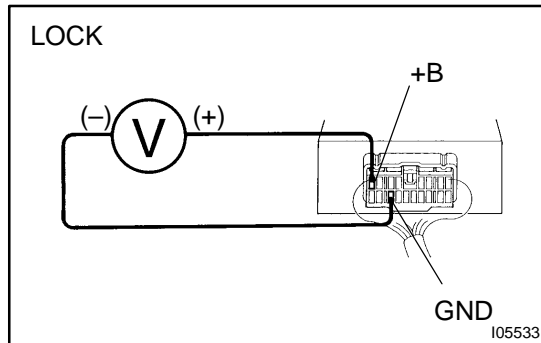
| | |
|---|------------------|
| 1 | Check DOOR fuse. |
|---|------------------|

NG

Check for short in all the harness and components connected to the DOOR fuse and repair them (See attached wiring diagram). *1

OK

2 Check voltage between terminals +B and GND of ECU connector.

**PREPARATION:**

Remove passenger's seat ECU with connectors still connected.

CHECK:

Measure voltage between terminals +B and GND of ECU connector.

OK:

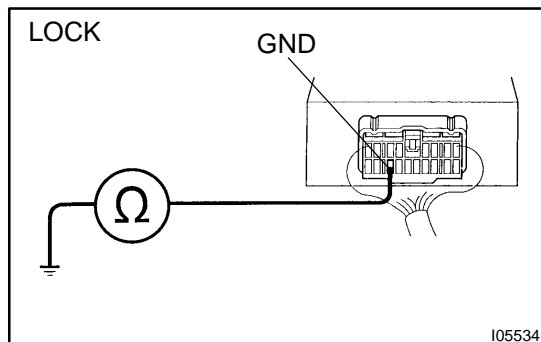
Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on matrix chart (See page DI-633).

NG

3 Check continuity between terminal GND of ECU connector and body ground.

**CHECK:**

Measure resistance between terminal GND of ECU and body ground.

OK:

Resistance: 1 Ω or less

NG

Repair or replace harness or connector.

OK

Check and repair harness or connector between ECU and battery.