


Auto Set Switch Circuit

CIRCUIT DESCRIPTION

This is the main switch for auto operation.
When the switch is off, auto operation is prohibited.


WIRING DIAGRAM

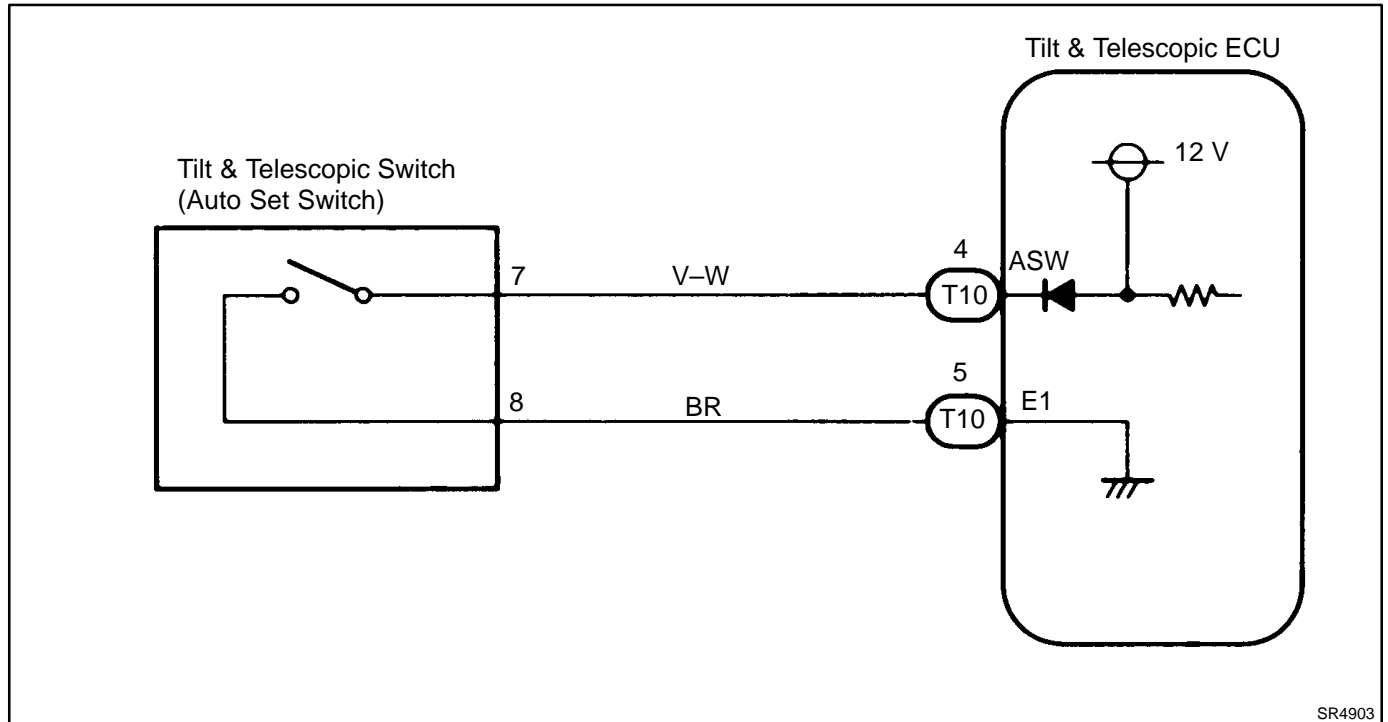

SR4903

INSPECTION PROCEDURE

- 1 Check voltage between terminals ASW and E₁ of ECU connector.

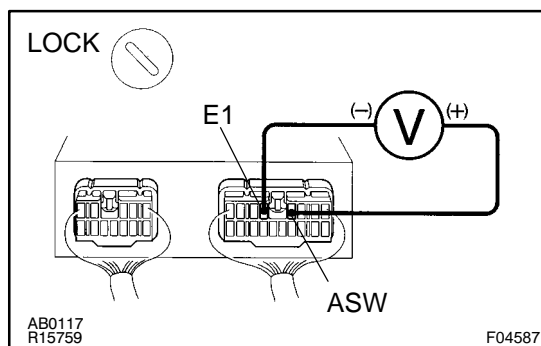

PREPARATION:

Remove ECU with connectors still connected.

CHECK:

Measure voltage between terminals ASW and E₁ of ECU connector when auto switch is ON and OFF.

OK:

Auto Switch	Voltage
ON	10 – 14 V
OFF	Below 1 V


OK

Proceed to next circuit inspection shown on matrix chart (See page [DI-498](#)).

NG

2

Check auto set switch.

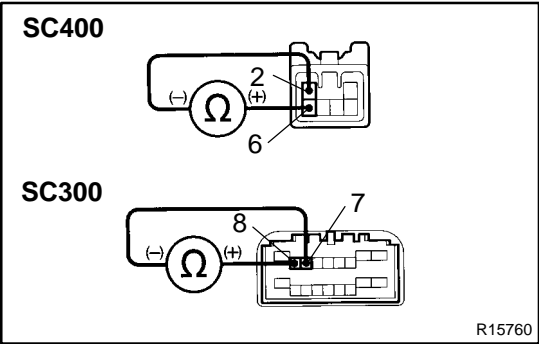

PREPARATION:

Disconnect combination switch connector.

CHECK:

Measure resistance between terminals 2 (7) and 6 (8) of combination switch connector when auto switch in ON and OFF.
(): SC 300.

OK:

Auto Switch	Resistance
ON	1 MΩ or higher
OFF	Continuity

NG

Replace tilt & telescopic switch.

OK

3

Check harness and connector between ECU and tilt & telescopic switch
(See page [IN-29](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ECU.