

Starter Relay Circuit


CIRCUIT DESCRIPTION

When the theft deterrent system is activated, contact "a" in the ECU becomes open, creating an open circuit in terminal SRLY circuit and making the starter inoperative (starter cut).

In this condition, if one of the following operations is done, the contact "a" in the ECU is grounded, thus canceling the starter cut:

- (1) Unlock the LH or RH door with key.
- (2) Unlock the doors with the wireless door lock control system.


WIRING DIAGRAM

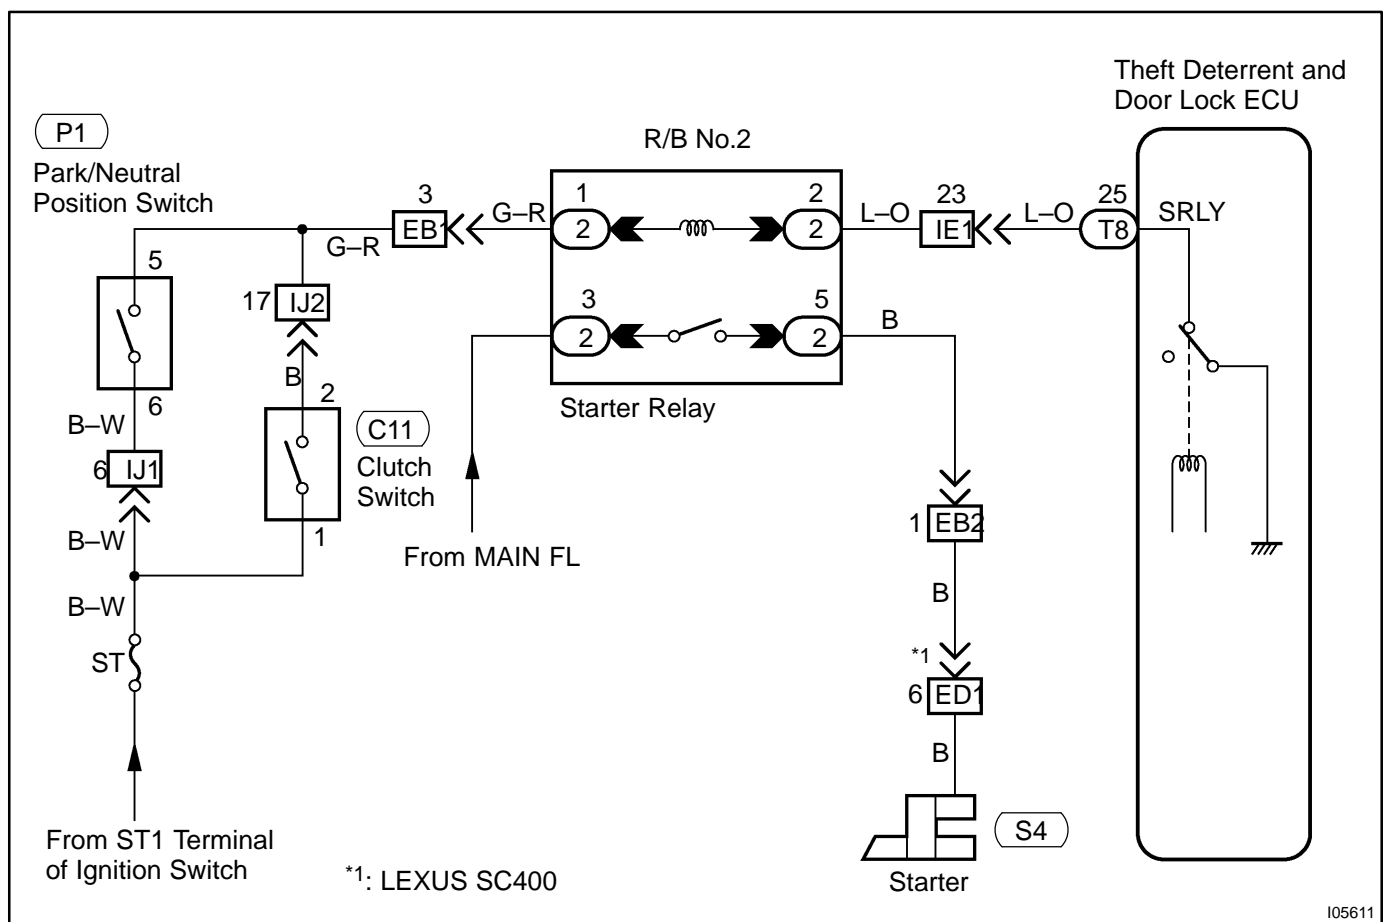

I05611

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminal SRLY of ECU connector and body ground. |
|---|--|

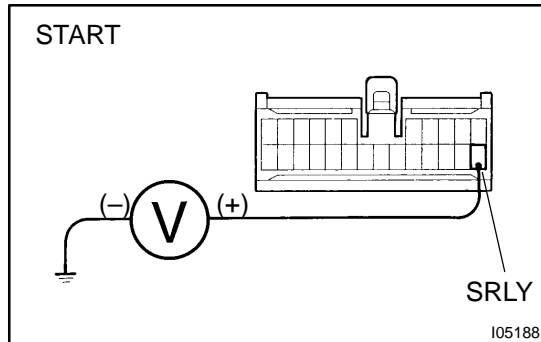**PREPARATION:**

- (a) Disconnect the ECU connectors.
- (b) Transmission in neutral position.

CHECK:

Measure voltage between terminal SRLY of ECU connector and body ground, when ignition switch is turned to ST position.

OK:

Voltage: 10 – 14 V

OK

Check and replace ECU.

NG

Check and repair harness and connector between starter relay and ECU (See page [IN-29](#)).